



YH2200

Pos.	Codice	Descrizione	Q.tà
1	04.04.01.03.04.006	HEXAGON SOCKET HEAD CAP SCREW ST4.8x13	4
2	04.01.54.505	FRONT HANDLE	1
3	04.10.06.14.010	DAMPER SPRING	1
4	04.04.01.03.04.007	HEXAGON SOCKET HEAD CAP SCREW ST4.2x16	
5	04.01.01.239	BOTTOM HALF STARTER COVE	1
6	04.01.01.238	TOP HALF STARTER COVE	1
7	04.01.32.012	NYLON SHEATH	1
8	04.01.40.018	NYLON ROPE	1
9	04.01.02.099	STARTER KNOB	1
10	04.01.41.006	STARTER SPRING PLATE	1
11	04.10.06.03.008	STARTER SPRING	1
12	04.01.09.220	STARTER REEL(BIG)	1
13	04.10.06.28.002	RECOIL SPRING(SMALL)	1
14	04.01.09.013	STARTER REEL(SMALL)	1
15	04.04.02.04.003	WASHER	1
16	04.04.01.06.002	SCREW ST4.8x16	1
17	04.01.58.015	FAN COVER	1
18	04.04.04.01.032	NUT*M8 (THICKEN)	1
19	04.05.02.037	FLY WHEEL	1
20	04.02.11.001	VENT	1
21	04.04.01.04.02.210	HEXAGON SOCKET HEAD CAP SCREW M4x20	3
22	04.04.02.02.002	SPRING WASHER	5
23	04.04.02.04.002	PLAIN WASHER $\varphi 4 \times \varphi 9 \times 0.8$	3
24	04.10.06.14.009	DAMPER SPRING	2
25	04.01.43.100	ENGINE SUPPORT	1
26	04.04.01.03.04.009	HEXAGON SOCKET HEAD CAP SCREW ST4.2x12	5
27	04.10.06.28.003	DAMPER SPRING	1
28	04.06.05.006	NOZZLE PLATE	1
29	04.04.01.03.04.008	HEXAGON SOCKET HEAD CAP SCREW ST4.2x10	5
30	04.01.43.101	ENGINE SUPPORT COVER	1
31	04.02.08.005	OIL SEAL	2
32	04.03.53.05.002	BALL BEARING	2
33	04.07.01.04.096	LEFT CRANKCASE	1
34	04.06.03.06.026	CRANKCASE GASKET	1
35	04.03.12.081	CRANKSHAFT COMP	1
36	04.04.05.001	KEY 3*10	1
37		PIN $\varphi 4 \times 10$	2
38	04.07.01.03.165	RIGHT CRANKCASE	1
39	04.04.01.04.02.218	HEXAGON SOCKET HEAD CAP SCREW M4x16	9
40	04.02.03.006	OIL PUMP NOZZLE	1
41	04.03.15.015	OIL PUMP	1
42	04.04.01.04.02.212	HEXAGON SOCKET HEAD CAP SCREW M4x12	4
43	04.01.15.008	OIL PUMP COVER	1
44	04.06.14.026	WORM WASHER $\varphi 10.1 \times \varphi 17 \times 1.5$	1
45	04.01.16.011	WORM	1
46	04.03.54.04.006	CLUTCH NEEDLE	1

YH2200

Pos.	Codice	Descrizione	Q.tà
47	04.03.04.040	CLUTCH DRUM 3/8" EP	1
47	04.03.04.040C	CLUTCH DRUM 1/4" EP	1
48	04.04.02.04.047	CLUTCH WASHER	1
49	04.03.01.057	CLUTCH	1
50	04.04.01.06.002	COUNTERSUNK FLAT PHILLIPS HEAD TAPPING SCREW	1
51	04.04.01.03.04.009	HEXALOBULAR SOCKET PAN HEAD TAPPING SCREW	7
52	04.01.17.030	BRAKE SPRING COVER	1
53	04.04.03.040	PIN	2
54	04.10.06.06.023	BRAKE BAND	1
55	04.01.17.031	BRAKE BAND BUFFER BLOCK	1
56	04.10.06.15.004	BRAKE SPRING	1
57	04.06.07.005	BRAKE LEVER(SUB)	1
58	04.01.17.032	BRAKE LEVER CONNECTING BLOCK	1
59	04.04.03.048	PIN $\varphi 3 \times 12$	1
60	04.06.06.012	TENSIONER COVER	1
61	04.04.09.046	CHAIN ADJUSTING SCREW	1
62	04.04.09.047	CHAIN ADJUSTING NUT	1
63	04.01.68.002	ADJUSTIN GEAR COVER	1
64	04.03.35.016	CHAIN ADJUSTING DRIVING GEAR	1
65	04.03.35.017	CHAIN ADJUSTING DRIVEN GEAR	1
66	04.03.30.003	BRAKE LEVER(MAIN)	1
67	04.06.08.004	BRAKE LEVER FIX SLEEVE	1
68	04.01.07.118	TOP HALF BREKE COVER	1
69	04.04.04.01.035	NUT*M8	2
70	04.01.07.119	BOTTOM HALF STARTER COVE	1
71	04.06.03.05.026	CYLINDER GASKET	1
72	04.03.08.075	PISTON	1
73	04.04.02.07.101	CIRCLIP	2
74	04.03.19.008	ANTI-WEAR GASKET	2
75	04.03.10.042	PISTON PIN	1
76	04.03.54.04.008	PISTON NEEDLE	1
77	04.03.09.056	PISTON RING	2
78	04.04.02.04.025	PLAIN WASHER $\varphi 4 \times \varphi 10 \times 0.5$	2
79	/	GROUND LINE	1
80	/	OFF LINE	1
81	04.05.01.249	INGITION	1
82	04.05.03.012	SPARK PLUG	1
83	04.03.13.145	CYLINDER	1
84	04.06.03.07.020	MUFFLER GASKET	1
85	04.06.09.01.099	MUFFLER	1
86	04.04.02.02.004	SPRING WASHER	3
87	04.04.02.04.005	PLAIN WASHER $\varphi 5 \times \varphi 9 \times 0.5$	3
88	04.04.01.04.02.351	HEXAGON SOCKET HEAD CAP SCREW M5*25	3
89	04.06.0303.020	INTAKE PIPE GASKET	1
90	04.02.02.036	INLET PIPE	1
91	04.06.08.003	INLET PIPE RING	1

YH2200

Pos.	Codice	Descrizione	Q.tà
92	04.03.07.128	CARBURETOR	1
93	04.06.16.063	AIR FILTER SUPPORT	1
94	04.04.01.03.05.001	HEXAGON SOCKET HEAD CAP SCREW M5*40	2
95	04.01.24.027	AIR FILTER	1
96	04.01.25.001	BALANCER	1
97	04.02.04.108	FUEL PIPE PLATE	1
98	04.01.67.005	ELBOW CONNECTOR	1
99	04.02.02.037	CARBURETOR INLET PIPE	1
100	04.01.67.004	OIL PIPE CONNECTION	2
101	04.02.03.107	OIL VACUOLE OUTLET PIPE	1
102	04.02.02.038	CARBURETOR INLET PIPE (EXTENDED)	1
103	04.03.21.012	FUEL FILTER	1
104	04.10.06.12.013	CLIP Φ 4.5	1
105	04.02.03.108	FUEL FILTER INLET PIPE	1
106	04.10.06.17.004	TUBING PROTECTION SPRING	1
107	04.10.06.12.011	STEEL WIRE ELASSTIC HOOP	1
108	04.01.53.002	OIL VACUOLE	1
109	04.01.08.073	FRONT HANDLE	1
110	04.10.06.11.003	TRIGGER SPRING	1
111	04.01.27.078	TRIGGER	1
112	04.10.06.10.014	THROTTLE ROD	1
113	04.01.26.076	TRIGGER CONTROL ARM	1
114	04.01.08.074	FRONT HANDLE COVER	1
115	04.05.04.001	SWITCH (ON/OFF)	1
116	04.02.20.009	HANDLE SCREW PLUG COVER	1
117	04.06.23.002	AIR FILTER COVER LOCK	1
118	04.01.64.043	SPARK PLUG COVER	1
119	04.06.23.004	POTHOOK for SPARK PLUG COVER	1
120	04.02.06.034	AIR INTAKE RUBBER SLEEVE	1
121	04.01.03.242	AIR FILTER COVER	1
122	04.06.23.005	POTHOOK for ENGINE	1
123	04.06.30.002	FRONT DAMPER FLANGE	1
124	04.01.08.075	FRONT DAMPER	1
125	04.10.06.09.007	FRONT DAMPER SPRING	1
126	04.04.01.19.001	STEPPED TAPPING SCREW	1
127	04.06.04.005	WOODEN TEETH	1
128	04.01.18.005	CHAIN CATCHER	1
129	04.04.01.10.014	TAPPING SCREW ST5.5*13	1
130	04.01.11.064	TANK CAP	2
131	04.02.07.212	TANK CAP SEALRING	2
132	04.01.13.005	OIL PAT	2
133	04.02.07.212	OIL PUMP INLET PIPE	1
134	04.03.20.008	OIL FILTER	1
135	04.08.02.012	BAR COVER	1
136	04.08.01.03.004	3/8LP 10"GUIDE BAR	1
136	04.08.01.03.004C	1/4 10"GUIDE BAR	1

YH2200

Pos.	Codice	Descrizione	Q.tà
137	04.08.03.03.007	3/8LP 10"CHAIN	1
137	04.08.03.03.007C	1/4 10"CHAIN	1