



Lista ricambi potatore PHT950 e PHT1550

REF.NO	PARTS CODE	DESCRIPTION	QTY
1	R034-000900	LEVER,CLAMP	1
2	K210-060000	WASHER M6	3
3	K207-060209	WASHER 6×15×2.0	3
4	A224-145003	ANGLE ADJUSTER 135°	1
5	K150-060000	NUT M6	2
6	A224-141003	HANDLE	1
7	K054-060220	BOLT M6×22	2
8	K162-050000	NUT M5	2
9	A052-172004	LABEL	1
10	K016-040080	SCREW	2
11	A196-112004	COVER	1
12	K280-006000	SNAP RING	1
13	A023-500444	BEVEL GEAR	1
14	K282-026000	SNAP RING	1
15	K354-060000	BEARING 6000	1
16	A224-148002	CASING A	1
17	R055-000100	GREASE FITTING	3
18	A024-000053	CRANK SHAFT	1
19	K283-028000	SNAP RING	1
20	A224-128009	BLADE	2
21	K353-006080	BEARING 608Z	1
22	A224-154004	PACKING	1
23	A224-153003	COVER	1
24	A028-200009	BLADE COVER	1
25	K081-040121	BOLT M4×12	4
26	A224-112004	FELT	1
27	A040-002009	SCREW L19	1
28	008-250	WASHER	4
29	A040-001009	SCREW L17	3
30	K164-060000	NUT M6	4
31	K031-050200	SCREW M5×20	2
32	A224-107003	GUIDE PLATE	1
33	A224-131004	PLATE	1
34	A224-108004	PLATE	1
35	K054-060120	BOLT M6×12	2
36	K354-006080	BEARING 608 2RS	1
37	K282-022000	SNAP RING	1
38	A224-130004	GEAR SHAFT	1
39	K440-P41000	O-RING P41	1
40	K282-026000	SNAP RING	1
41	K354-060000	BEARING 6000	1
42	A224-161000	CASING D	1
43	K200-050000	WASHER 5×10×1.0	2
44	K010-050100	SCREW M5×10	1
45	K054-050250	BOLT M5×25	1
46	A224-110004	JOINT	1
47	A196-109004	GEAR SHAFT B	1
48	K352-069000	BEARING 6900RS	2
49	K282-022000	SNAP RING	1
50	A023-500434	BEVEL GEAR	1
51	K280-006000	SNAP RING	1
52	A196-114004	PACKING	1
53	A196-113004	COVER	1
54	K016-040080	SCREW M4×8	2