

# PARTS LIST

BC4322RS

## CONTENTS


1. PARTS KIT .....	1
2. MAIN BODY .....	3
3. GEAR CASE.....	5
4. ENGINE .....	7
5. CARBURETOR, FUEL TANK .....	11
6. ACCESSORIES .....	13

2023. 02.




P/N 525399


BC4322RS  
1. PARTS KIT

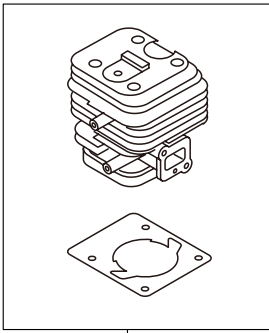


1

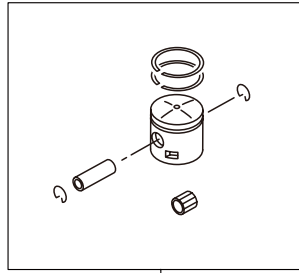

2

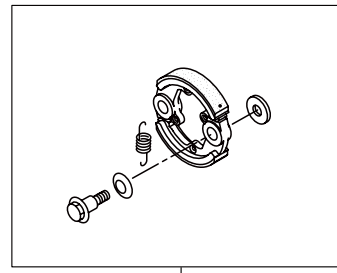


3

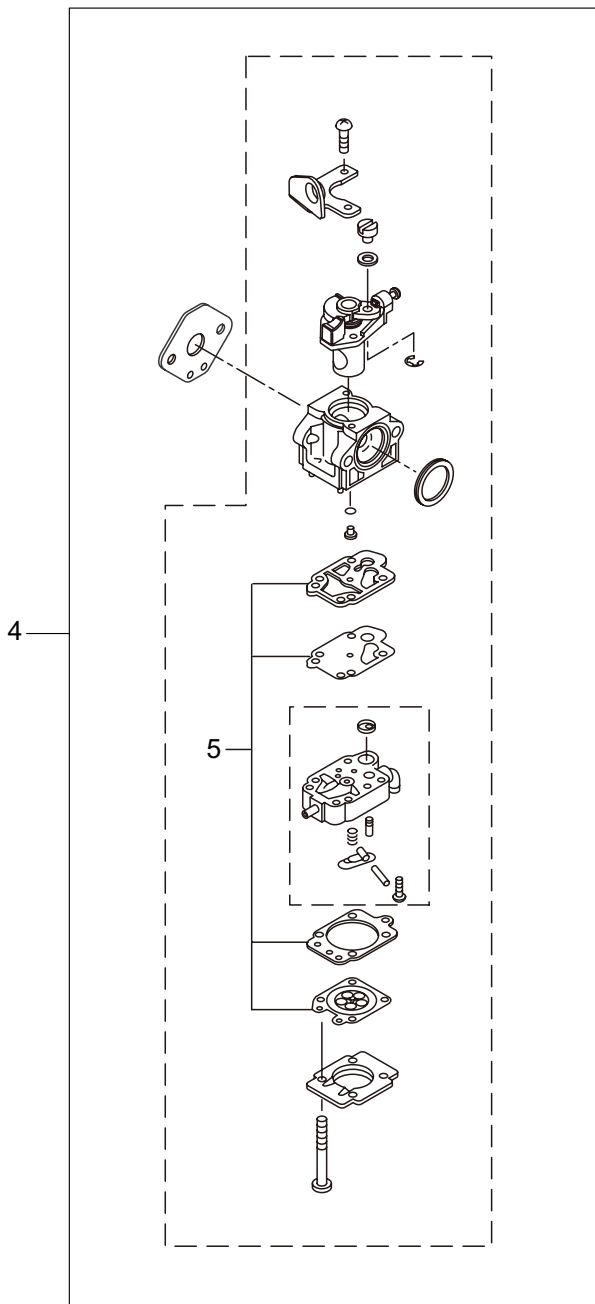

4


5

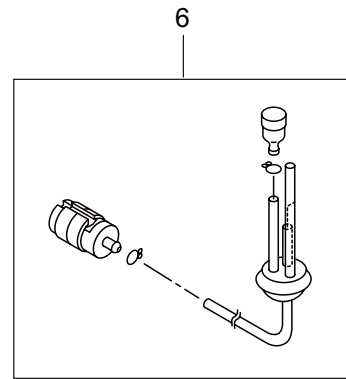

6


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	246913	Cylinder Kit	1	
1-2	246914	Piston Kit	1	
1-3	246912	Clutch Kit	1	
1-4	246916	Carburetor Kit	1	Incl.5
1-5	246918	Carburetor Parts Kit	1	
1-6	246915	Hose Kit	1	

BC4322RS  
2. MAIN BODY

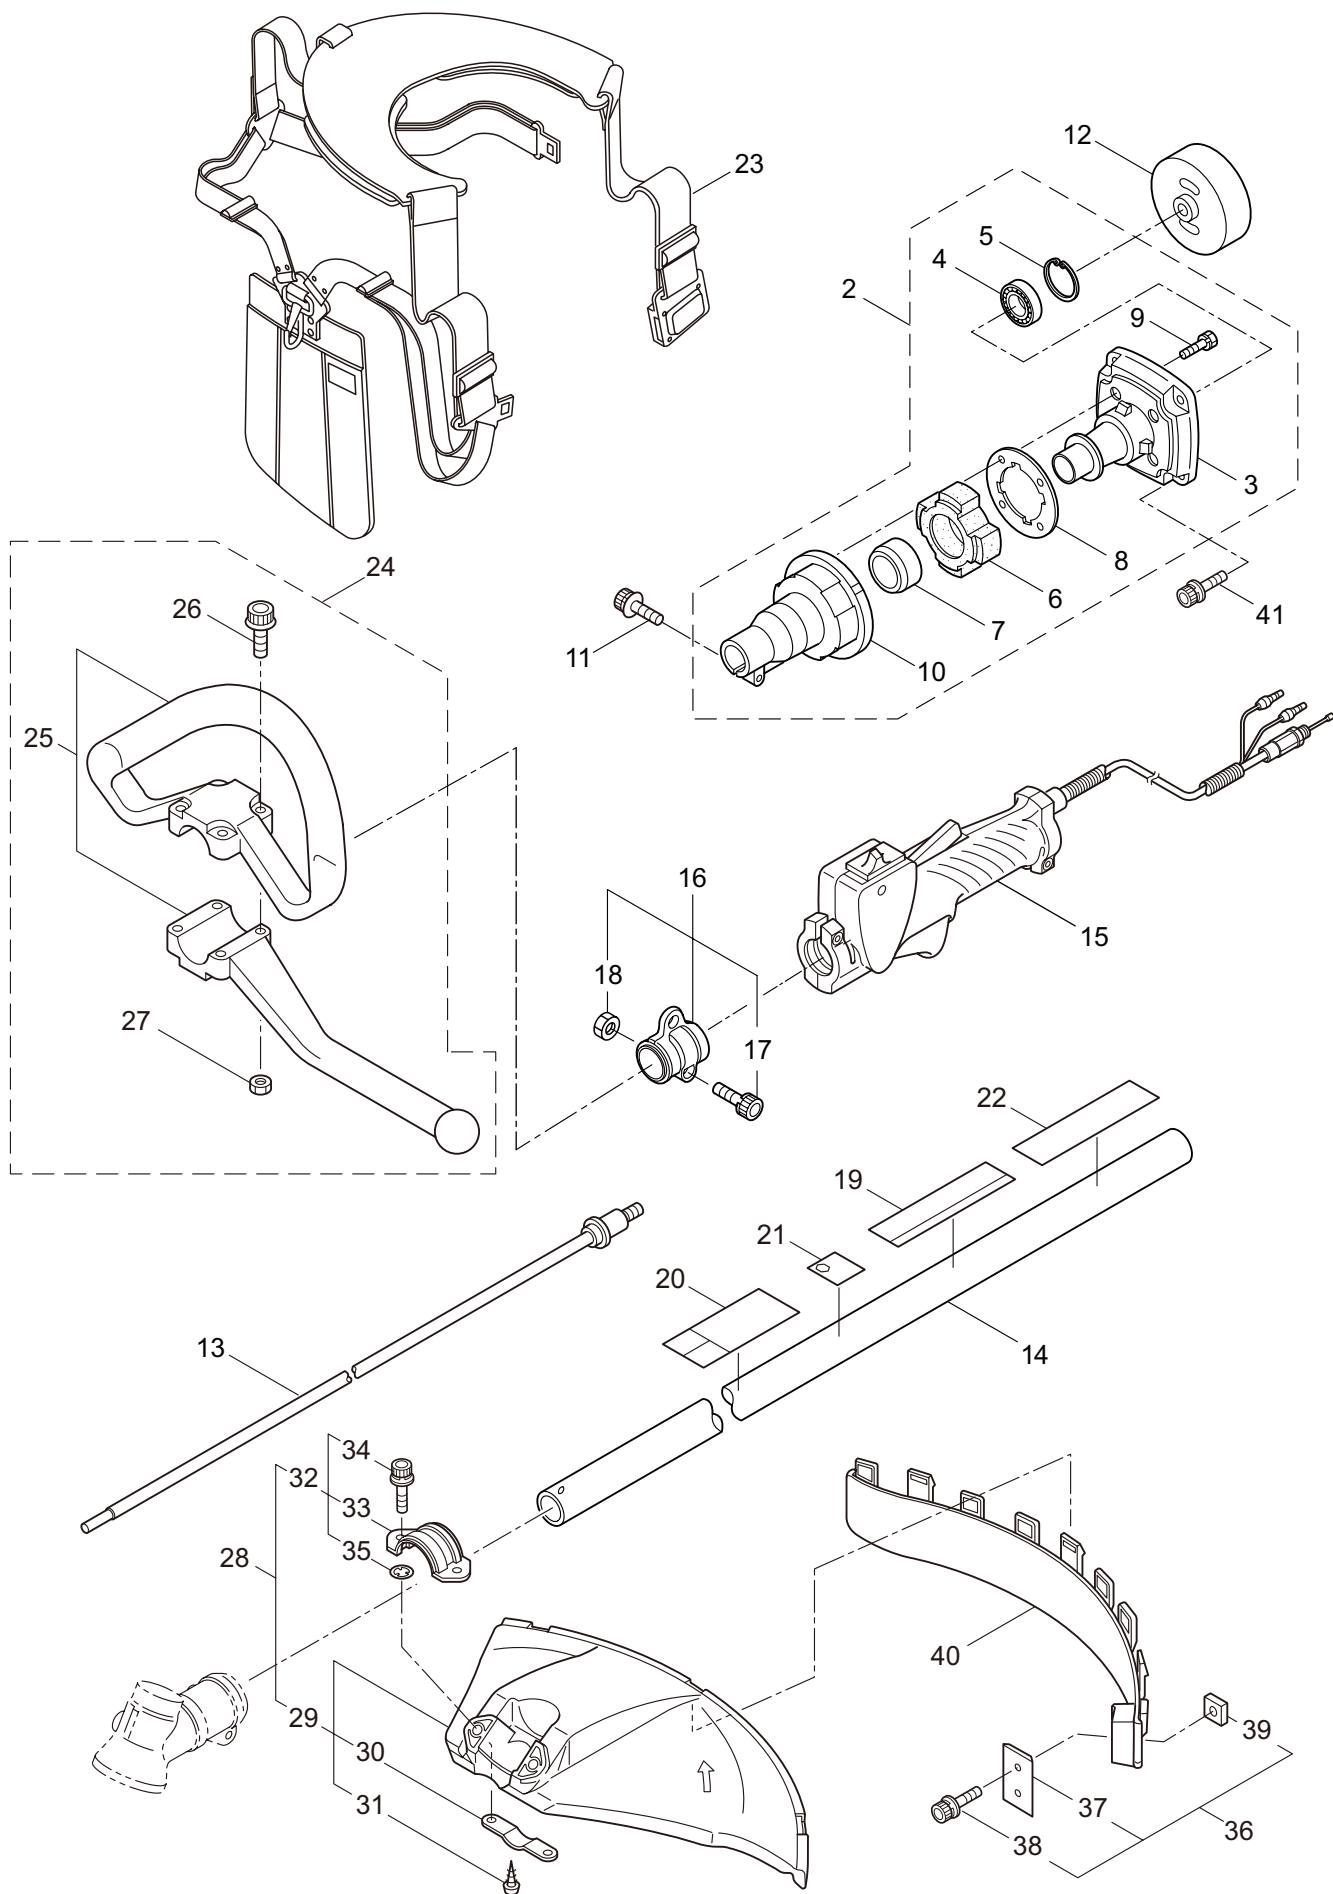


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	365116	BC4322RS	1	
2-2	222543	Clutch Case Ass'y	1	Incl.3-10
2-3	222544	Bearing Case	1	
2-4	012649	Bearing	1	#6201ZZ
2-5	016732	Snap Ring	1	#32
2-6	217045	Buffer (A)	1	
2-7	217046	Buffer (B)	1	
2-8	217047	Washer	1	
2-9	092033	Screw	4	M5x15
2-10	222370	Driveshaft Tube Adapter	1	
2-11	217134	Bolt	1	M6x30
2-12	222546	Clutch Drum	1	
2-13	222522	Driveshaft Ass'y	1	
2-14	224129	Driveshaft Tube	1	
2-15	231143	Throttle Trigger	1	
2-16	234696	Hanging Bracket Ass'y	1	Incl.17,18
2-17	232700	Bolt	1	M5x25
2-18	126993	Nut	1	M5
2-19	244238	Label	1	BC4322RS
2-20	223188	Label	1	
2-21	228207	Label	1	
2-22	243344	Label	1	MADE IN JAPAN
2-23	234345	Hanging Strap Ass'y	1	
2-24	232104	Loop Handle Ass'y	1	Incl.25-27
2-25	226462	Loop Handle	1	
2-26	215608	Cap Screw	4	M5x30x16
2-27	081027	Nut	4	M5
2-28	232092	Safety Cover Ass'y	1	Incl.29-35
2-29	231262	Safety Cover Ass'y	1	Incl.30,31
2-30	237364	Threaded Bracket	1	
2-31	221580	Screw	1	4x8
2-32	232093	Bracket Ass'y	1	Incl.33-35
2-33	223179	Bracket	1	
2-34	220632	Cap Screw	2	M6x30
2-35	231704	Washer	2	6x13xt1.0
2-36	231882	String Cutter Ass'y	1	Incl.37-39
2-37	230747	String Cutter	1	
2-38	261250	Cap Screw	1	M5x20
2-39	228325	Nut	1	
2-40	230748	Cover Extention	1	
2-41	219113	Cap Screw	4	M6x20

BC4322RS  
3. GEAR CASE

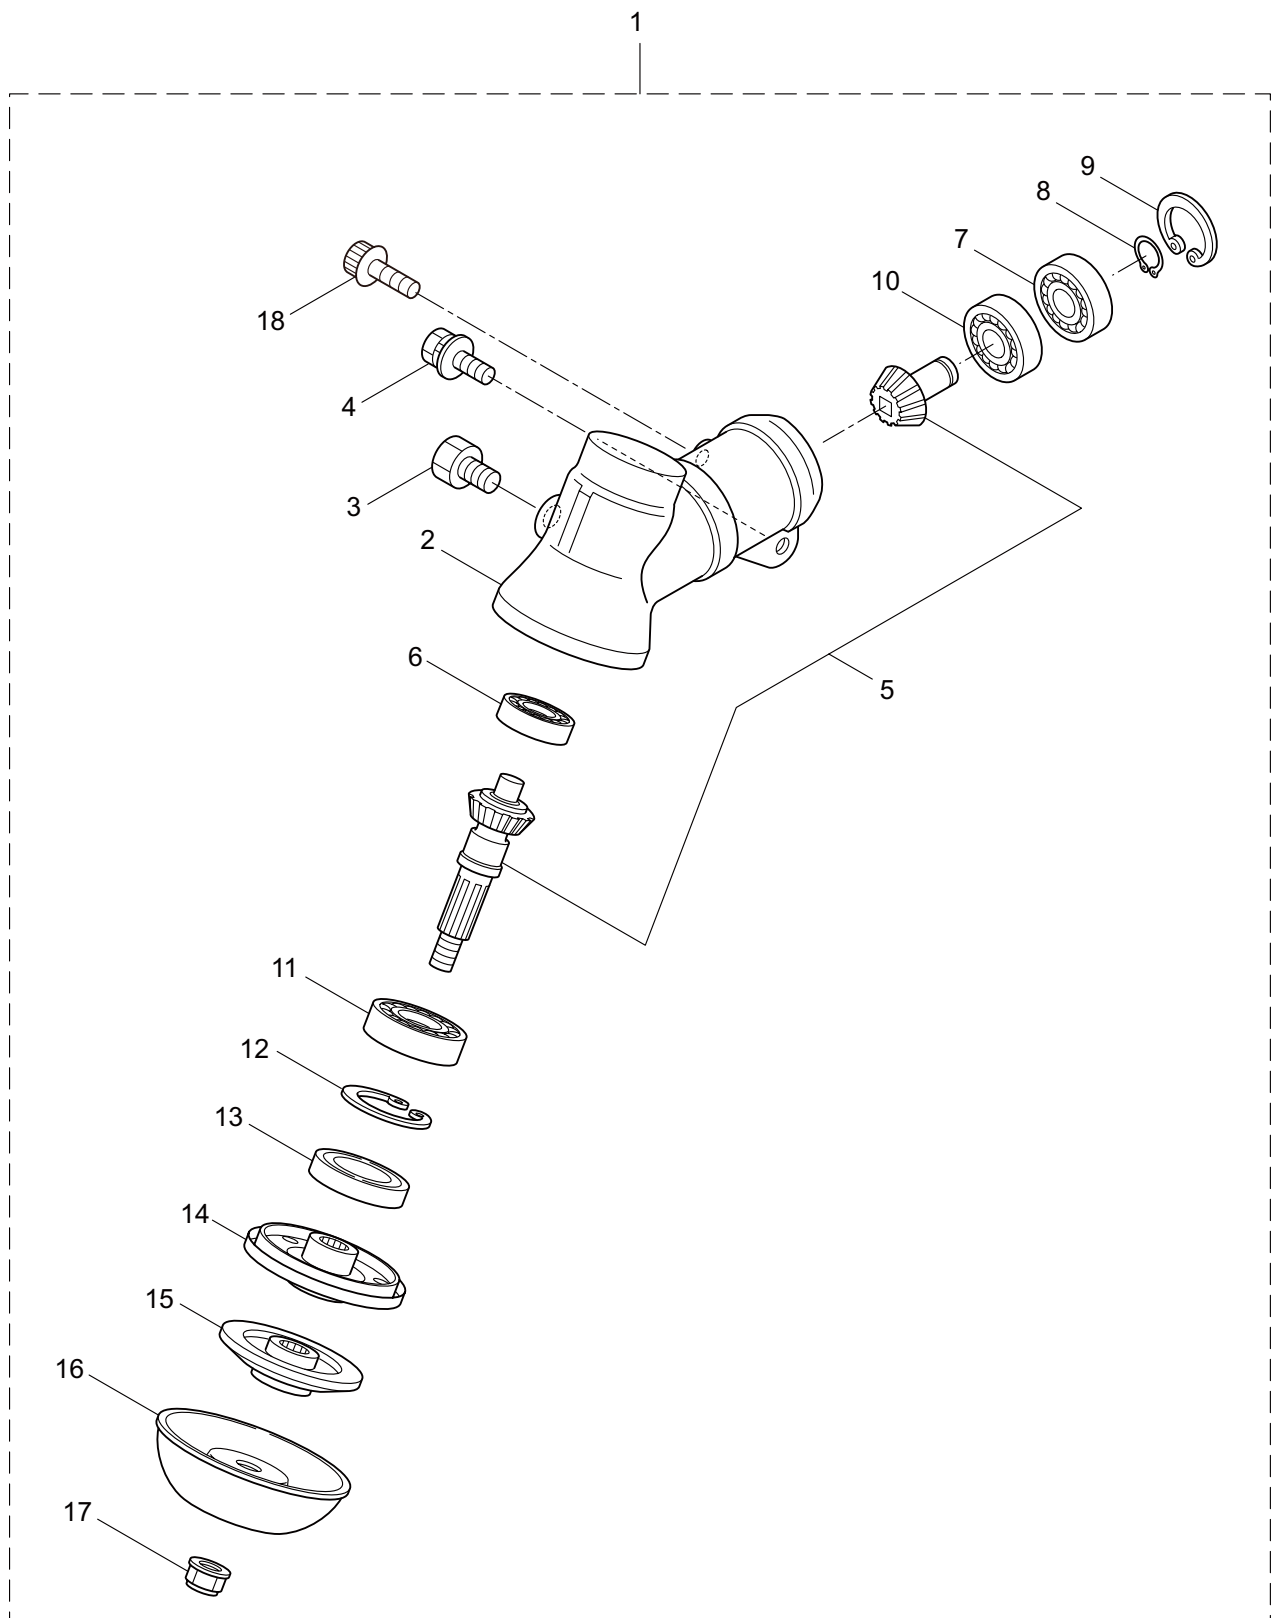

Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	234837	Gearcase Ass'y	1	Incl.2-18
3-2	232850	Gearcase	1	
3-3	234109	Bolt	1	M8x8
3-4	217134	Bolt	1	M6x30
3-5	234349	Gear Set	1	
3-6	014490	Bearing	1	#6000
3-7	106933	Bearing	1	#6000Z
3-8	014210	Snap Ring	1	#10
3-9	054676	Snap Ring	1	#26
3-10	014490	Bearing	1	#6000
3-11	012544	Bearing	1	#6202
3-12	012380	Snap Ring	1	#35
3-13	232049	Oil Seal	1	D21355
3-14	232322	Bracket A Ass'y	1	
3-15	232052	Bracket B	1	
3-16	230849	Stabilizer	1	
3-17	232920	Nut	1	M10x1.25
3-18	217135	Bolt	1	M6x10


BC4322RS  
4. ENGINE

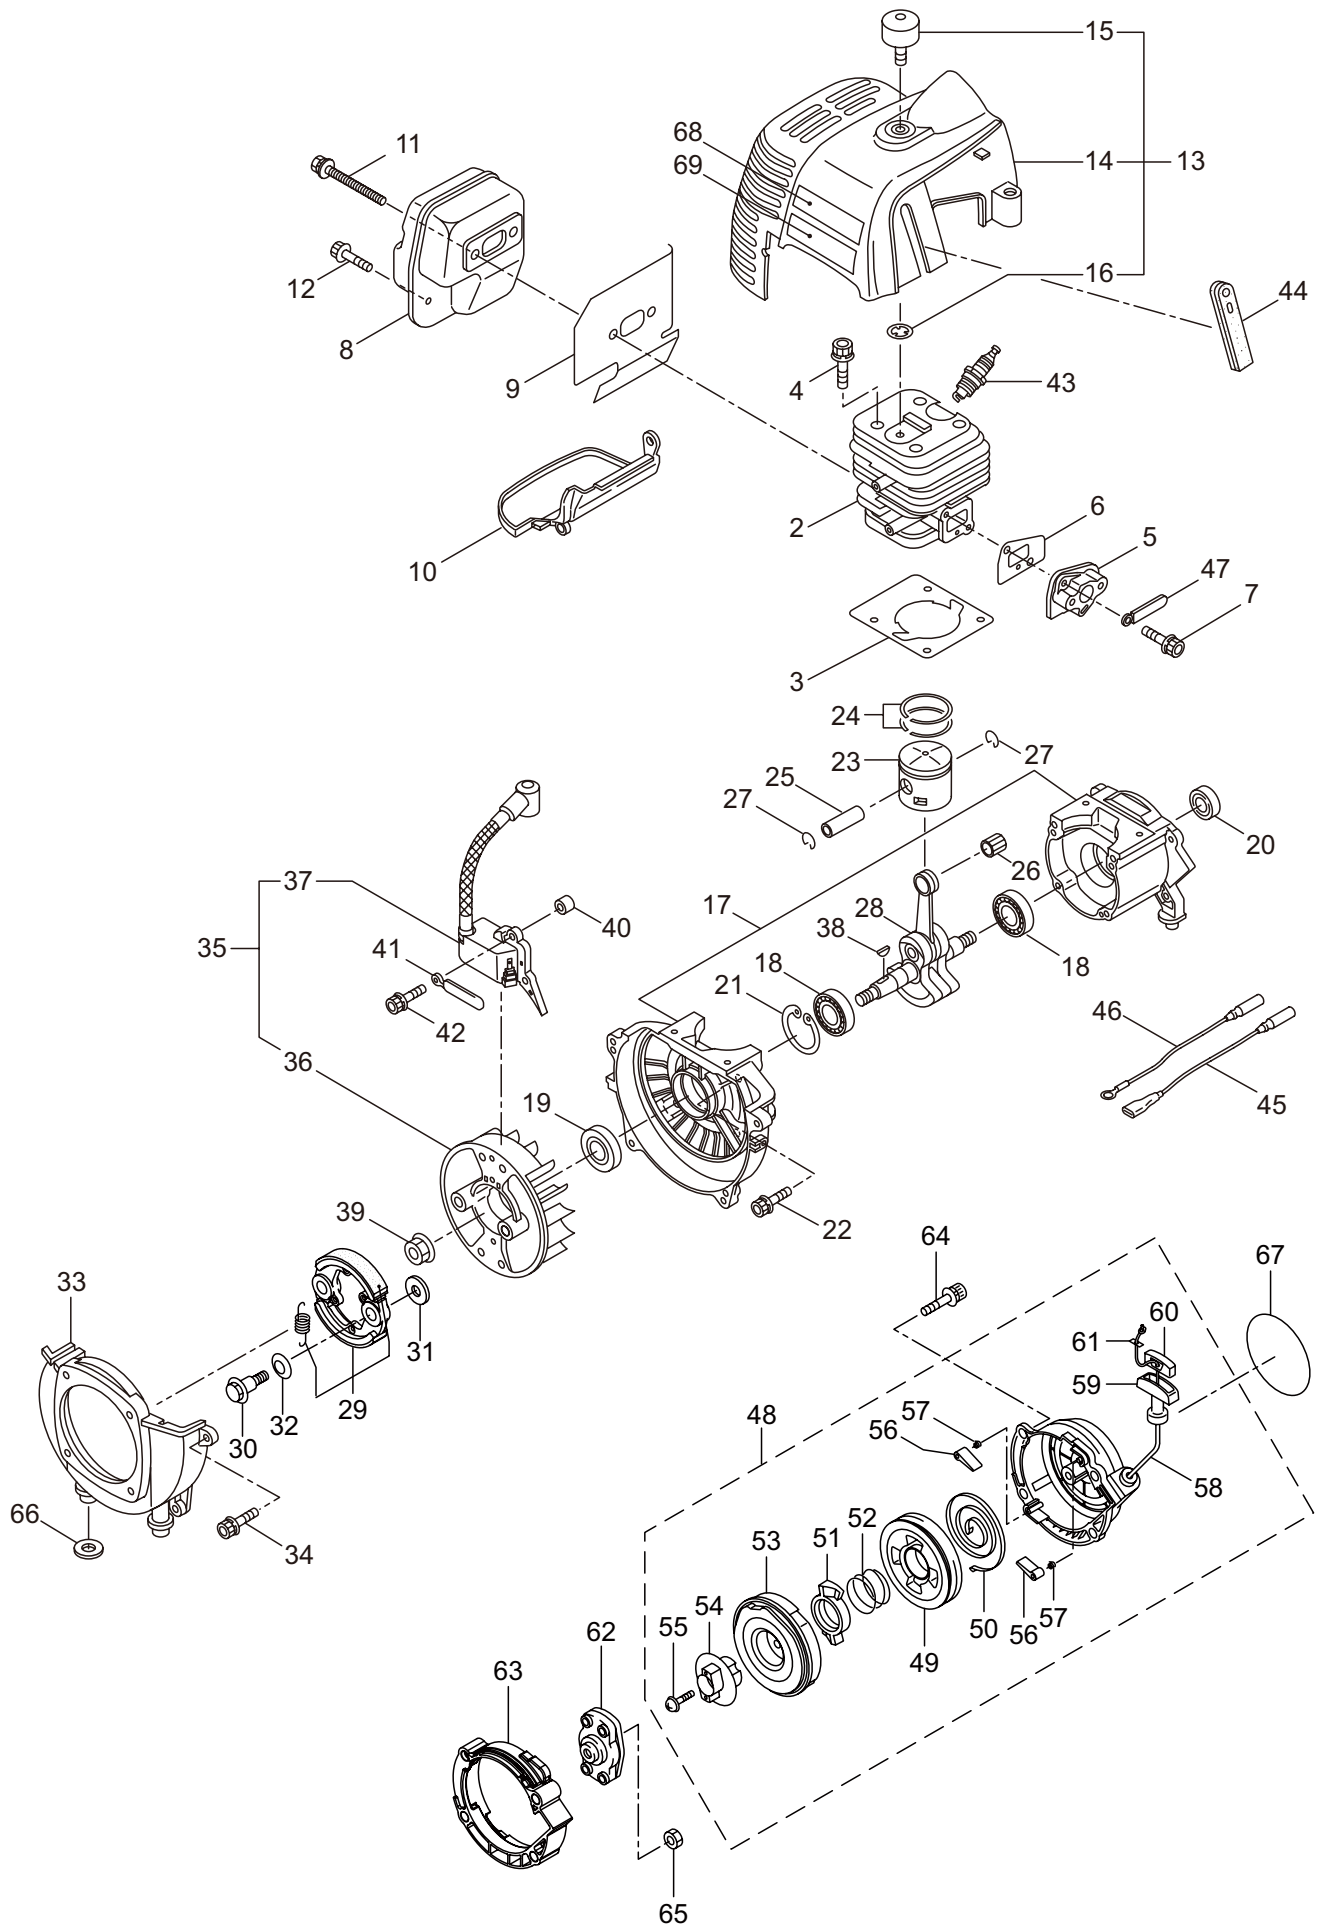



Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	875708	Engine	1	CE420/42
4-2	246493	Cylinder Comp	1	
4-3	279101	Gasket	1	
4-4	261246	Cap Screw	4	M5x25
4-5	285778	Insulator	1	New gasket required
4-6	285779	Gasket	1	
4-7	265924	Cap Screw	2	M5x25
4-8	285781	Muffler Comp	1	
4-9	285783	Gasket	1	
4-10	285784	Under Cover	1	
4-11	266713	Cap Screw	2	M5x60
4-12	283315	Screw	1	M5x12W-12
4-13	286891	Top Cover Ass'y	1	Incl.14-16
4-14	285786	Top Cover	1	
4-15	285843	Knob	1	
4-16	286362	Washer	1	M6
4-17	288200	Crankcase	1	
4-18	262658	Bearing	2	#6202C3
4-19	246472	Oil Seal	1	
4-20	246471	Oil Seal	1	
4-21	012380	Snap Ring	1	#35
4-22	261612	Cap Screw	4	M5x30
4-23	285795	Piston	1	
4-24	262476	Piston Ring	2	(2)Required
4-25	262749	Piston Pin	1	
4-26	262659	Bearing,Needle	1	KTV111414EG01B2
4-27	262479	Clip,Piston Pin	2	
4-28	285797	Crankshaft/Conn.Rod Ass'y	1	
4-29	286905	Clutch Ass'y	1	
4-30	246377	Clutch Bolt	2	M8x1.25
4-31	262683	Washer	2	8x22x1.2
4-32	262682	Wave Washer	2	
4-33	282285	Fan Cover	1	
4-34	261250	Cap Screw	4	M5x20
4-35	287597	Magneto Ass'y	1	Incl.36,37
4-36	286207	Rotor/Fan	1	
4-37	287598	Ignition Coil Ass'y	1	
4-38	261076	Woodruff Key	1	3x10
4-39	262731	Nut,Rotor	1	M10
4-40	280381	Spacer	2	
4-41	287714	Clamp	1	
4-42	261256	Cap Screw	2	M4x25
4-43	288264	Spark Plug	1	BPMR8Y
4-44	286988	Grommet	1	
4-45	283735	Wire, Coil	1	


BC4322RS  
4. ENGINE

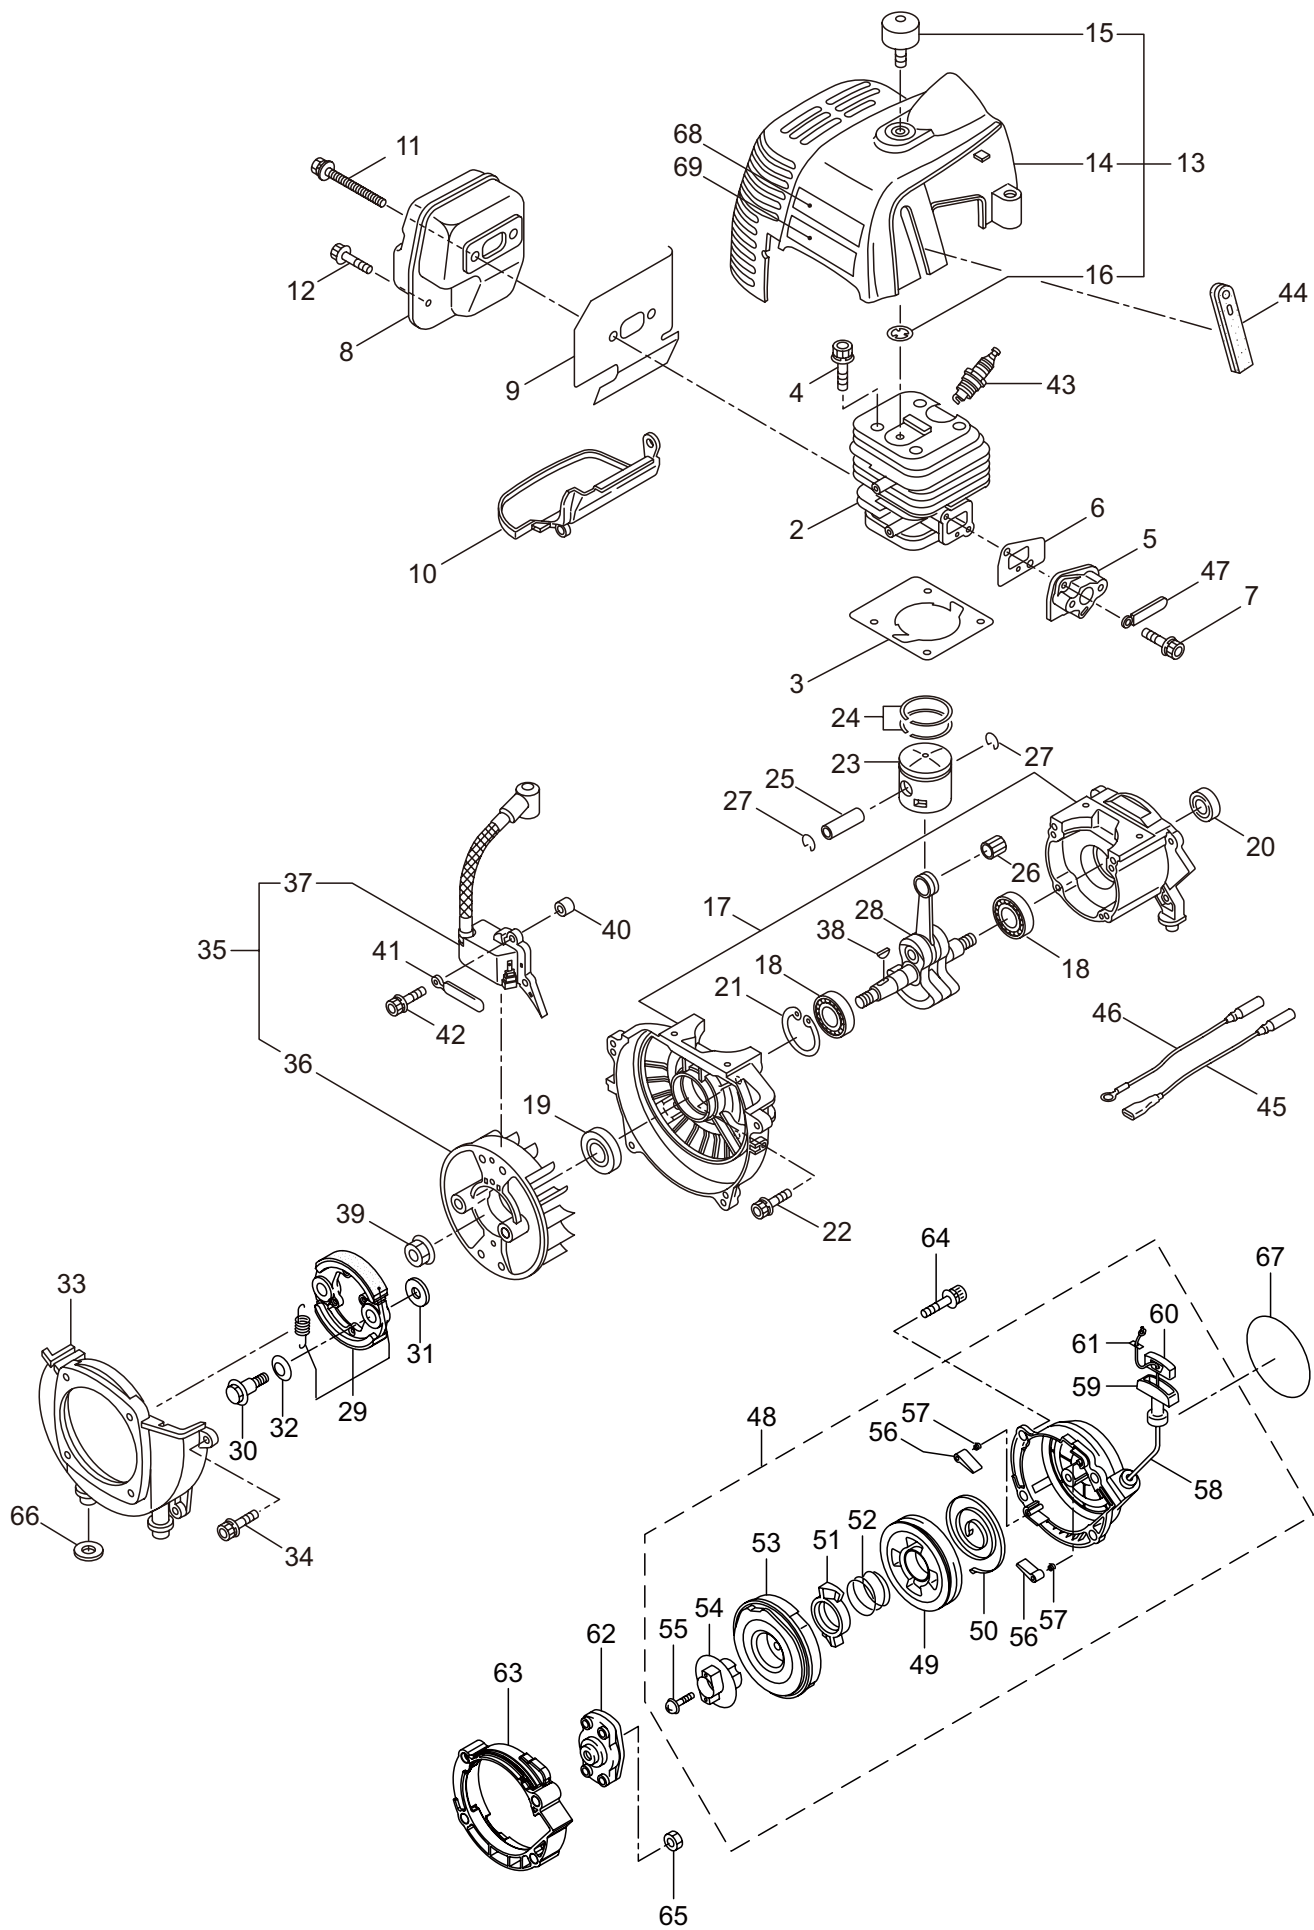

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-46	284541	Wire,Lead	1	Incl.49-61
4-47	264588	Clamp	1	
4-48	286919	Recoil Ass'y	1	
4-49	280994	Pulley	1	
4-50	280995	Spiral Spring	1	
4-51	280996	Pawl	1	
4-52	280997	Return Spring	1	
4-53	555277	Spring Comp	1	
4-54	280999	Plate	1	
4-55	281000	Set Screw	1	
4-56	281001	Pawl	2	
4-57	281002	Return Spring	2	
4-58	281004	Starter Rope	1	
4-59	262633	Starter Grip	1	
4-60	262981	Cap	1	
4-61	281005	Rope Stopper	1	M5x40 M8
4-62	280834	Starter Pulley Ass'y	1	
4-63	286922	Adapter	1	
4-64	261999	Cap Screw	4	
4-65	126990	Nut	1	
4-66	285735	Packing	4	MARUYAMA
4-67	248685	Label	1	
4-68	265694	Label	1	
4-69	246302	Label	1	













BC4322RS

5. CARBURETOR, FUEL TANK

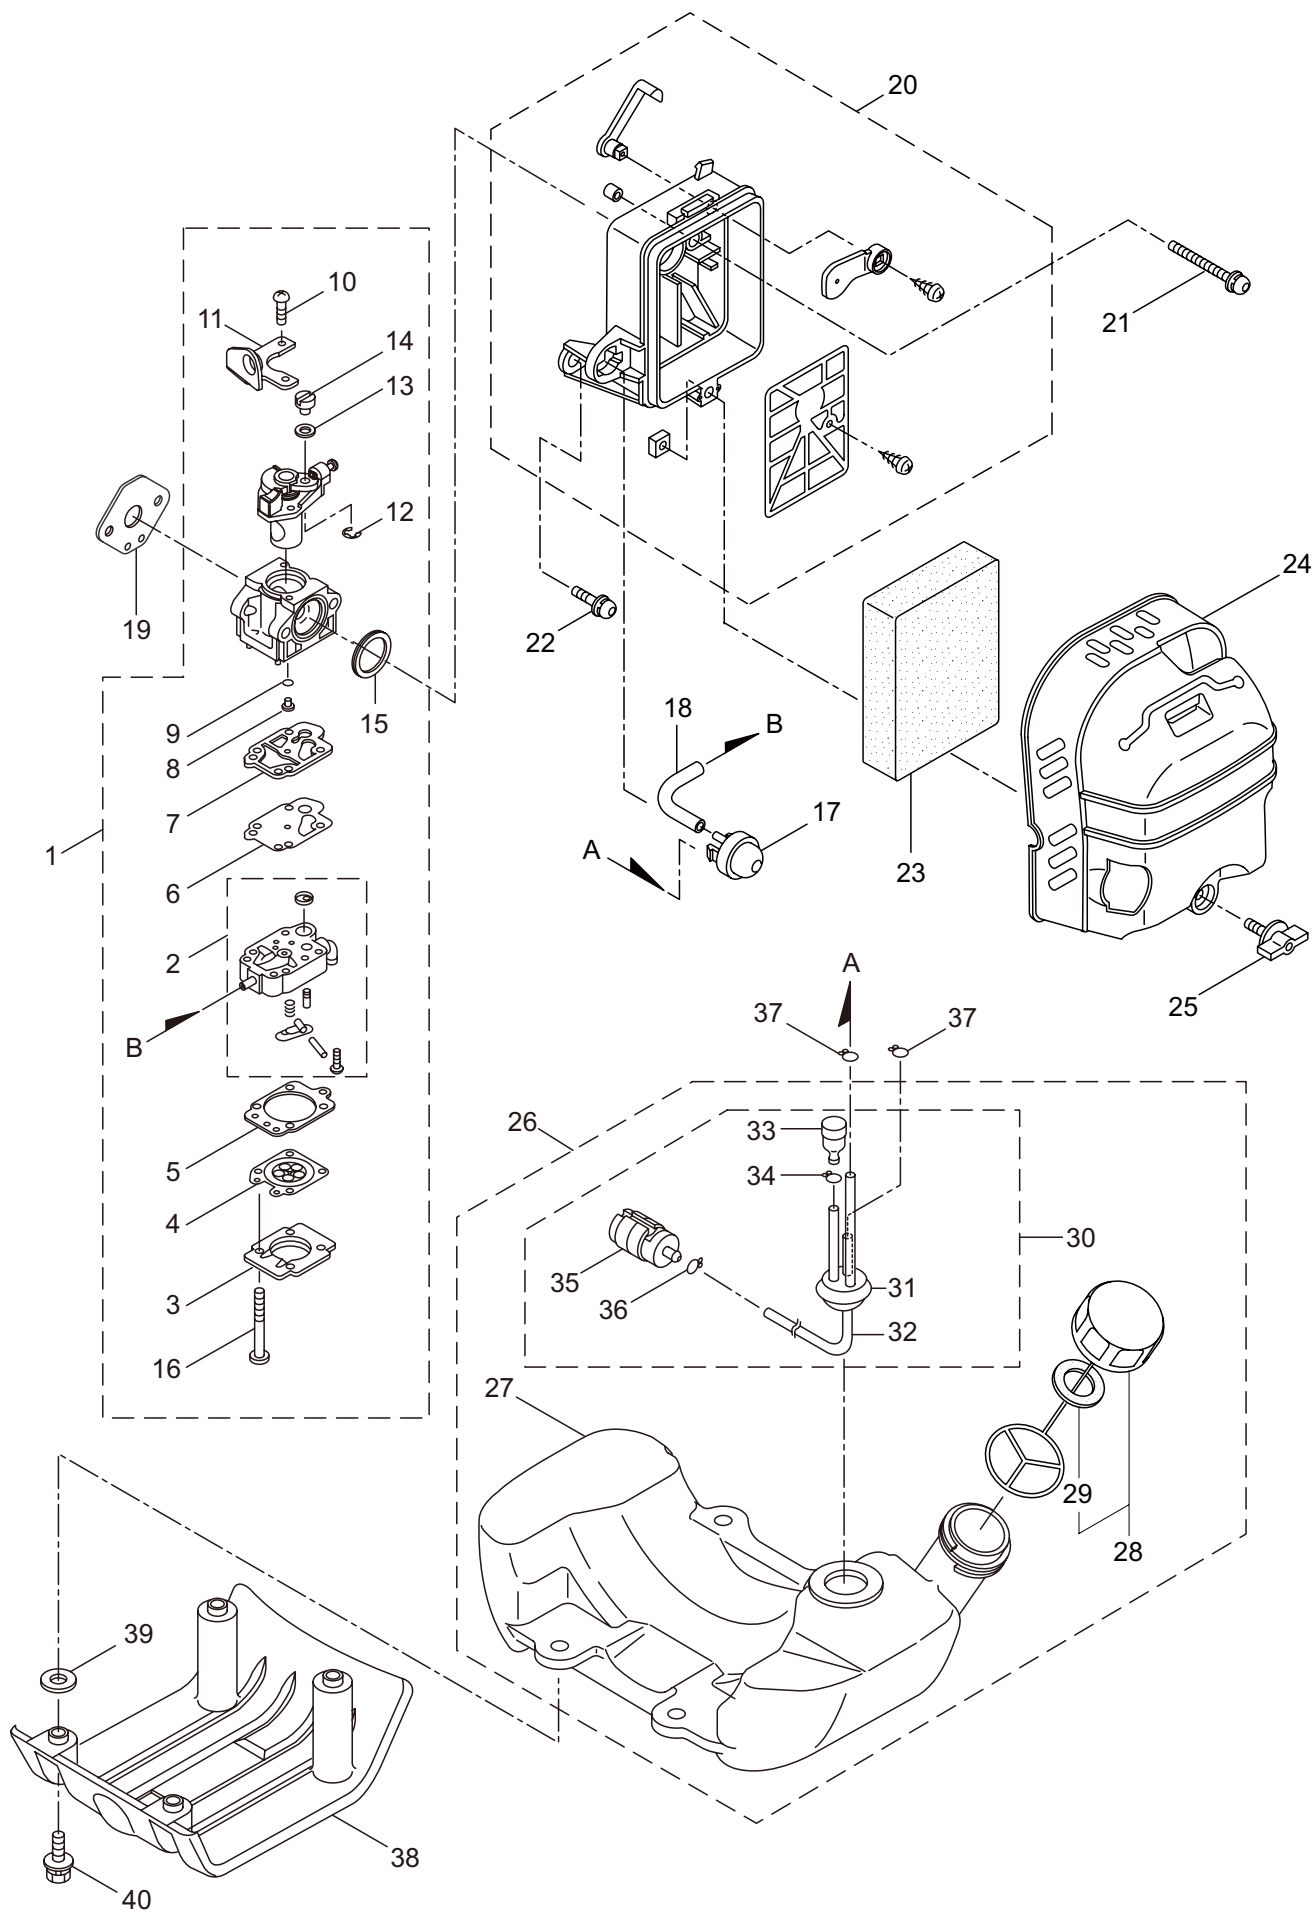

Ref. No.	Part No.	Part Name	Q'ty	Remarks
5-1	287021	Carburetor Ass'y	1	Incl.2-16 New gasket required
5-2	283124	Pump Body	1	
5-3	263726	Cover Plate	1	
5-4	283905	Diaphragm, Metering	1	
5-5	263727	Gasket	1	
5-6	262994	Diaphragm,Fuel Pump	1	
5-7	282576	Gasket	1	
5-8	287061	Main Jet	1	
5-9	261871	O-Ring	1	
5-10	261875	Screw	2	
5-11	264677	Bracket	1	
5-12	261876	E-Ring	1	
5-13	264678	Washer	1	
5-14	261658	Swivel	1	
5-15	261657	Packing	1	
5-16	263737	Screw	4	
5-17	282299	Pump	1	
5-18	282512	Fuel Pipe	1	
5-19	282301	Gasket	1	
5-20	249200	Case Ass'y	1	
5-21	261814	Cap Screw	2	M5x50
5-22	264807	Cap Screw	1	M5x16
5-23	282306	Element	1	
5-24	285814	Cleaner Cover	1	
5-25	279350	Knob	1	
5-26	286893	Fuel Tank Ass'y	1	Incl.27-36
5-27	286067	Fuel Tank	1	
5-28	275306	Fuel Tank Cap Ass'y	1	Incl.29
5-29	274875	Gasket	1	
5-30	286794	Fuel Pipe Pick-up Ass'y	1	Incl.31-36
5-31	268065	Grommet	1	
5-32	262649	Fuel Pipe	1	
5-33	261590	Breather	1	
5-34	261117	Clip	1	
5-35	247107	Filter Ass'y	1	
5-36	261117	Clip	1	
5-37	261117	Clip	2	
5-38	285819	Stand	1	
5-39	285735	Packing	4	
5-40	281714	Cap Screw	4	

BC4322RS  
6. ACCESSORIES

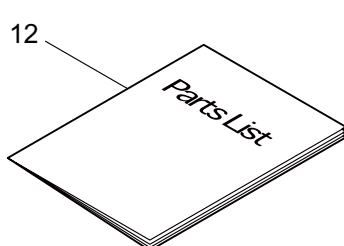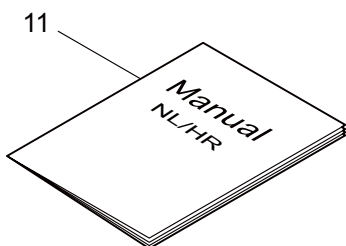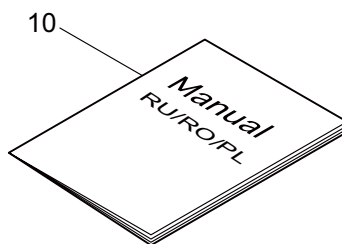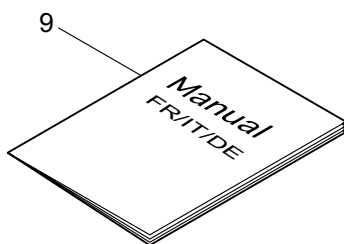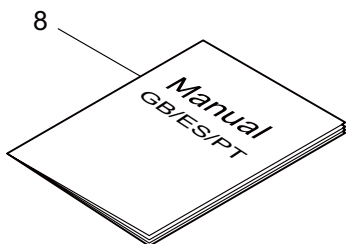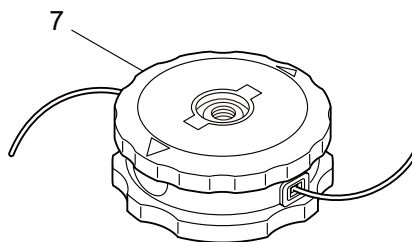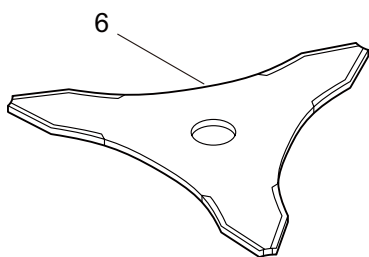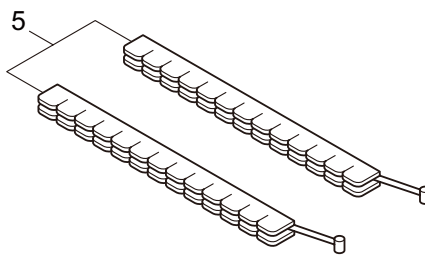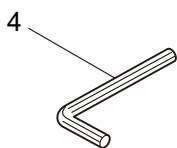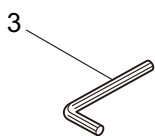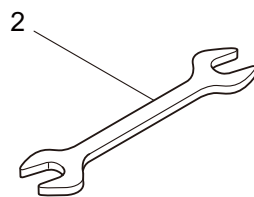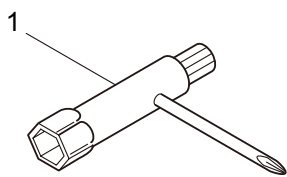

Ref. No.	Part No.	Part Name	Q'ty	Remarks
6-1	228008	Box Spanner	1	17x19x(+)
6-2	054756	Double-ended Wrench	1	10x13
6-3	219432	Wrench	1	4mm
6-4	219433	Wrench	1	5mm
6-5	220534	Blade Cover	1	
6-6	227910	3-Teeth Blade	1	
6-7	234901	Semi-Auto Head (L)	1	
6-8	244232	Instruction Manual	1	GB/ES/PT
6-9	244233	Instruction Manual	1	FR/IT/DE
6-10	244234	Instruction Manual	1	RU/RO/PL
6-11	244235	Instruction Manual	1	NL/HR
6-12	525399	Parts List	1	BC4322RS