


## Spare parts table & Spare parts code table

※ Specify the lift when placing an order for Load chain.

※ When ordering spare parts, please advise of the Model, Capacity, Product number, Code Number and Quantity.

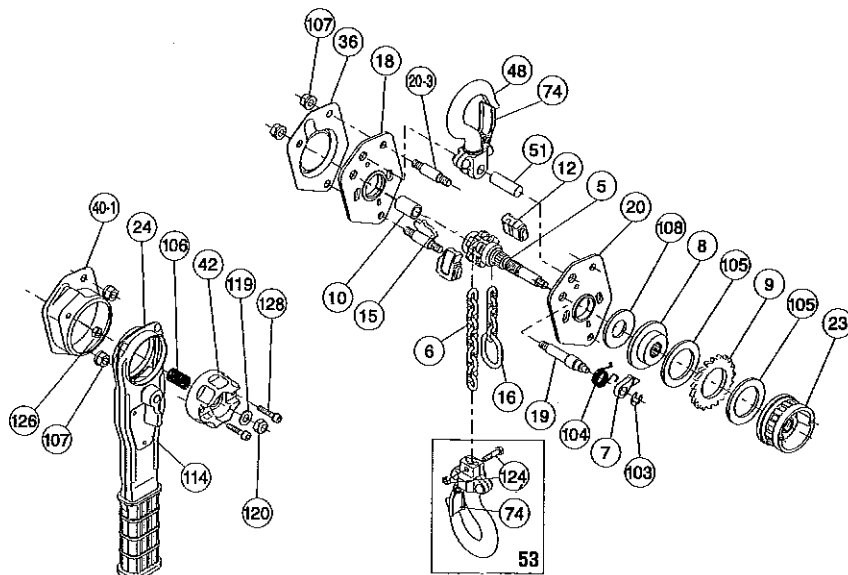

Parts List: 0.5t

Table 8.

Part No.	Part name	Qty	0.5t	Part No.	Part name	Qty	0.5t
5	Load sheave	1	GRB5005	42	Guide handle	1	GRB5042
※6	Load chain	1	T-4XP	48	Top hook assembly	1	GRB5048U
7	Pawl	1	IRB5007	51	Yoke pin	1	GRB5051
8	Disc hub	1	IRB5008	53	Bottom hook assembly	1	GRB5053U
9	Ratchet wheel	1	IRB5009	74	Safety latch assembly	2	GRB5074T
10	Stay pipe	1	GRB5010	103	Retaining ring-Etype	1	SRE8
12	Chain guide	2	GRB5012	104	Pawl spring	1	IRB5104
15	Stripper	1	GRB5015	105	Brake lining	2	GRB5105
16	Stop grip	1	DRP1021	106	Free-wheeling spring	1	NRB5106
18	Plain-side plate assembly	1	GRB5018T	107	Spring nut	5	HSN1M8
19	Stay bolt for pawl	1	GRB5019	108	Coned disc spring	1	GRB5108
20	Handle-side plate assembly	1	GRB5020T	114	Name plate	1	GRB5114
20-3	Stay bolt	2	GRB50203	119	Plain washer	1	PWM8M
23	Disc nut	1	GRB5023	120	Nylon nut	1	HNN1M8
24	Operating handle	1	GRB5024U	124	Chain fastening bolt	1	GRB4124T
36	Body cover	1	GRB5036	126	Lock nut	1	HUN1M6L
40-1	Ratchet cover	1	GRB50401	128	Hex.socket head cap screw	2	CBM5×25B3