

PARTS LIST

BC300

CONTENTS

1 • MAIN BODY	1 ~ 2
2 • GEARCASE	3 ~ 4
3 • ENGINE (CRANKCASE, CYLINDER).....	5 ~ 8
4 • ENGINE (CARBURETOR, FUEL TANK).....	9 ~ 10
5 • ACCESSORIES	11


1995. 12.



MARUYAMA


P/N 520697

1 • MAIN BODY

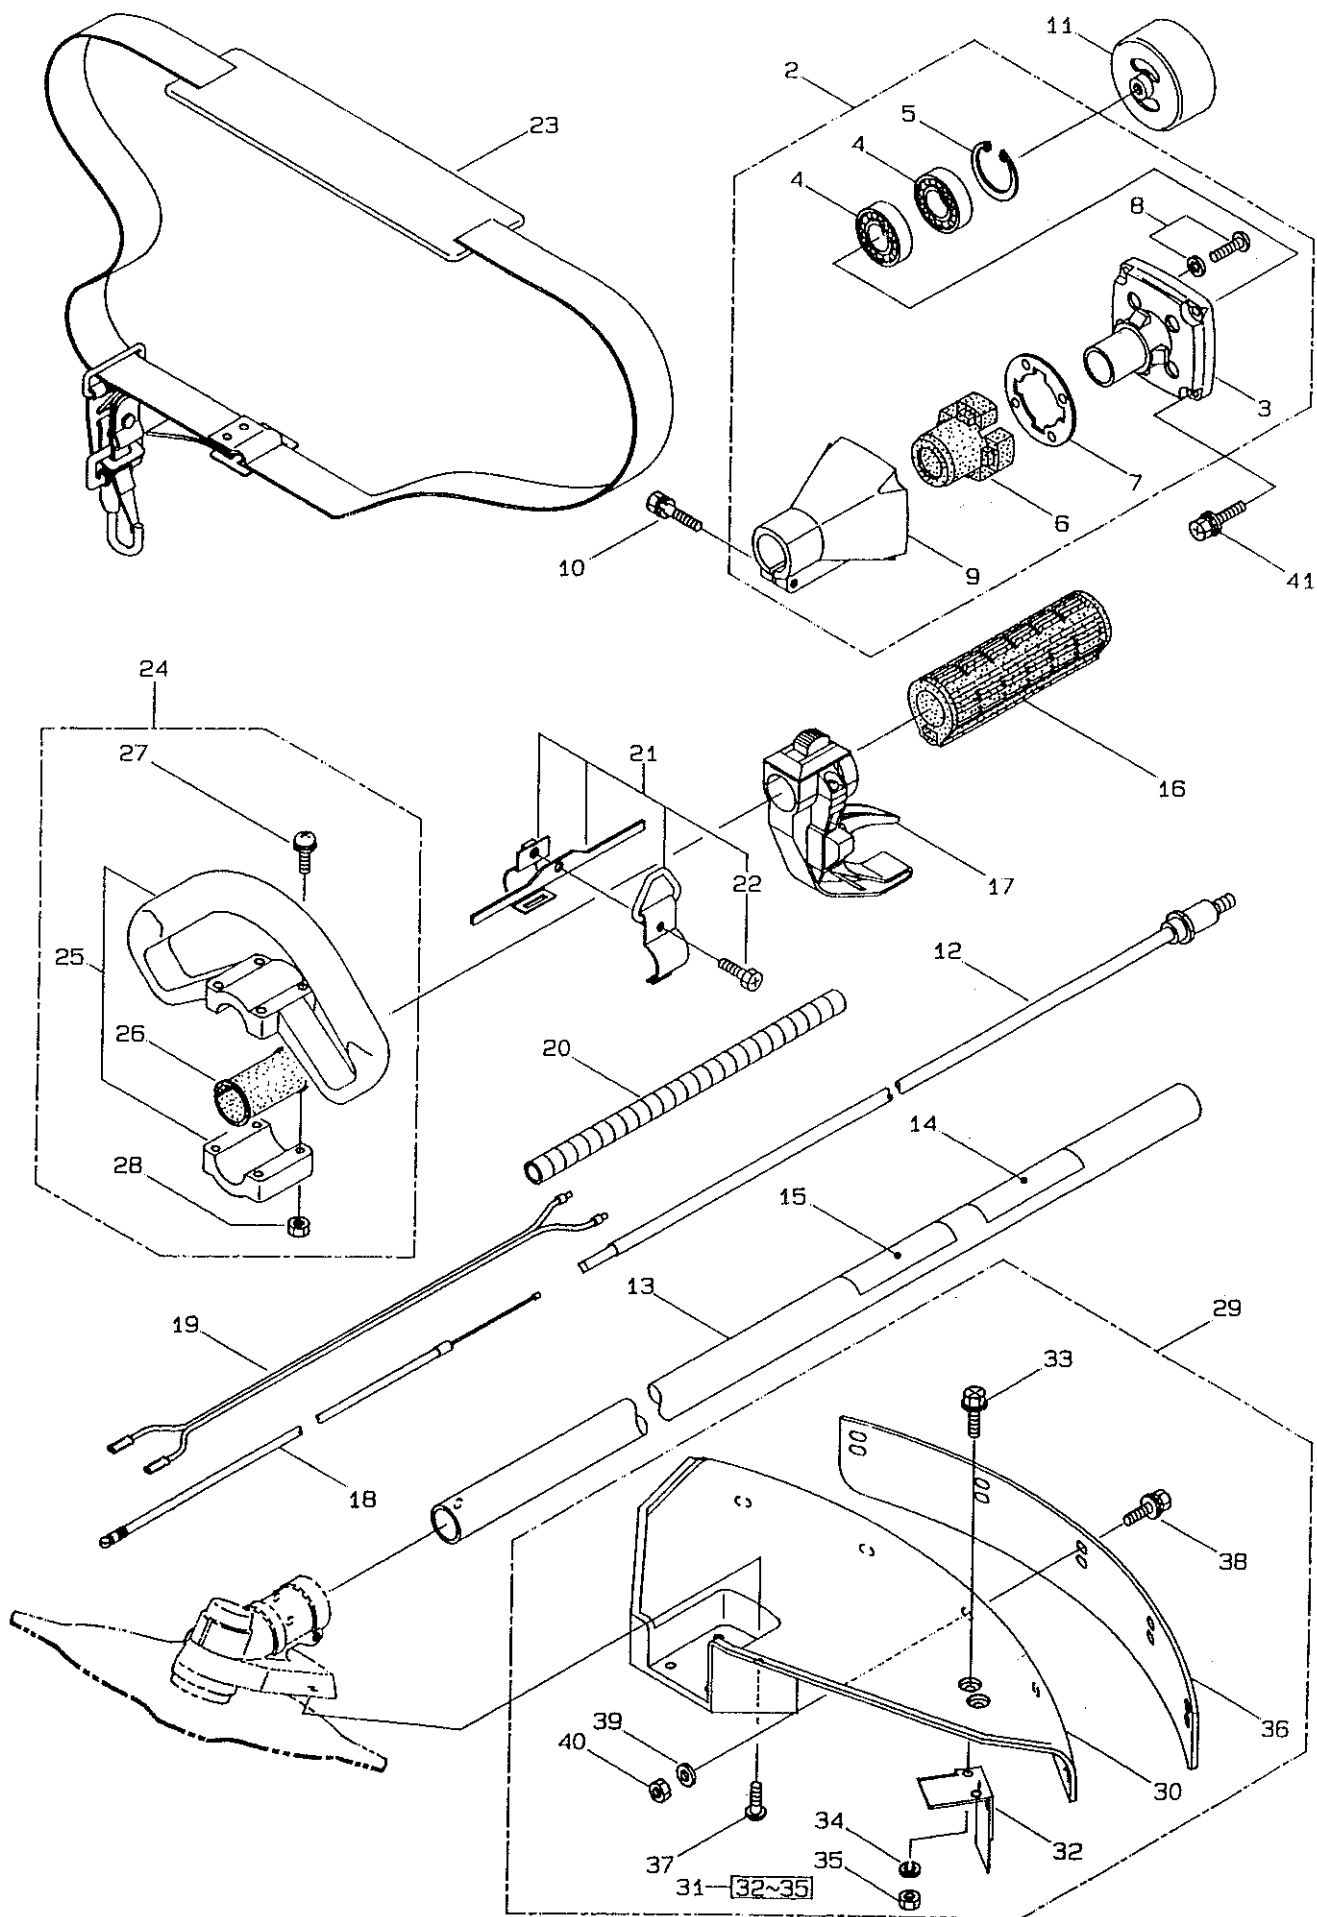


Ref. No	Part No.	Part Name	Q'ty	Remarks
1- 1	347523	BC300	1	AMA
1- 2	215512	Clutch Case Ass'y	1	Incl. 3~9
1- 3	214592	Bearing case	1	
1- 4	214161	Bearing	2	#6000ZZ
1- 5	054676	Snap Ring	1	H26
1- 6	214162	Buffer	1	
1- 7	214163	Washer	1	
1- 8	092033	Screw	4	M5x15
1- 9	214593	Driveshaft Tube Adapter	1	
1-10	092561	Bolt	1	M5x25
1-11	054677	Clutch Drum	1	
1-12	219268	Driveshaft Ass'y	1	
1-13	218711	Driveshaft Tube	1	
1-14	220763	Label	1	BC300
1-15	220602	Label	1	Caution
1-16	215532	Shaft Grip	1	
1-17	218300	Throttle Trigger	1	
1-18	213444	Throttle Cable	1	340L
1-19	213445	Lead Wire, Stop Switch	1	
1-20	213548	Plastic Tube	1	
1-21	220755	Hanging Bracket Ass'y	1	Incl. 22
1-22	089738	Bolt	1	M5x15
1-23	220533	Hanging Strap Ass'y	1	
1-24	219046	Loop Handle Ass'y	1	Incl. 25~28
1-25	219032	Loop Handle	1	
1-26	213171	Packing	1	
1-27	092088	Screw	4	M5x35
1-28	081027	Nut	4	M5
1-29	220096	Safety Cover Ass'y	1	Incl. 30~40
1-30	219129	Safety Cover	1	
1-31	215390	String Cutter Ass'y	1	Incl. 32~35
1-32	215392	String Cutter	1	
1-33	092560	Bolt	2	M5x25
1-34	012501	Spring Washer	2	M5
1-35	081027	Nut	2	M5
1-36	219130	Cover	1	
1-37	816024	Screw	4	M5x12
1-38	092548	Bolt	5	M5x15
1-39	022905	Washer	5	M5
1-40	081027	Nut	5	M5
1-41	817002	Bolt	4	M5x20

2 • GEARCASE

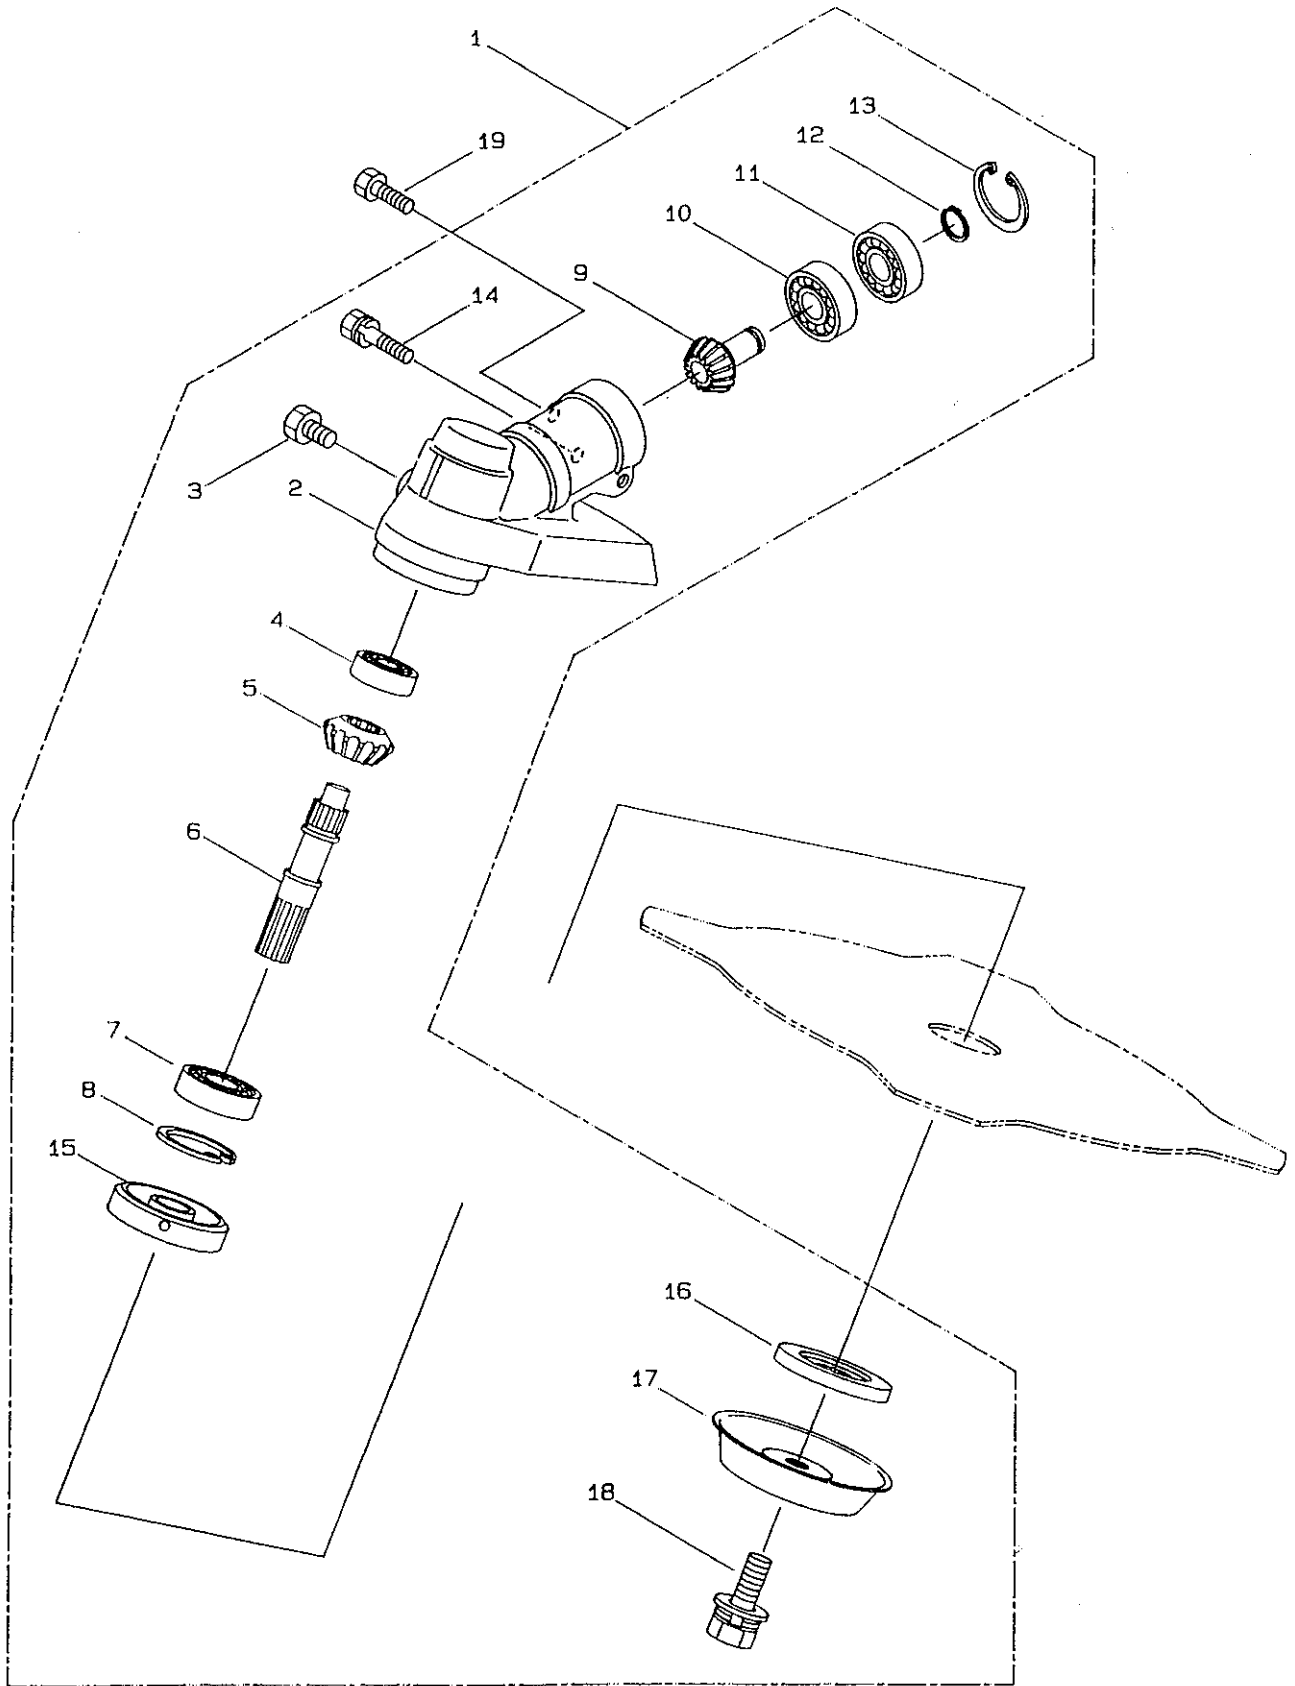


Ref. No	Part No.	Part Name	Q'ty	Remarks
2- 1	220577	Gearcase Ass'y	1	Incl. 2~18
2- 2	219077	Gearcase	1	
2- 3	089884	Bolt	1	M8x10
2- 4	210554	Bearing	1	#608
2- 5	210555	Gear	1	
2- 6	215762	Blade Shaft	1	
2- 7	212999	Bearing	1	#6001 2RK
2- 8	055185	Snap Ring	1	H28
2- 9	215544	Pinion Gear	1	
2-10	210560	Bearing	1	#609
2-11	140268	Bearing	1	#609Z
2-12	140269	Snap Ring	1	WR9
2-13	140270	Snap Ring	1	H24
2-14	092561	Bolt	1	M5x25
2-15	212986	Boss Adapter	1	
2-16	140275	Clamping Washer	1	
2-17	215547	Stabilizer	1	
2-18	215610	Bolt	1	M8x22, Counterclockwise
2-19	089737	Bolt	1	M5x12

3 · ENGINE CRANKCASE, CYLINDER

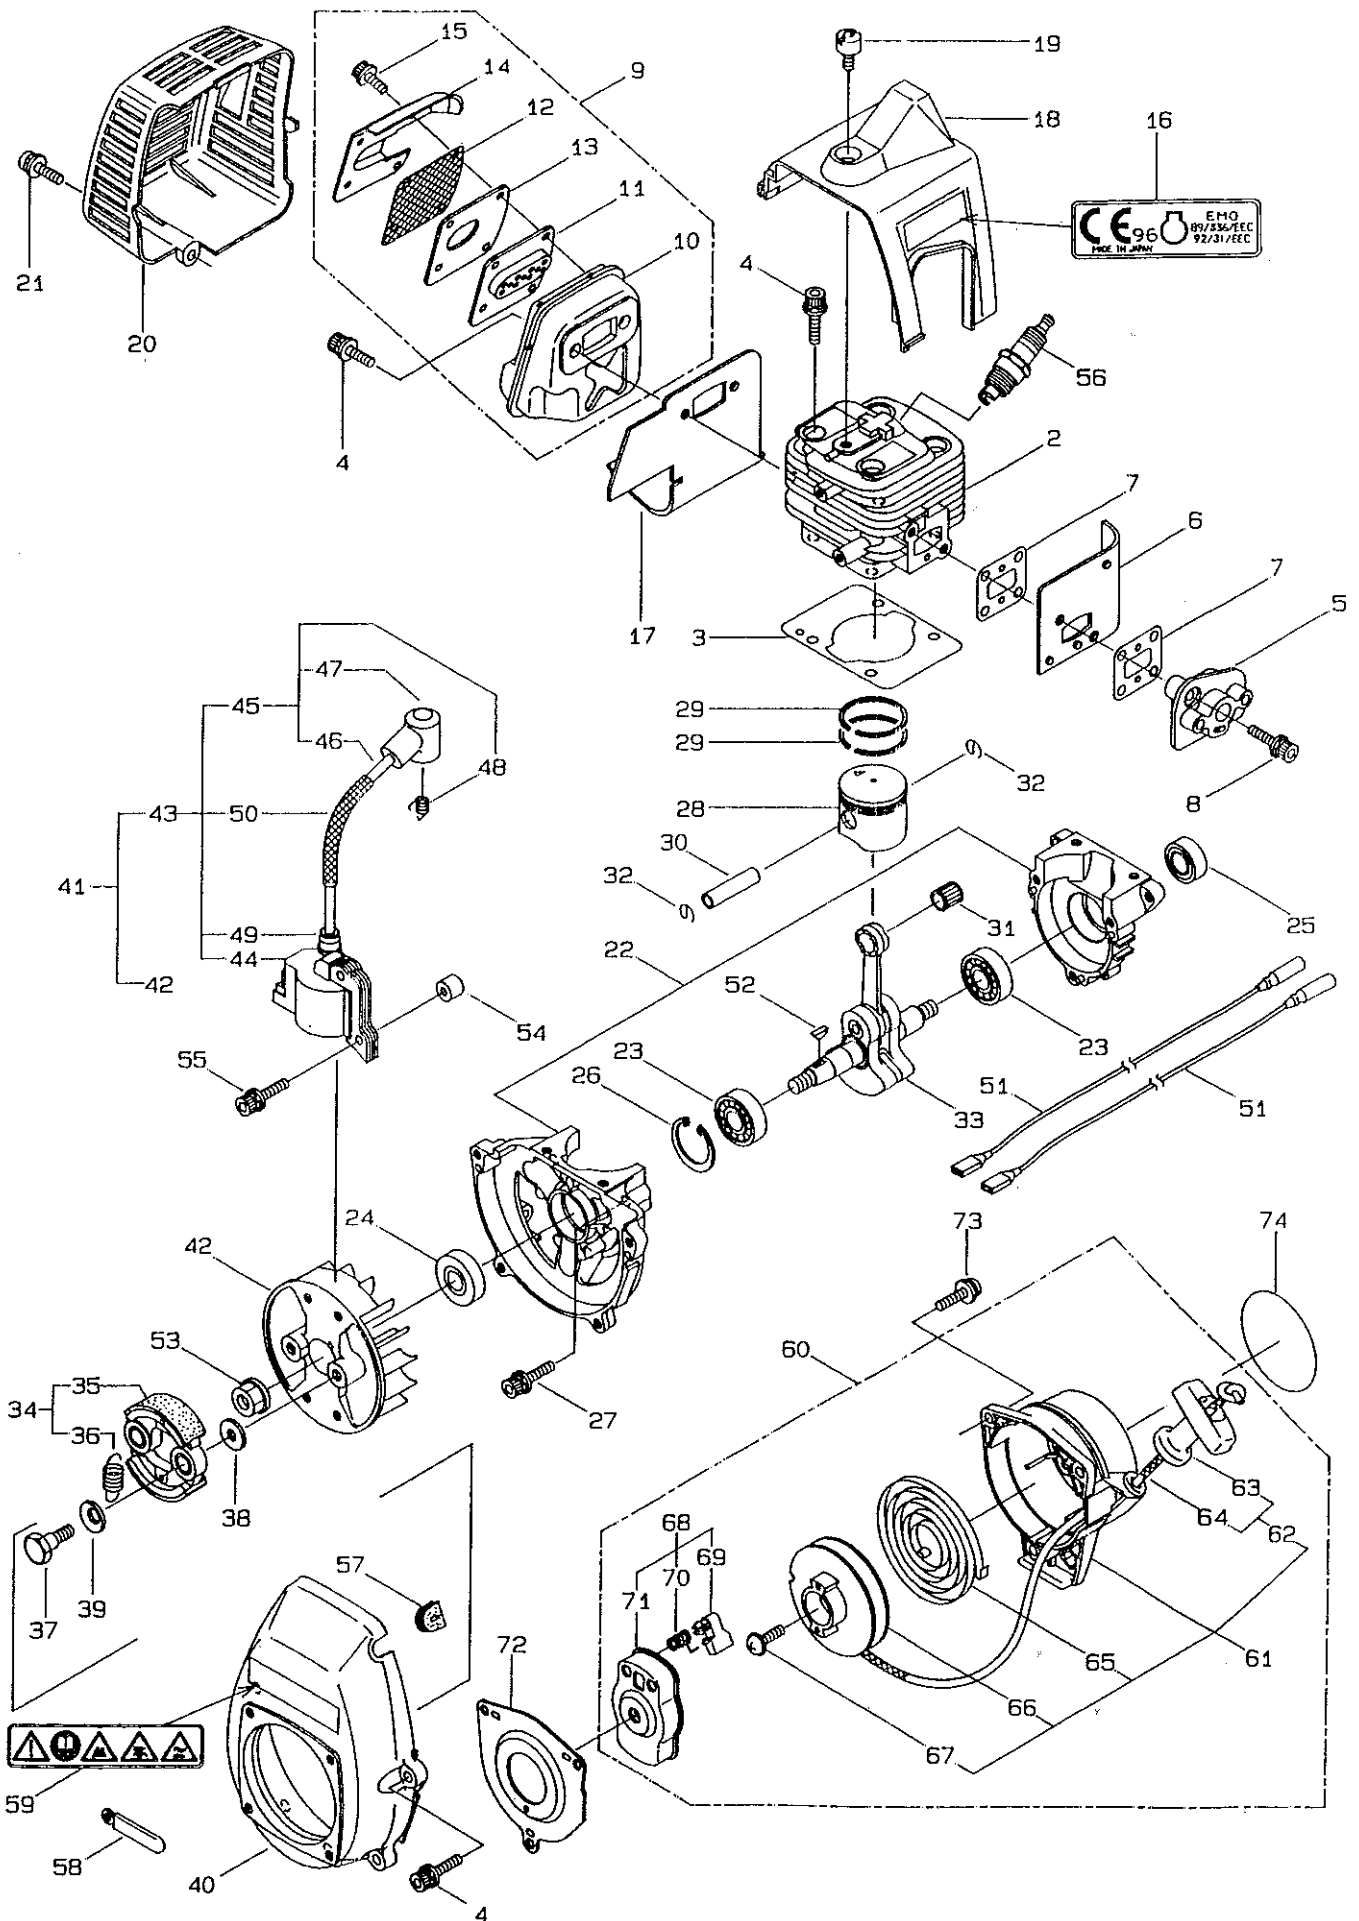


Ref. No	Part No.	Part Name	Q'ty	Remarks
3- 1	265673	Engine	1	LE300/02
3- 2	265059	Cylinder	1	New gasket required
3- 3	265001	Gasket	1	
3- 4	261250	Cap Screw	10	M5x20
3- 5	263772	Insulator	1	New gasket required
3- 6	265470	Air Duct	1	
3- 7	261171	Gasket	2	
3- 8	261246	Cap Screw	2	M5x25
3- 9	265062	Muffler Ass'y	1	Incl. 10~15
3-10	265063	Muffler	1	
3-11	264864	Plate	1	
3-12	264835	Screen	1	
3-13	264837	Gasket	1	
3-14	265632	Tail	1	
3-15	265107	Cap Screw	4	M4x10
3-16	265695	Label	1	
3-17	265133	Gasket	1	
3-18	265003	Cylinder Cover	1	
3-19	264022	Knob	1	
3-20	265064	Muffler Cover	1	
3-21	264807	Cap Screw	1	M5x16
3-22	265006	Crankcase	1	
3-23	261491	Bearing	2	#6001C3
3-24	261492	Oil Seal	1	ISCD12287
3-25	261386	Oil Seal	1	ISCD12227
3-26	055185	Snap Ring	1	H28
3-27	261612	Cap Screw	3	M5x30
3-28	265066	Piston	1	
3-29	265067	Piston Ring	2	(2)Required
3-30	265068	Piston Pin	1	
3-31	265225	Bearing, Needle	1	
3-32	261393	Clip, Piston	2	
3-33	265141	Crankshaft/Conn Rod Ass'y	1	
3-34	264503	Clutch Ass'y	1	Incl. 35, 36
3-35	264504	Clutch Shoe	2	(2)Required
3-36	263614	Spring, Clutch	1	
3-37	264505	Bolt	2	
3-38	261189	Washer	2	φ 6x φ 16 5xtl. 2
3-39	261777	Wave Washer	2	
3-40	265014	Fan Cover	1	

3 · ENGINE CRANKCASE, CYLINDER

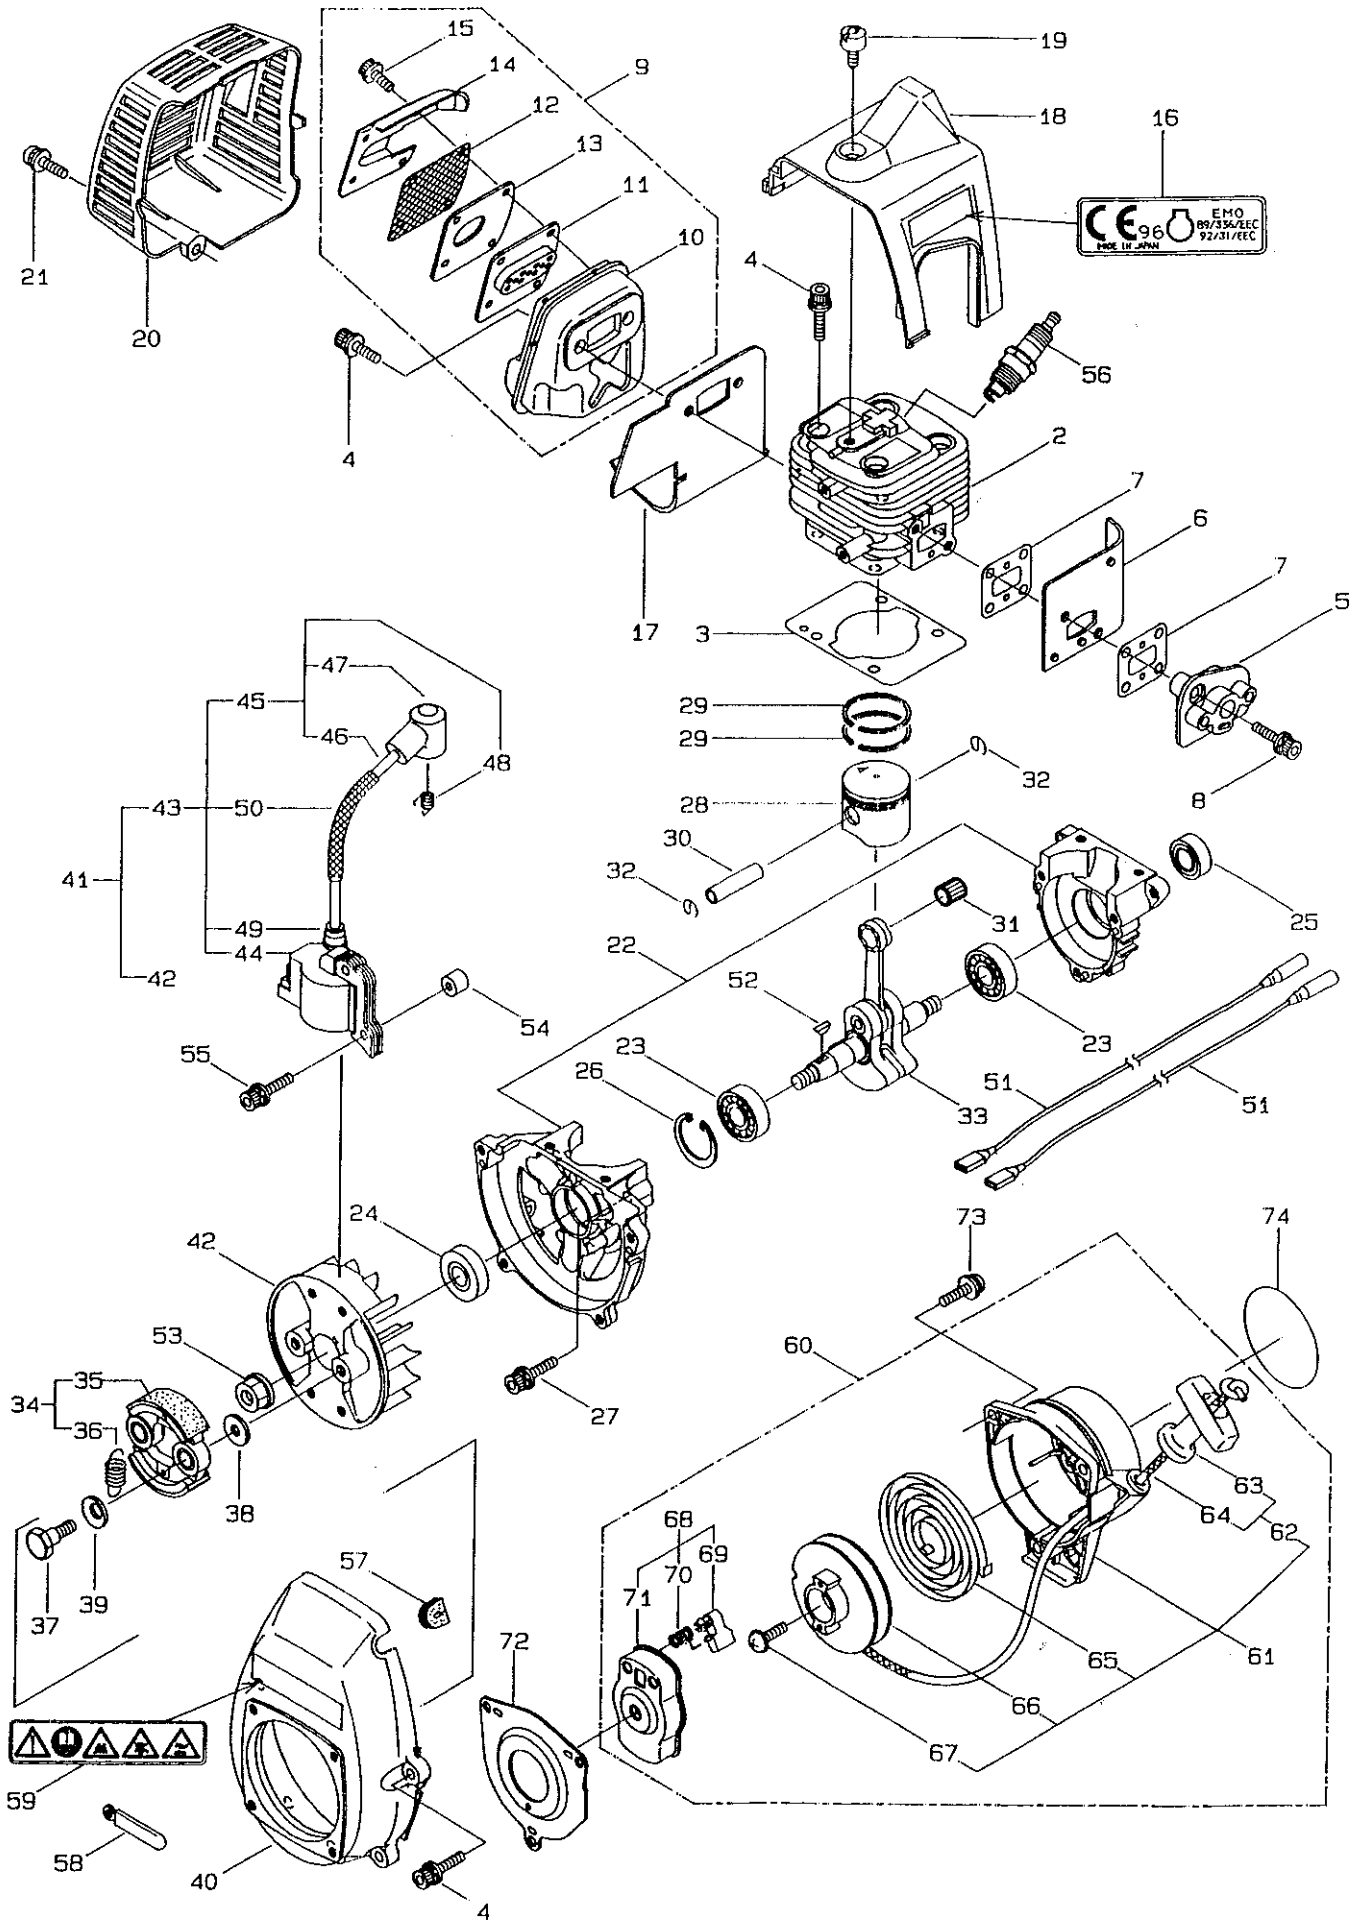






Ref. No	Part No.	Part Name	Q'ty	Remarks
3-41	265016	Magneto Ass'y	1	Incl 42~50
3-42	265017	Rotor/Fan	1	
3-43	261301	Ignition Coil Ass'y	1	Incl 44~50
3-44	261302	Coil	1	
3-45	261744	Spark Plug Wire Ass'y	1	Incl. 46~48
3-46	261071	Spark Plug Wire	1	
3-47	261074	Plug Boot	1	
3-48	261075	Connector	1	
3-49	261072	Cap	1	
3-50	261073	Insulator	1	$\phi 6 \times \phi 6 \ 8 \times 80L$
3-51	261772	Wire, Coil Ground	2	
3-52	261076	Woodruff Key	1	
3-53	261417	Nut, Rotor	1	M8
3-54	261078	Spacer	2	
3-55	261256	Cap Screw	2	M4x25
3-56	262483	Spark Plug	1	NGK BPMR6Y
3-57	261202	Grommet	1	
3-58	264588	Clamp	1	
3-59	265694	Label	1	
3-60	265000	Recoil Starter Ass'y	1	Incl. 61~71
3-61	265019	Recoil Ass'y	1	Incl. 62~67
3-62	261723	Rope Ass'y	1	Incl 63, 64
3-63	261725	Starter Grip	1	
3-64	261724	Starter Rope	1	$\phi 3 \times 890L$
3-65	261721	Spiral Spring	1	
3-66	261720	Pulley	1	
3-67	262922	Screw	1	
3-68	263475	Starter Pawl Ass'y	1	Incl. 69~71
3-69	263477	Pawl	1	
3-70	261728	Return Spring	1	
3-71	263476	Pawl Case	1	
3-72	264999	Plate	1	
3-73	264807	Cap Screw	3	M5x16
3-74	265681	Label	1	

4 • ENGINE
 CARBURETOR, FUEL TANK

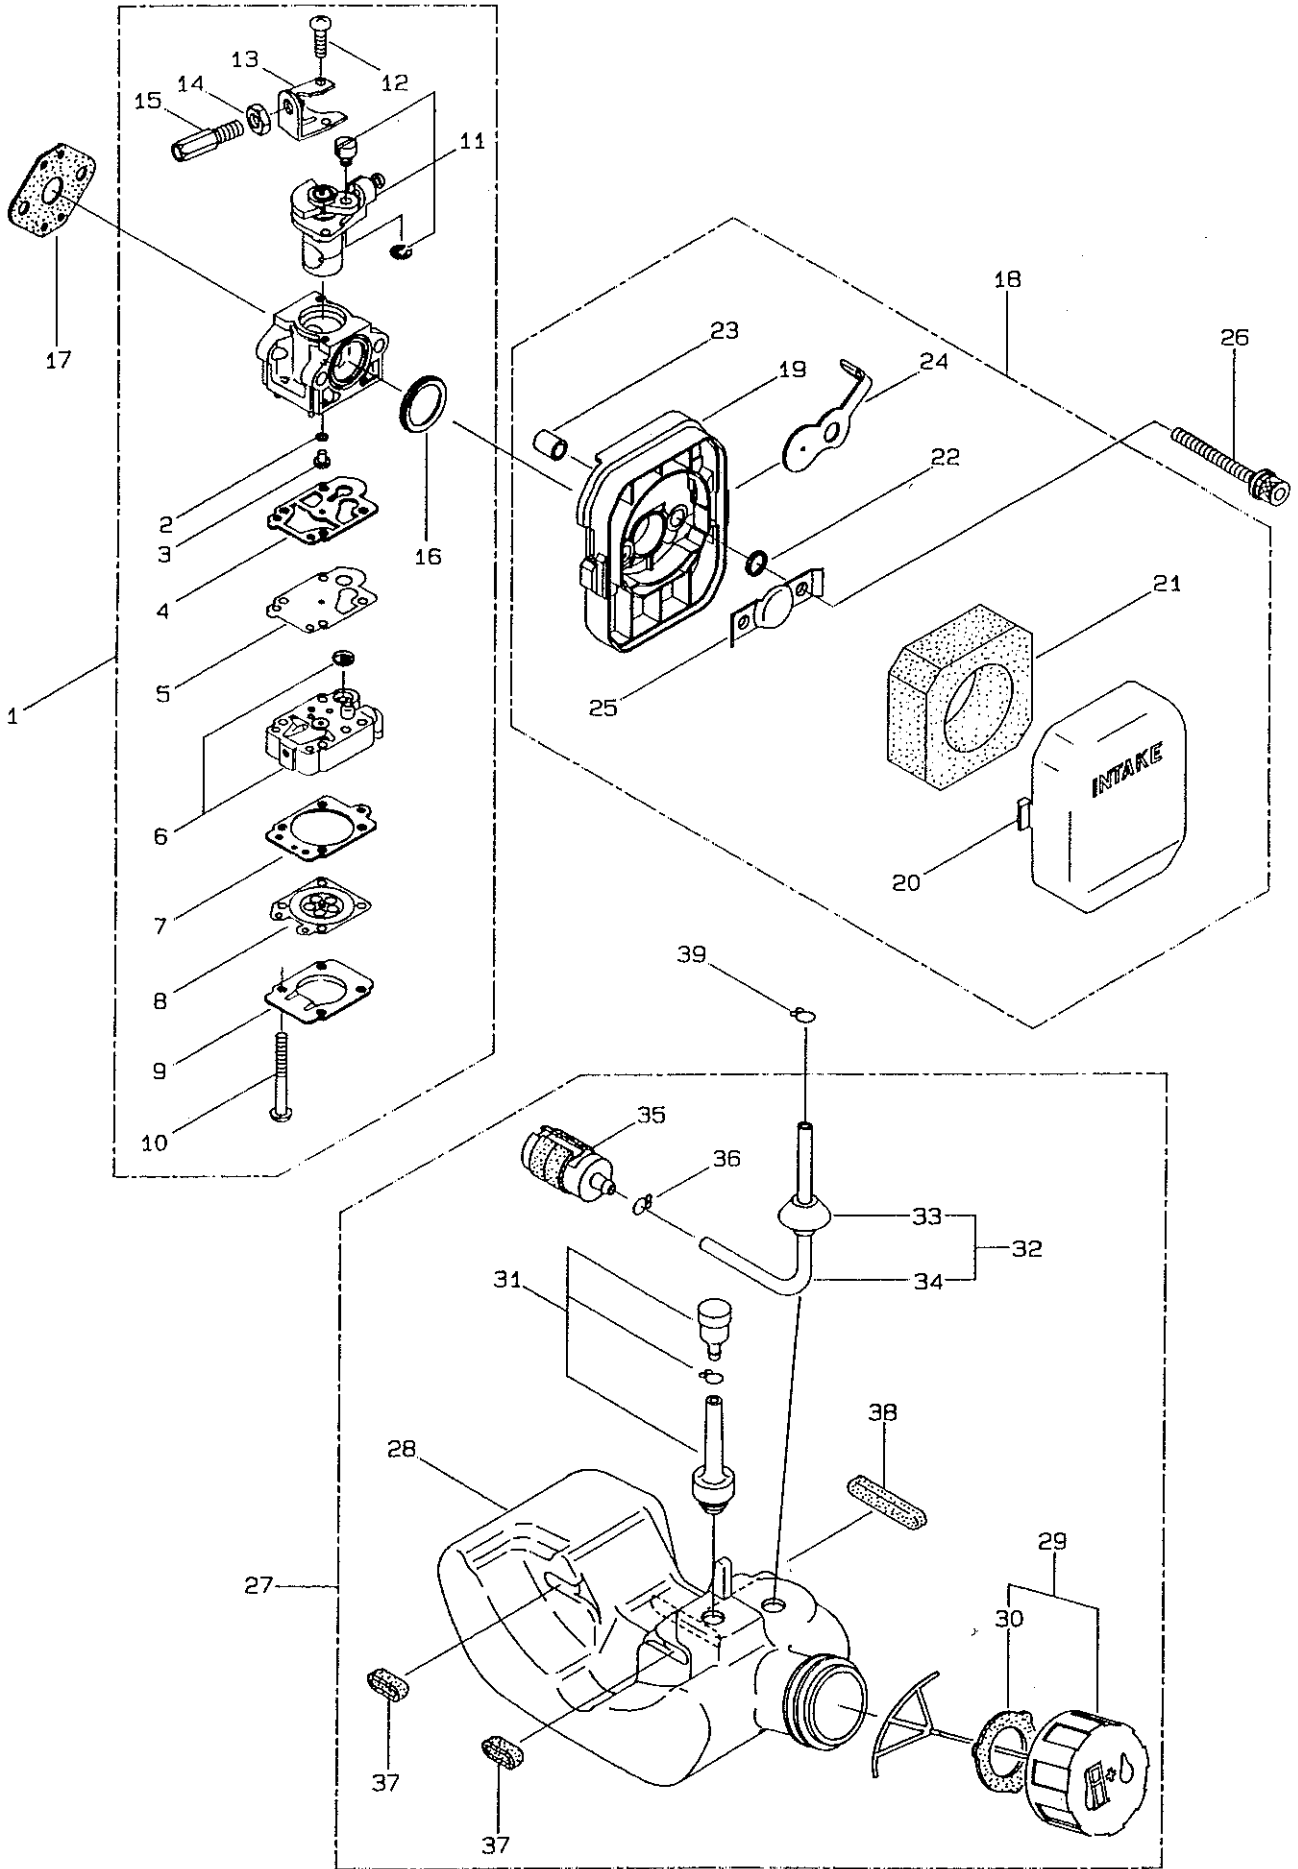

Ref. No	Part No.	Part Name	Q'ty	Remarks
4- 1	265676	Carburetor Ass'y	1	Incl. 2~16
4- 2	261871	O-Ring	1	
4- 3	261636	Main Jet	1	#42
4- 4	262995	Gasket	1	
4- 5	262994	Diaphragm, Fuel Pump	1	
4- 6	263725	Pump Body	1	
4- 7	263727	Gasket	1	
4- 8	261873	Diaphragm, Metering	1	
4- 9	263726	Cover Plate	1	
4-10	263737	Screw	4	
4-11	620026	Throttle Valve Ass'y	1	
4-12	261875	Screw	2	
4-13	261659	Bracket	1	
4-14	261878	Nut	1	
4-15	263994	Adapter	1	
4-16	261657	Packing	1	
4-17	261864	Gasket	1	
4-18	262902	Air Filter Ass'y	1	Incl. 19~25
4-19	263005	Housing	1	
4-20	262998	Cover	1	
4-21	263006	Element	1	
4-22	263000	Washer	1	
4-23	263001	Sleeve	2	
4-24	263007	Choke Valve	1	
4-25	263003	Plate	1	
4-26	264016	Cap Screw	2	M5x60
4-27	265678	Fuel Tank Ass'y	1	Incl 28~38
4-28	265679	Fuel Tank	1	
4-29	265582	Fuel Tank Cap Ass'y	1	Incl. 30
4-30	261105	Gasket	1	
4-31	261696	Breather Ass'y	1	
4-32	263586	Fuel Pipe Ass'y	1	Incl. 33, 34
4-33	261339	Grommet	1	
4-34	261690	Fuel Pipe	1	
4-35	261797	Fuel Filter Ass'y	1	
4-36	261117	Clip	1	
4-37	264318	Pad	2	
4-38	263824	Pad	1	
4-39	261117	Clip	1	

5 • ACCESSORIES

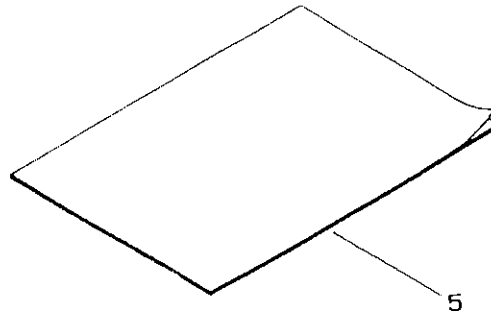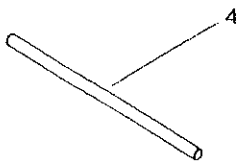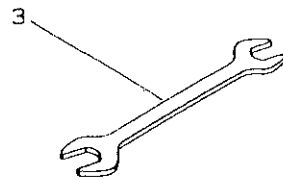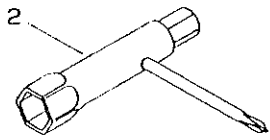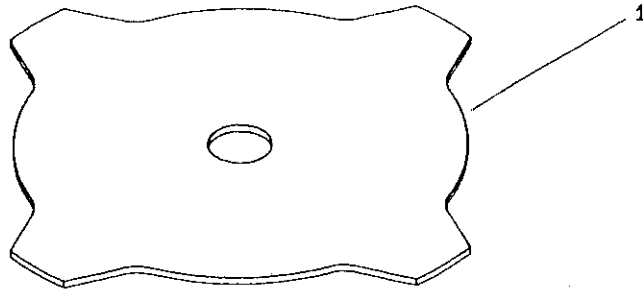

Ref. No	Part No.	Part Name	Q'ty	Remarks
5- 1	054751	Mowing Blade	1	φ 255x4
5- 2	210418	Box Spanner	1	13x19x(+)
5- 3	022865	Double-ended Wrench	1	8x10
5- 4	210181	Lever Handle	1	φ 3 5x170L
5- 5	220951	Instruction Manual	1	