

PARTS LIST

BKC4321RS

CONTENTS


1. MAIN BODY	1 ~ 2
2. GEARCASE	3 ~ 4
3. SUPPORT FRAME	5 ~ 6
4. ENGINE	7 ~ 10
5. CARBURETOR, FUEL TANK	11 ~ 12
6. ACCESSORIES	13 ~ 14

2011. 10.




P/N 523205-1

1. BKC4321RS
MAIN BODY

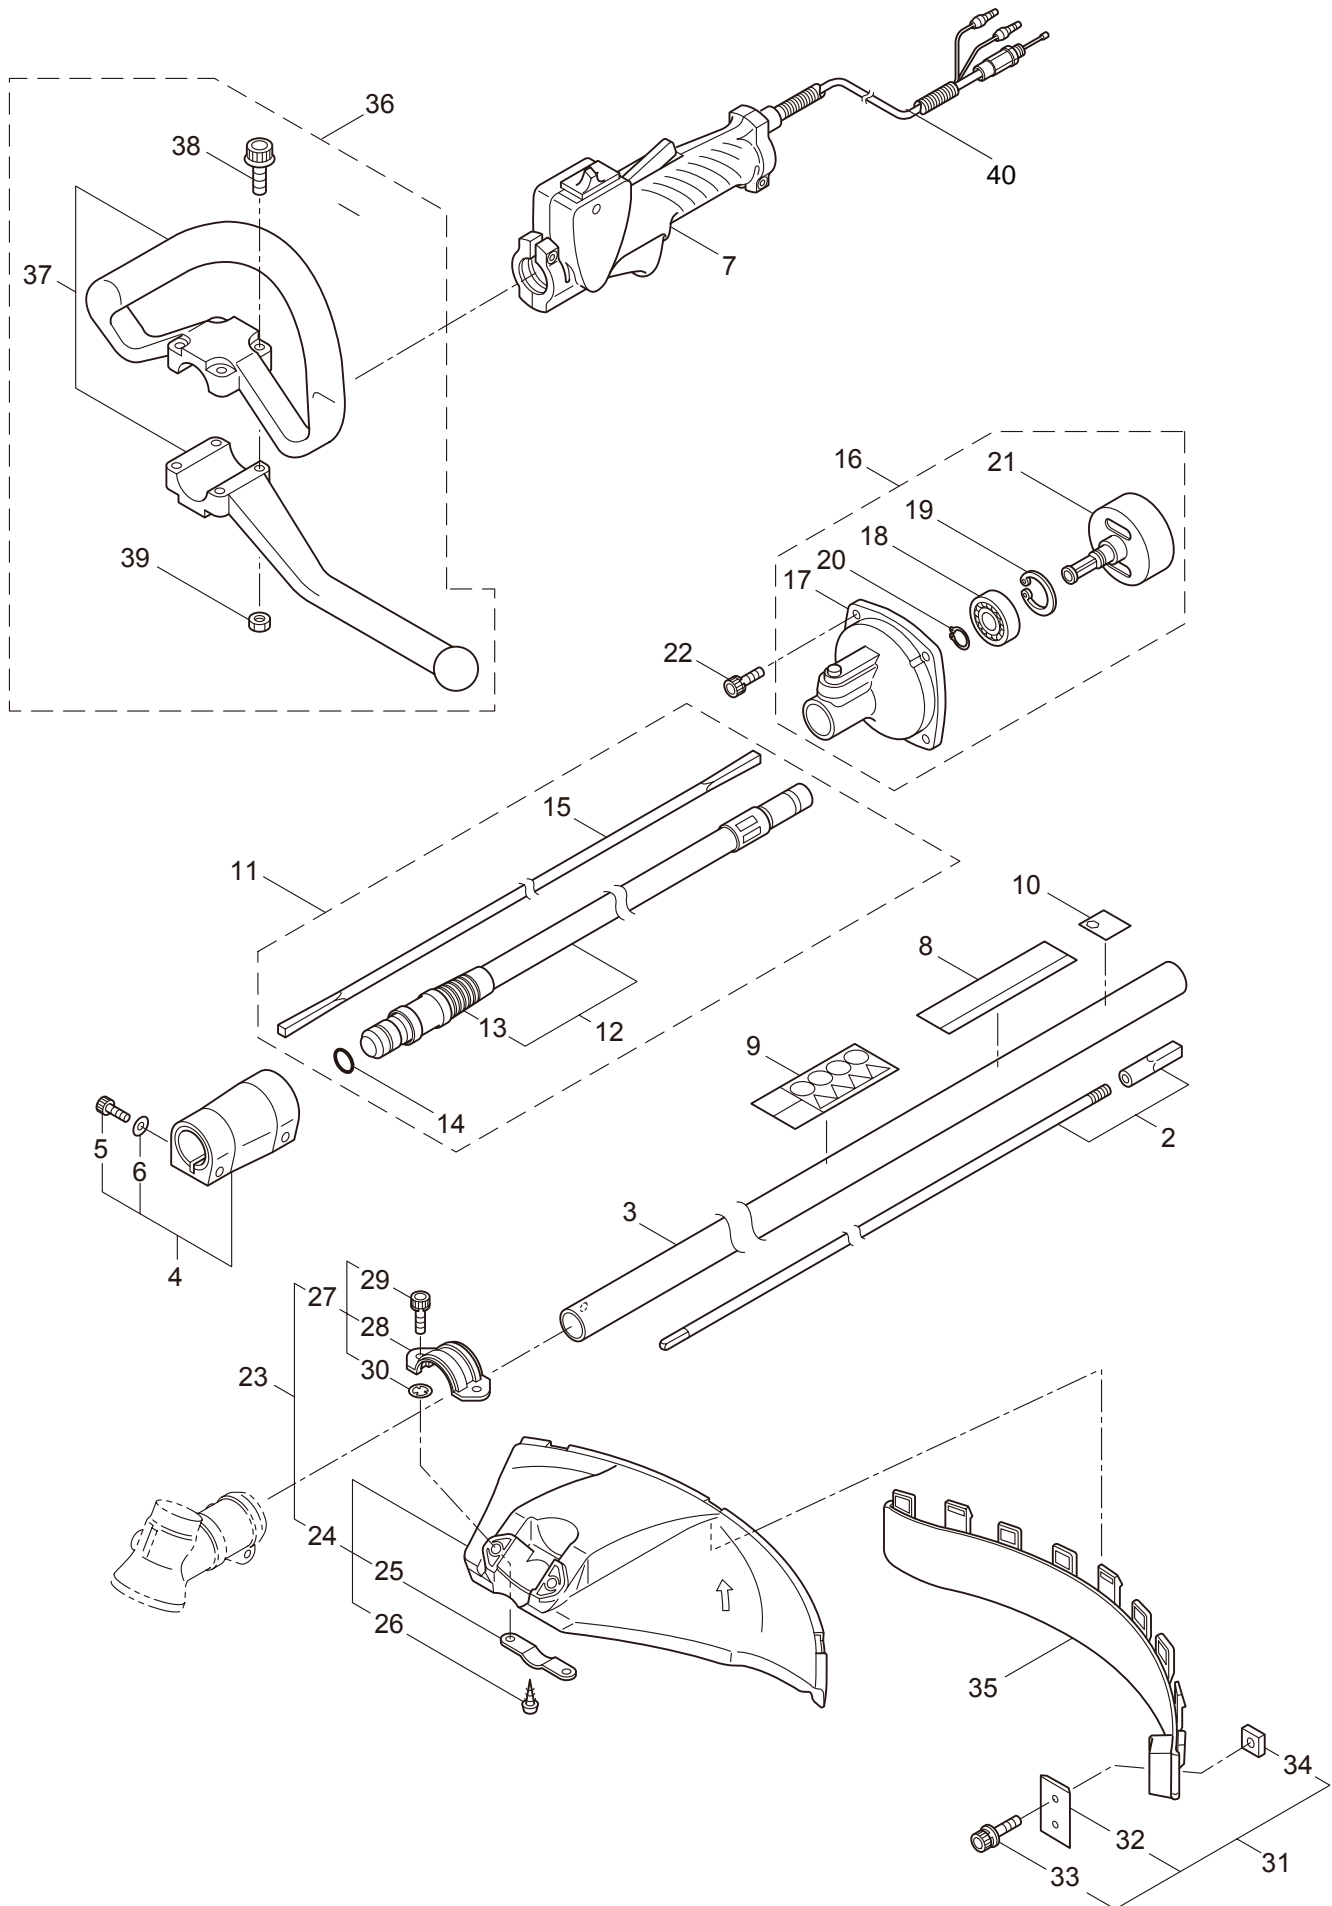


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	363863	BKC4321RS	1	
1-2	216965	Driveshaft Ass'y	1	
1-3	224125	Driveshaft Tube	1	
1-4	215730	Joint Pipe Ass'y	1	Incl.5,6
1-5	087786	Cap Screw	2	M5x25
1-6	012487	Washer	1	M5
1-7	232101	Throttle Lever Ass'y	1	
1-8	232795	Label	1	BKC4321RS
1-9	223188	Label	1	
1-10	228207	Label	1	
1-11	222530	Outer Ass'y	1	Incl.12-15
1-12	222531	Outer	1	Incl.13
1-13	215885	Cover	1	
1-14	011338	O-Ring	1	P18
1-15	211895	Inner Shaft	1	
1-16	222416	Clutch Case Ass'y	1	Incl.17-21
1-17	222085	Clutch Case	1	
1-18	222442	Bearing	1	#6202 2RS
1-19	012380	Snap Ring	1	#35
1-20	550118	Snap Ring	1	WR15
1-21	220336	Clutch Drum	1	
1-22	219113	Cap Screw	4	M6x20
1-23	232092	Safety Cover Ass'y	1	Incl.24-30
1-24	231262	Safety Cover Ass'y	1	Incl.25,26
1-25	223180	Threaded Bracket	1	
1-26	221580	Screw	1	4x8
1-27	232093	Bracket Ass'y	1	Incl.28-30
1-28	223179	Bracket	1	
1-29	220632	Cap Screw	2	M6x30
1-30	231704	Washer	2	6x13xt1.0
1-31	231882	String Cutter Ass'y	1	Incl.32-34
1-32	230747	String Cutter	1	
1-33	261250	Cap Screw	1	M5x20
1-34	228325	Nut	1	
1-35	230748	Cover Extention	1	
1-36	232104	Loop Handle Ass'y	1	Incl.37-39
1-37	226462	Loop Handle	1	
1-38	215608	Cap Screw	4	M5x30x16
1-39	081027	Nut	4	M5
1-40	332330	Throttle Lever wire	1	

2. BKC4321RS
GEARCASE

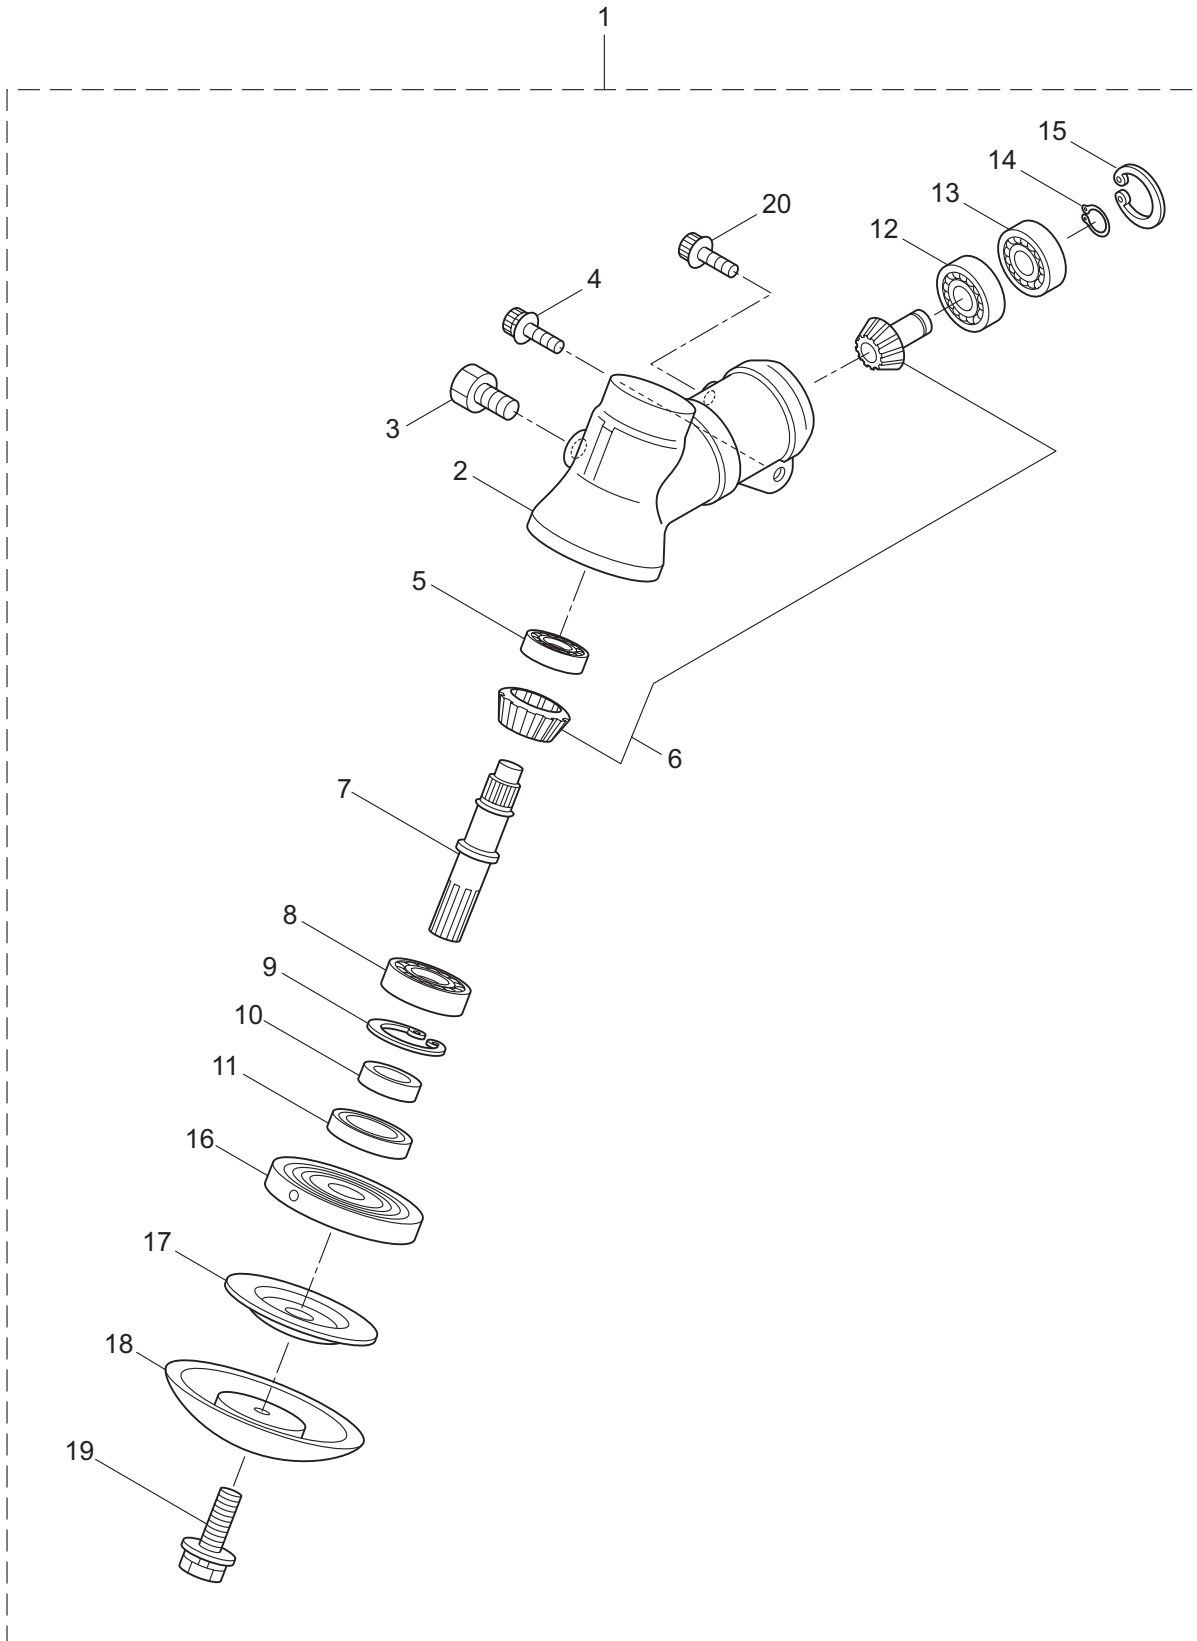


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	231885	Gearcase Ass'y	1	Incl.2-20
2-2	223050	Gearcase	1	
2-3	089101	Bolt	1	M8x10
2-4	217134	Bolt	1	M6x30
2-5	210560	Bearing	1	#609
2-6	227102	Gear Set	1	
2-7	217057	Blade Shaft	1	
2-8	022009	Bearing	1	#6002
2-9	016732	Snap Ring	1	#32
2-10	212394	Collar	1	15x22x8L
2-11	211818	Oil Seal	1	D22 32 6
2-12	014490	Bearing	1	#6000
2-13	106933	Bearing	1	#6000Z
2-14	014210	Snap Ring	1	#10
2-15	054676	Snap Ring	1	#26
2-16	217060	Boss Adapter	1	
2-17	217061	Clamping Washer	1	
2-18	210308	Stabilizer	1	
2-19	215610	Bolt	1	M8x22,Counterclockwise
2-20	217135	Bolt	1	M6x10

3. BKC4321RS
SUPPORT FRAME

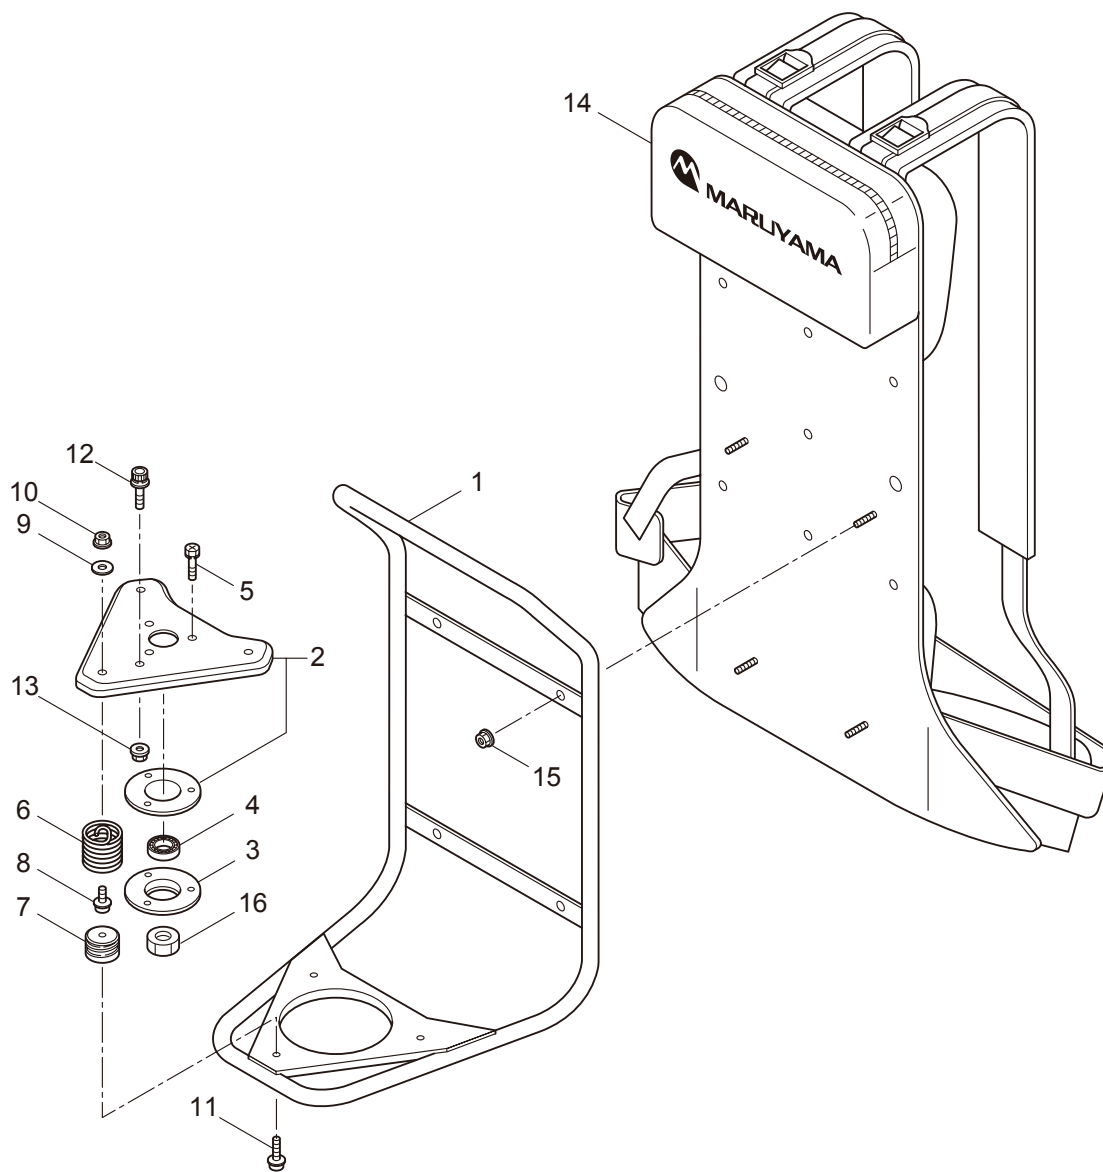


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	224730	Support Frame	1	
3-2	232316	Turn Bracket Ass'y	1	
3-3	211644	Bearing Case	1	
3-4	220619	Bearing	1	#6001UU
3-5	092578	Bolt	3	M5x10
3-6	231946	Spring	3	
3-7	231947	Spring Holder	3	
3-8	228250	Bolt	3	M5x12
3-9	231948	Washer	3	5.2x16xt1
3-10	215230	Nut	3	M5
3-11	231949	Screw	3	
3-12	223704	Cap Screw	1	M6x12
3-13	219959	Nut	1	M6
3-14	226490	Pad	1	
3-15	215230	Nut	4	M5
3-16	084020	Nut	1	M12

4. BKC4321RS
ENGINE

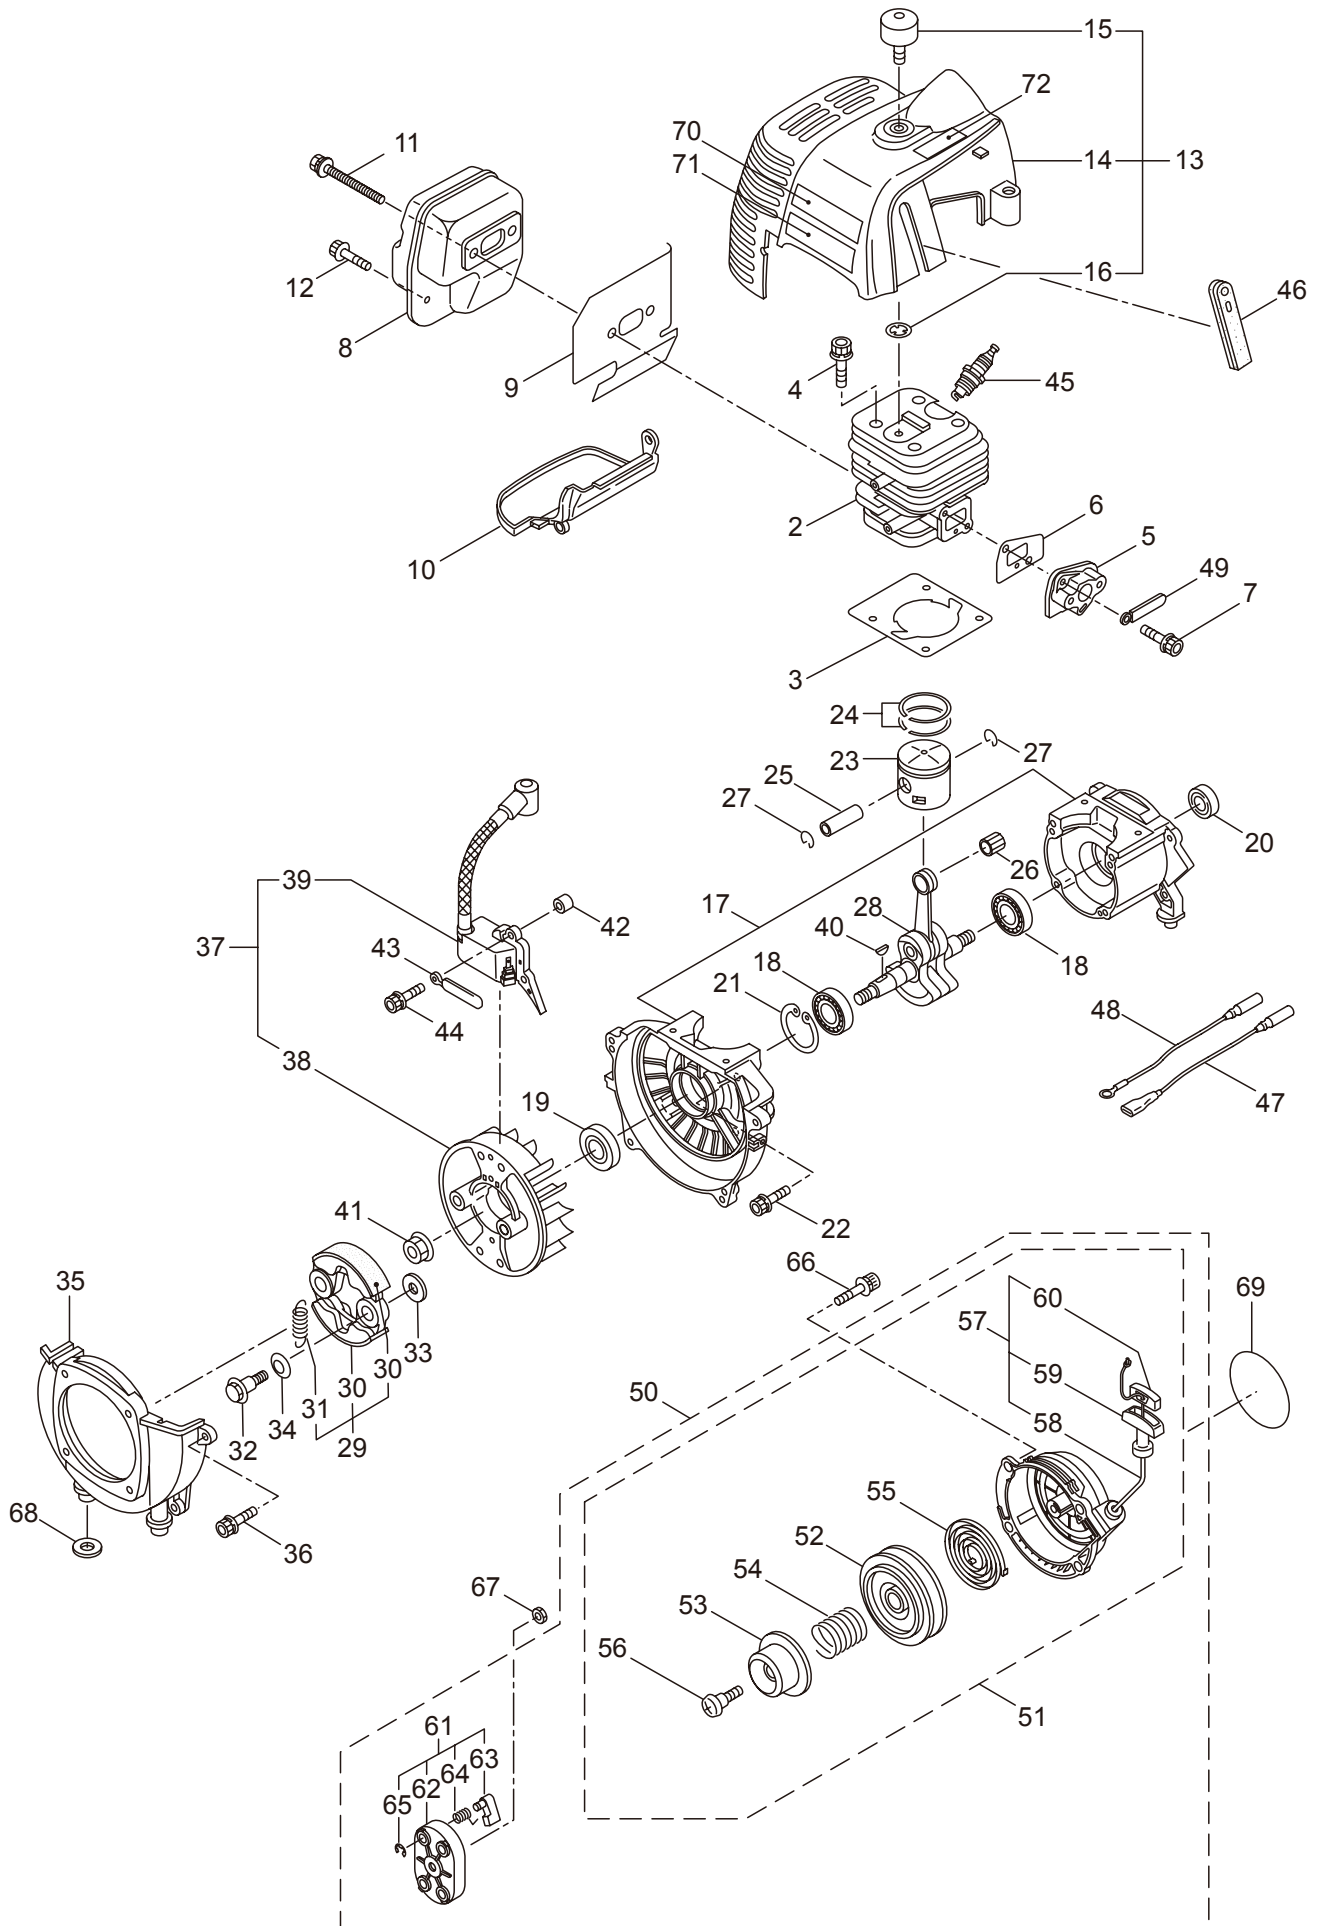


Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	858933	Engine	1	CE420/06
4-2	286278	Cylinder	1	New gasket required
4-3	285772	Gasket	1	
4-4	261246	Cap Screw	4	M5x25
4-5	285778	Insulator	1	New gasket required
4-6	285779	Gasket	1	
4-7	265924	Cap Screw	2	M5x25
4-8	288334	Muffler Comp.	1	
4-9	285783	Gasket	1	
4-10	285784	Under Cover	1	
4-11	266713	Cap Screw	2	M5x60
4-12	283315	Screw	1	M5x12W-12
4-13	286891	Top Cover Ass'y	1	Incl.14-16
4-14	285786	Top Cover	1	
4-15	285843	Knob	1	
4-16	286362	Washer	1	M6
4-17	285789	Crankcase	1	
4-18	262658	Bearing	2	#6202C3
4-19	262660	Oil Seal	1	TC15357
4-20	262565	Oil Seal	1	ISCD15257
4-21	012380	Snap Ring	1	#35
4-22	261612	Cap Screw	4	M5x30
4-23	285795	Piston	1	
4-24	262476	Piston Ring	2	(2)Required
4-25	262749	Piston Pin	1	
4-26	262659	Bearing,Needle	1	KTV111414EG01B2
4-27	262479	Clip,Piston Pin	2	
4-28	285797	Crankshaft/Conn.Rod Ass'y	1	
4-29	282743	Clutch Ass'y	1	Incl.30,31
4-30	282624	Clutch Shoe	2	(2)required
4-31	263617	Spring,Clutch	1	2.3-44.8L
4-32	282321	Cap Screw	2	M8x1.25
4-33	262683	Washer	2	8x22xt1.2
4-34	262682	Wave Washer	2	
4-35	282285	Fan Cover	1	
4-36	261250	Cap Screw	4	M5x20
4-37	287597	Magneto Ass'y	1	Incl.38,39
4-38	286207	Rotor/Fan	1	
4-39	287598	Ignition Coil Ass'y	1	
4-40	261076	Woodruff Key	1	3x10
4-41	262731	Nut,Rotor	1	M10
4-42	280381	Spacer	2	
4-43	287714	Clamp	1	
4-44	261256	Cap Screw	2	M4x25
4-45	262483	Spark Plug	1	NGK BP6R6Y

4. BKC4321RS
ENGINE

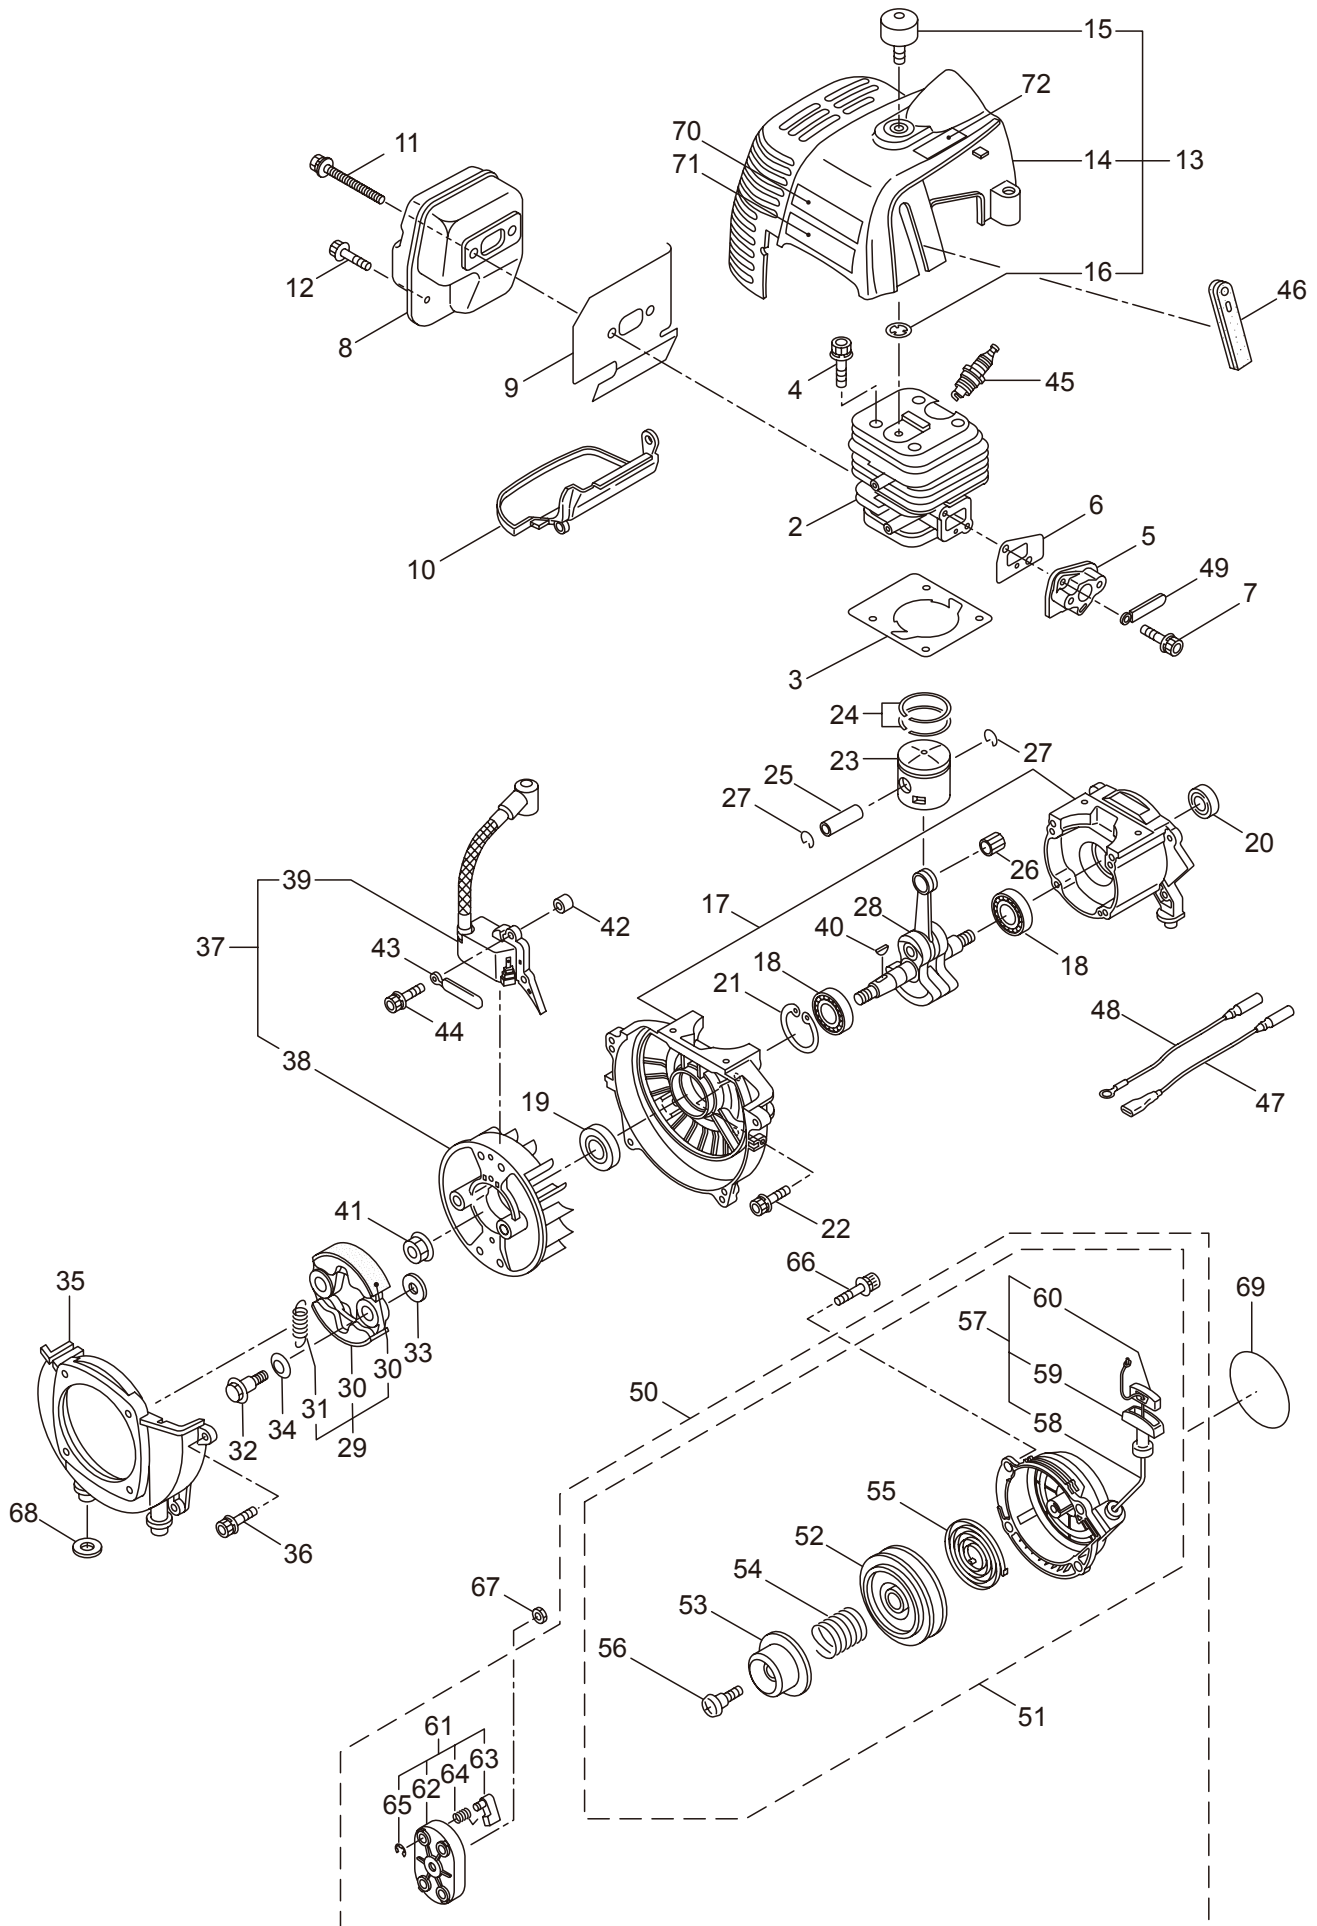














Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-46	286988	Grommet	1	
4-47	288416	Wire, Lead	1	
4-48	282087	Lead	1	
4-49	264588	Clamp	1	
4-50	285809	Recoil Starter Ass'y	1	Incl.51-65
4-51	285810	Starter Ass'y	1	Incl.52-60
4-52	286291	Reel	1	
4-53	286292	Cam Plate	1	
4-54	286293	Damper Spring	1	
4-55	280995	Spiral Spring	1	
4-56	286295	Set Screw	1	
4-57	286296	Starter Rope Ass'y	1	Incl.58-60
4-58	286297	Starter Rope	1	3.8x1000
4-59	262633	Starter Grip	1	
4-60	262981	Cap	1	
4-61	285679	Starter Pulley Ass'y	1	Incl.62-65
4-62	285680	Starter Pulley	1	
4-63	285681	Pawl	2	
4-64	285682	Return Spring	2	
4-65	262638	E-Ring	2	
4-66	268940	Screw	4	M5x18
4-67	285736	Nut	1	M8
4-68	285735	Packing	4	
4-69	287142	Label	1	REVERSE2/CE420
4-70	265694	Label	1	
4-71	262714	Label	1	MARUYAMA
4-72	267561	Label	1	

5. BKC4321RS
 CARBURETOR, FUEL TANK

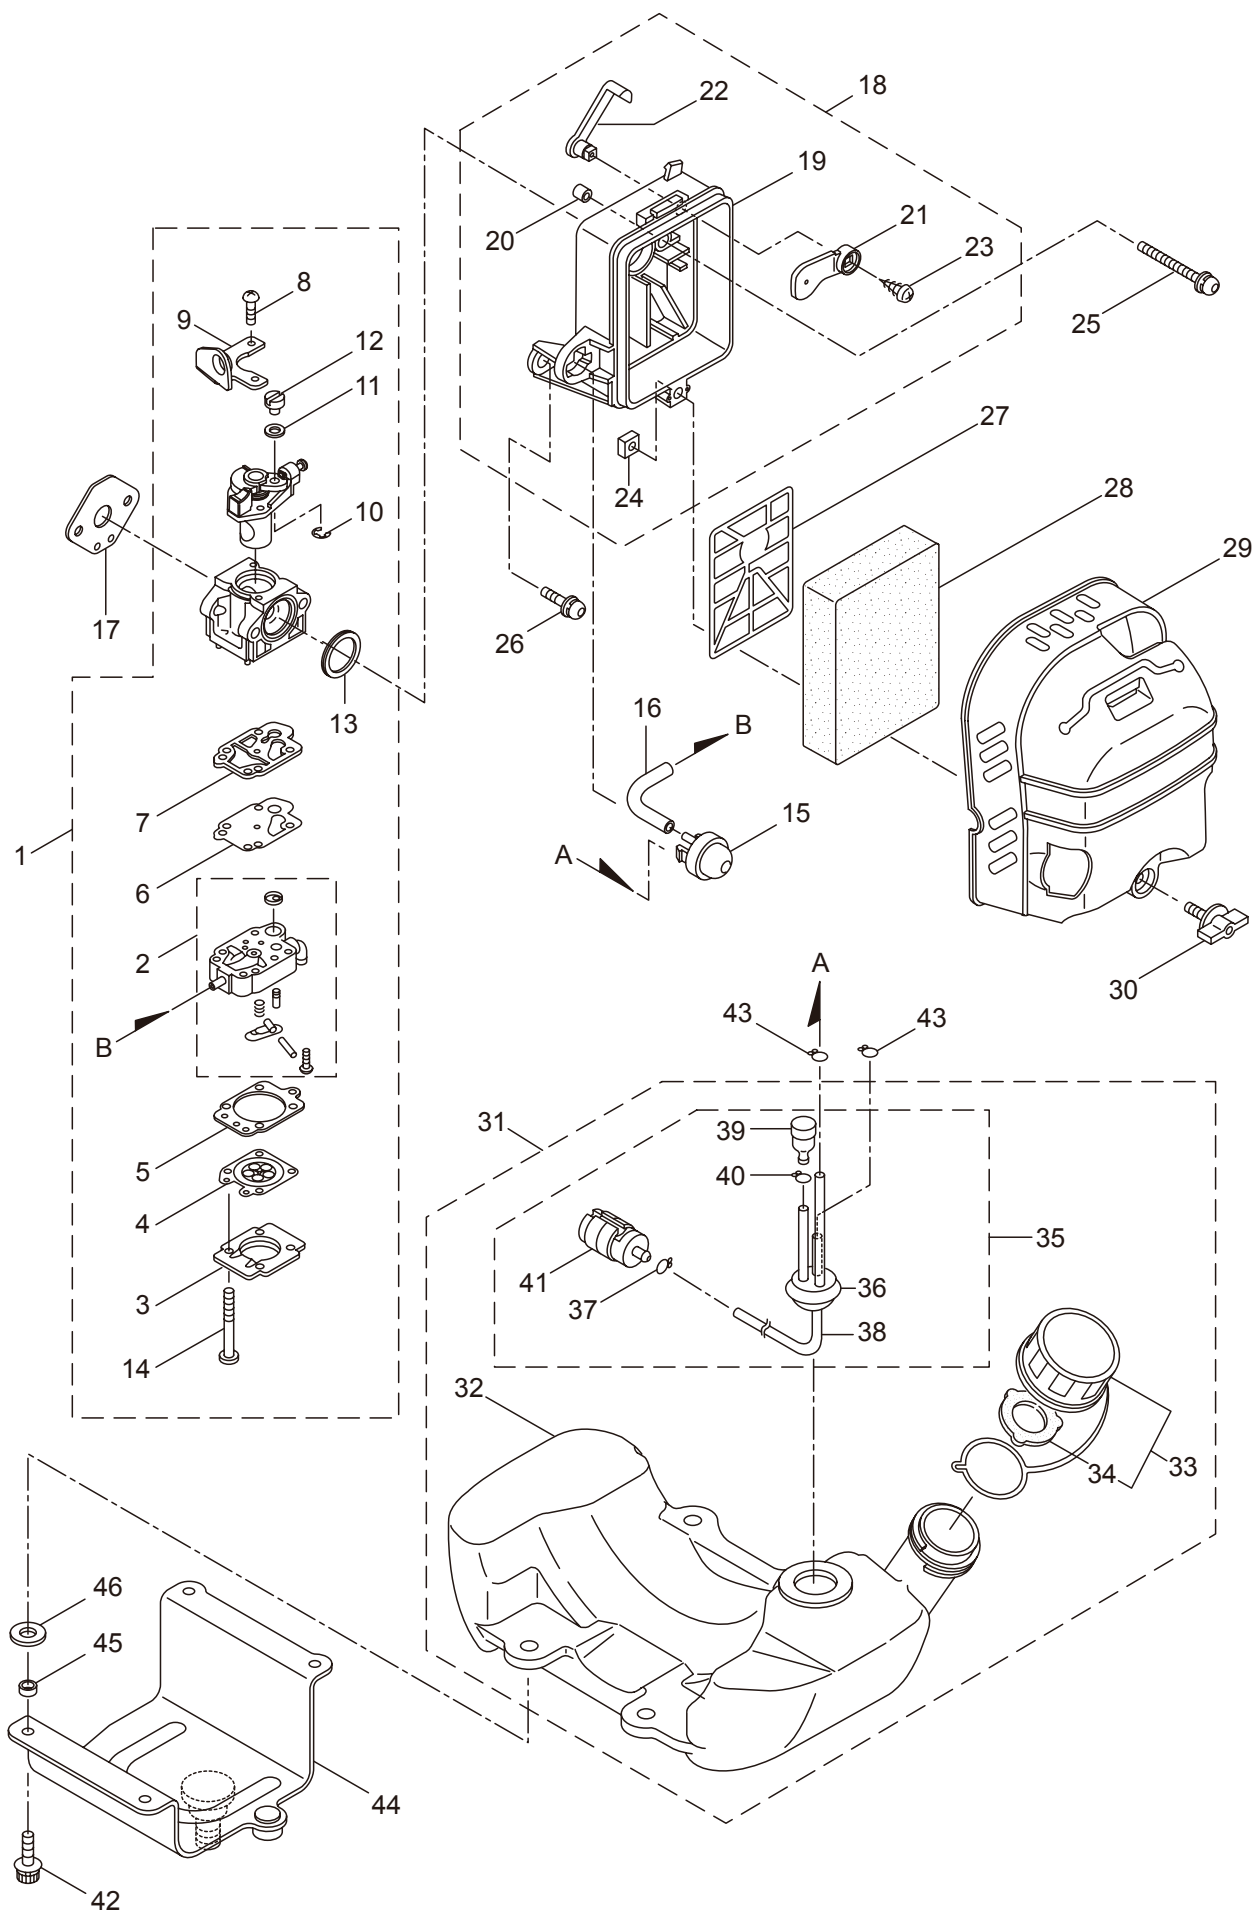

Ref. No.	Part No.	Part Name	Q'ty	Remarks
5-1	288364	Carburetor Ass'y	1	Incl.2-14 New Gasket required
5-2	283124	Pump Body	1	
5-3	263726	Cover Plate	1	
5-4	283905	Diaphragm, Meterring	1	
5-5	263727	Gasket	1	
5-6	262994	Diaphragm,Fuel Pump	1	
5-7	282576	Gasket	1	
5-8	261875	Screw	2	
5-9	264677	Bracket	1	
5-10	261876	E-Ring	1	
5-11	264678	Washer	1	
5-12	261658	Swivel	1	
5-13	261657	Packing	1	
5-14	263737	Screw	4	
5-15	282299	Pump	1	
5-16	282512	Fuel Pipe	1	
5-17	282301	Gasket	1	
5-18	282302	Case Ass'y	1	Incl.19-24
5-19	282303	Case Body	1	
5-20	282484	Sleeve	3	
5-21	282304	Valve	1	
5-22	282305	Lever	1	
5-23	269032	Screw	1	
5-24	269423	Nut	1	
5-25	261814	Cap Screw	2	M5x50
5-26	264807	Cap Screw	1	M5x16
5-27	282481	Plate	1	
5-28	282306	Element	1	
5-29	285814	Cleaner Cover	1	
5-30	281438	Knob	1	
5-31	286893	Fuel Tank Ass'y	1	Incl.32-41
5-32	286067	Fuel Tank	1	
5-33	281564	Fuel Tank Cap Ass'y	1	Incl.34
5-34	269377	Gasket	1	
5-35	286794	Fuel Pipe Pick-up Ass'y	1	Incl.36-41
5-36	268065	Grommet	1	
5-37	261117	Clip	1	
5-38	262649	Fuel Pipe	1	
5-39	261590	Breather	1	
5-40	261117	Clip	1	
5-41	267328	Fuel Filter Ass'y	1	
5-42	261250	Cap Screw	4	M5x20
5-43	261117	Clip	2	
5-44	287270	Bracket	1	
5-45	288592	Sleeve	4	
5-46	285735	Packing	4	

6. BKC4321RS
ACCESSORIES

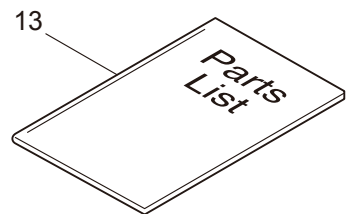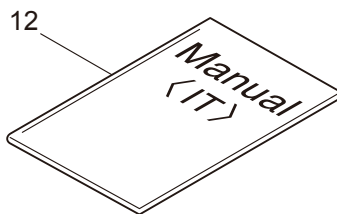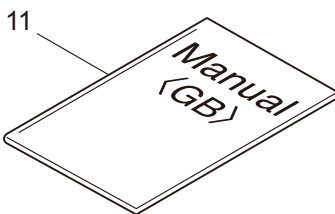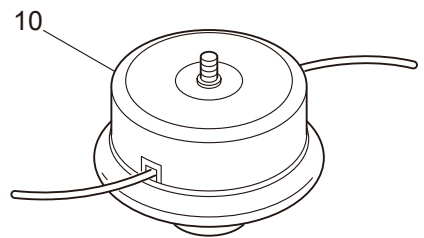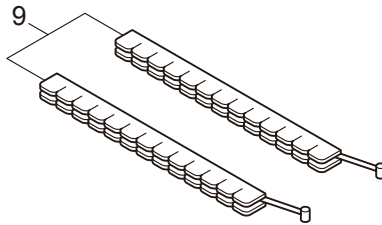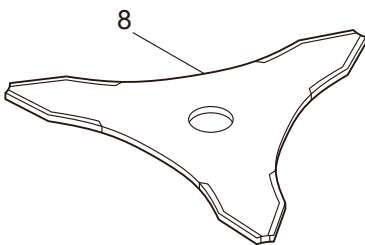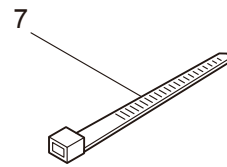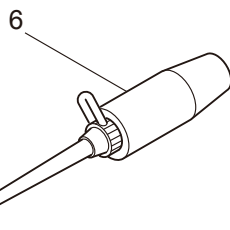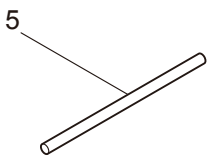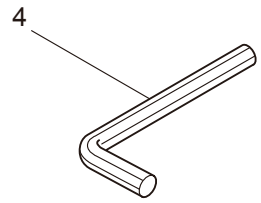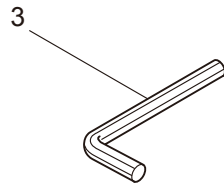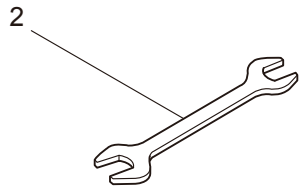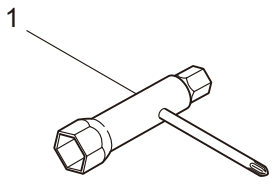

Ref. No.	Part No.	Part Name	Q'ty	Remarks
6-1	210418	Box Spanner	1	13x19x(+)
6-2	022865	Double-ended Wrench	1	8x10
6-3	219432	Wrench	1	4mm
6-4	219433	Wrench	1	5mm
6-5	210181	Lever Handle	1	3.5x170L
6-6	211337	Grease Tube	1	
6-7	220548	Band	2	
6-8	227910	3-Teeth Blade	1	
6-9	220534	Blade Cover	1	
6-10	227409	Nylon Head (L) 5	1	
6-11	232799	Instruction Manual	1	<GB>
6-12	229324	Instruction Manual	1	<IT>
6-13	523205	Parts List	1	BKC4321RS