

# PARTS LIST

MIP2524S

## CONTENTS

1. MAIN BODY .....	1
2. ENGINE .....	3
3. RECOIL STARTER.....	7
4. CARBURETOR, FUEL TANK .....	9
5. ACCESSORIES .....	11


2020. 07.



P/N 525043


MIP2524S

1. MAIN BODY

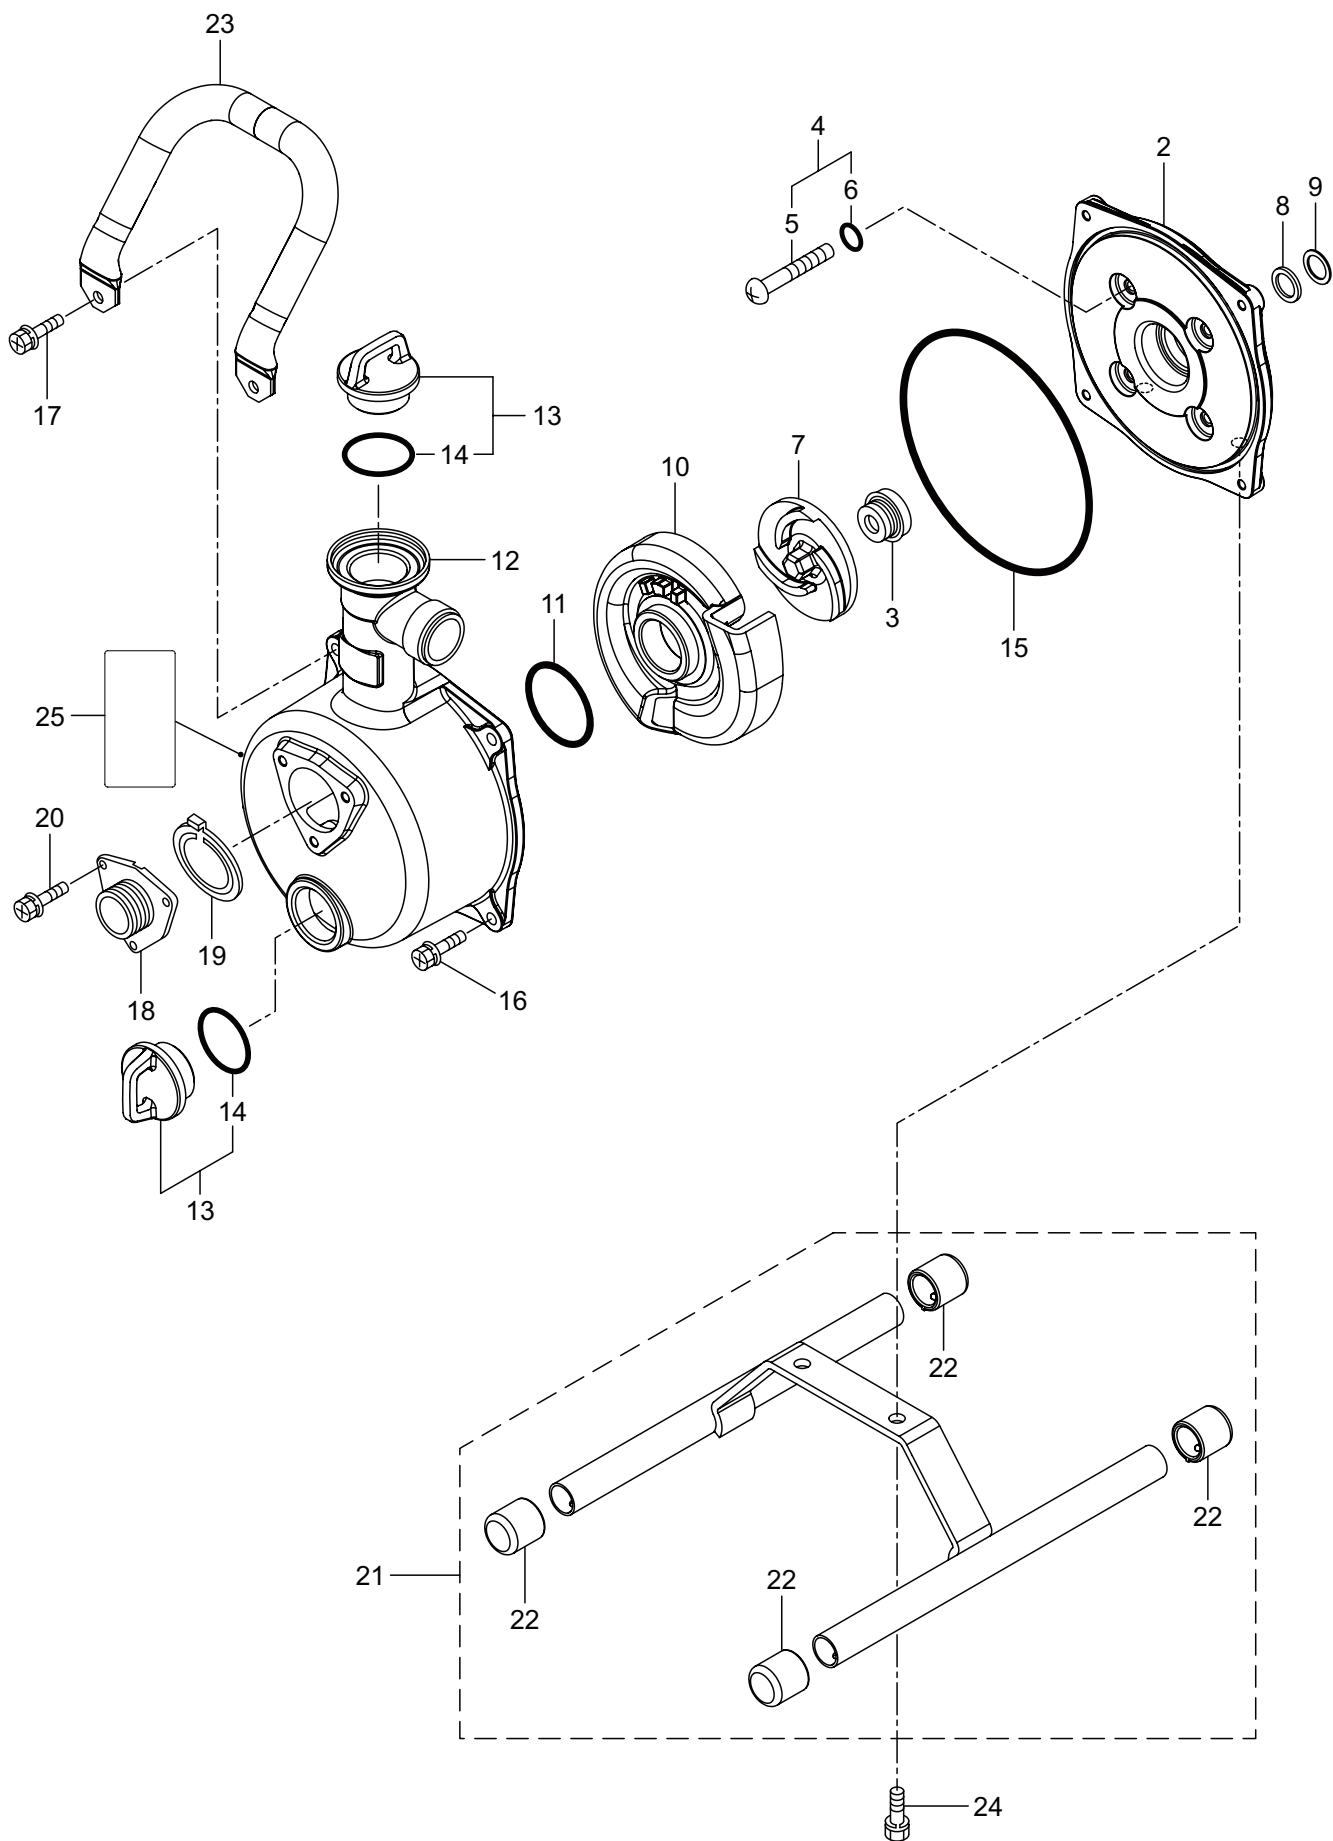


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	332326	MIP2524S	1	
1-2	246720	Casing Cover	1	
1-3	240002	Mechanical Seal	1	
1-4	547013	Screw	4	M5x0.8x40, with O-Ring
1-5	550162	Screw	4	M5x0.8x40
1-6	013918	O-Ring	4	S5
1-7	246721	Impeller	1	
1-8	284812	Spacer	1	T0.5
1-9	284813	Spacer	1	T0.3
1-10	246722	Scroll	1	
1-11	027533	O-Ring	1	P42
1-12	246723	Casing	1	
1-13	246724	Plug Ass'y	2	Incl.14
1-14	246726	O-Ring	2	P30
1-15	012615	O-Ring	1	G140
1-16	126541	Bolt	2	M6x20
1-17	092554	Bolt	2	M6x25
1-18	240553	Suction Port	1	
1-19	283914	Check Valve	1	
1-20	125824	Bolt	3	M6x16
1-21	246727	Base Ass'y	1	Incl.22
1-22	246729	Pad	4	
1-23	246730	Handle	1	
1-24	092513	Bolt	2	M8x16
1-25	247499	Label	1	MIP2524S

MIP2524S  
2. ENGINE

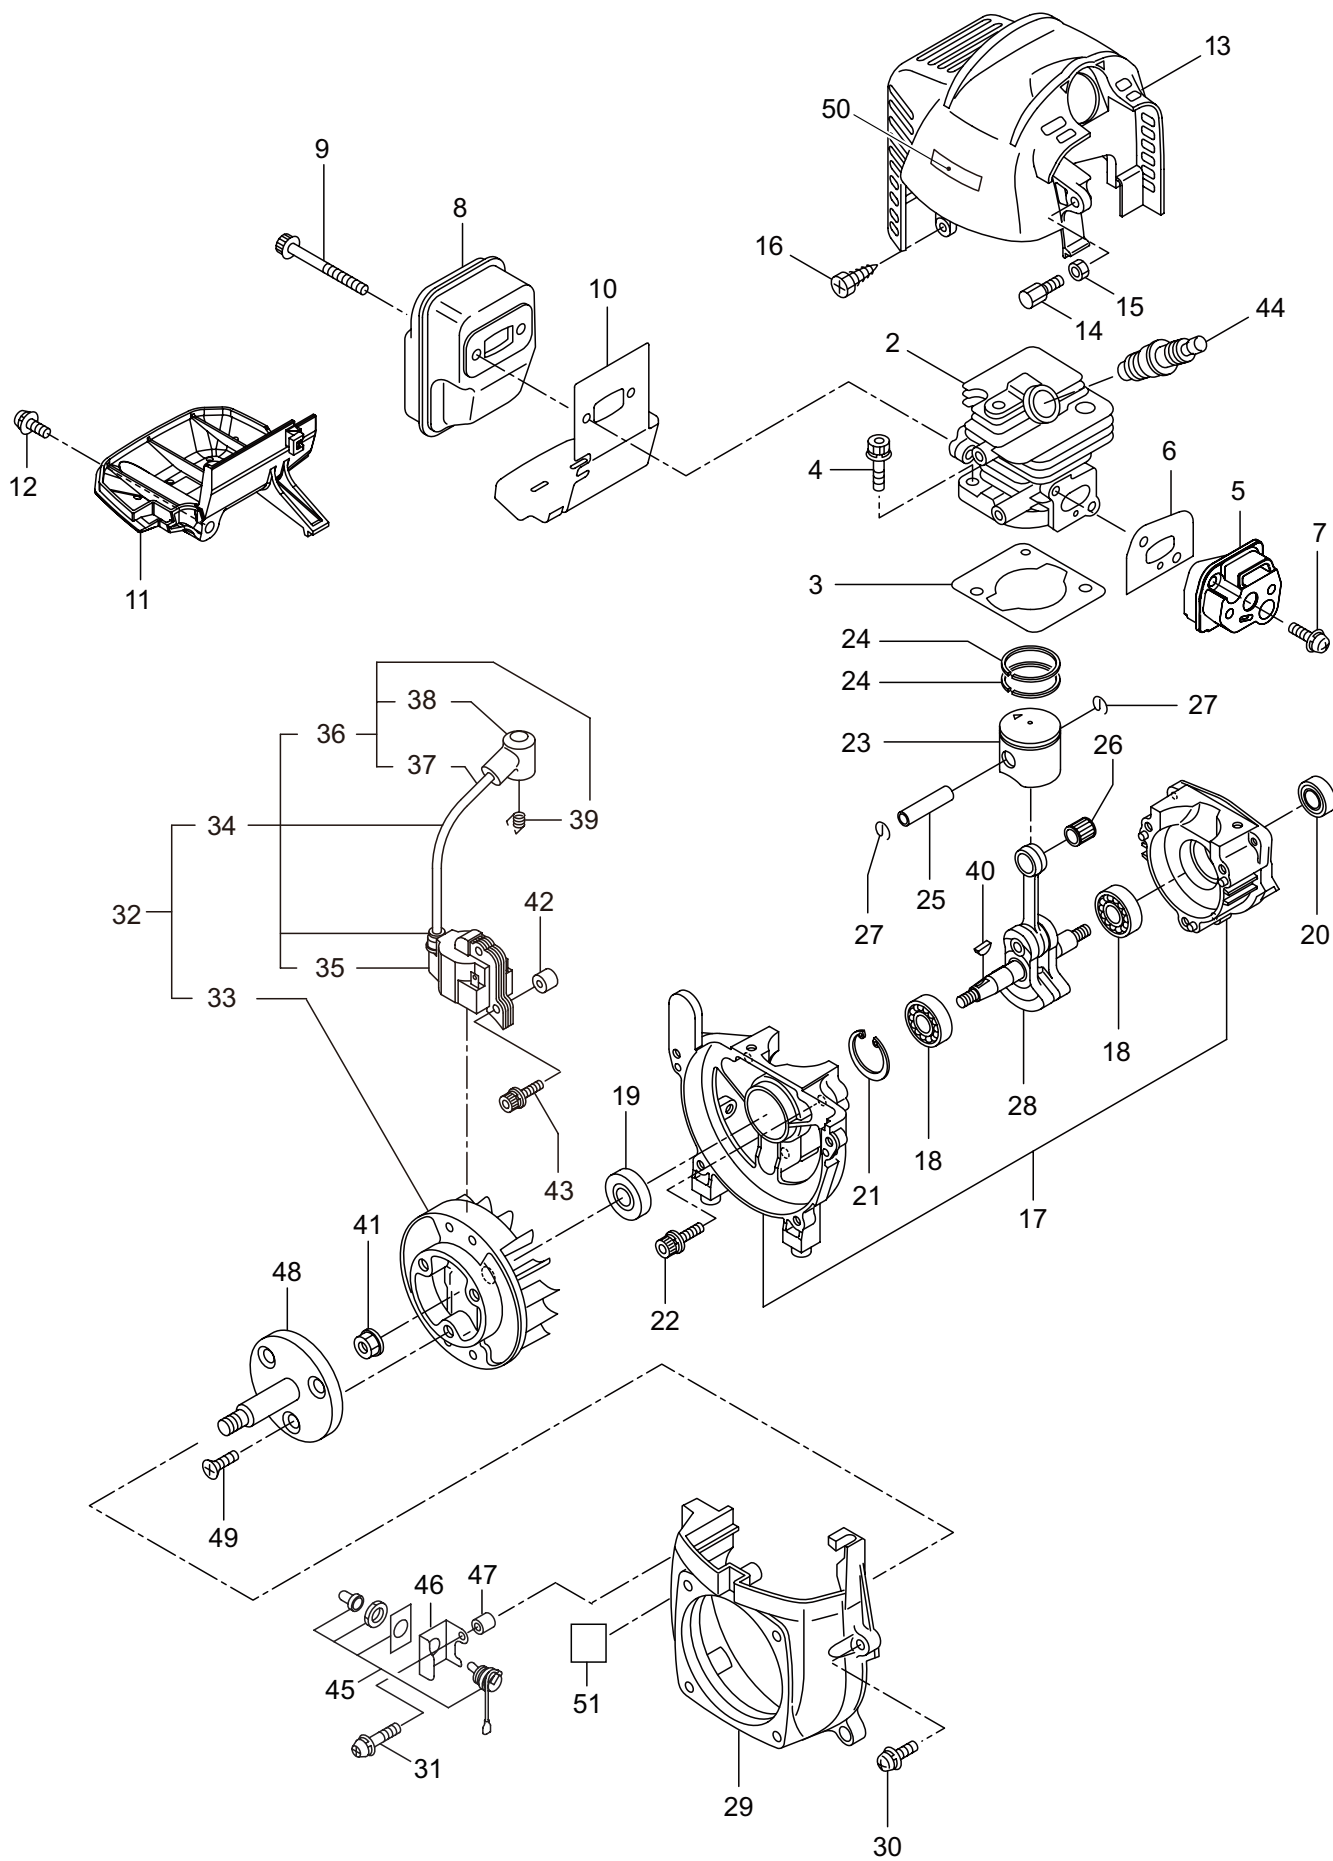


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	875498	Engine	1	EE232/05
2-2	289639	Cylinder	1	
2-3	289643	Gasket	1	
2-4	267290	Cap Screw	2	M5x20
2-5	272744	Insulator	1	New gasket required
2-6	267049	Gasket	1	
2-7	269826	Screw	2	M5x25
2-8	278096	Muffler Comp	1	
2-9	266402	Cap Screw	2	M5x55
2-10	273262	Gasket	1	
2-11	276868	Under Cover	1	
2-12	269827	Screw	1	M5x16
2-13	278022	Top Cover Comp	1	
2-14	265410	Adapter	1	
2-15	261878	Nut	1	
2-16	283978	Screw	1	4x16
2-17	273674	Crankcase	1	
2-18	280488	Bearing	2	PPL 6001
2-19	261492	Oil Seal	1	ISCD12287
2-20	261386	Oil Seal	1	ISCD12227
2-21	055185	Snap Ring	1	H28
2-22	261612	Cap Screw	3	M5x30
2-23	272204	Piston	1	
2-24	264891	Piston Ring	2	(2)required
2-25	261036	Piston Pin	1	
2-26	288520	Bearing, Needle	1	
2-27	261576	Clip,Piston	2	
2-28	274146	Crankshaft/Conn.Rod Ass'y	1	
2-29	283386	Fan Cover	1	
2-30	269831	Screw	3	M5x20
2-31	269826	Screw	1	M5x25
2-32	272731	Magneto Ass'y	1	Incl.33-39
2-33	269323	Rotor/Fan	1	
2-34	272067	Ignition Coil Ass'y	1	Incl.35-39
2-35	267401	Coil	1	
2-36	272068	Spark Plug Wire Ass'y	1	Incl.37-39
2-37	272069	Spark Plug Wire	1	
2-38	261074	Plug Boot	1	
2-39	261075	Connector	1	
2-40	261076	Woodruff Key	1	3x10
2-41	261417	Nut,Rotor	1	M8
2-42	280381	Spacer	2	
2-43	261256	Cap Screw	2	M4x25
2-44	288264	Spark Plug	1	BPMR8Y
2-45	284919	Stop Switch	1	

MIP2524S  
2. ENGINE

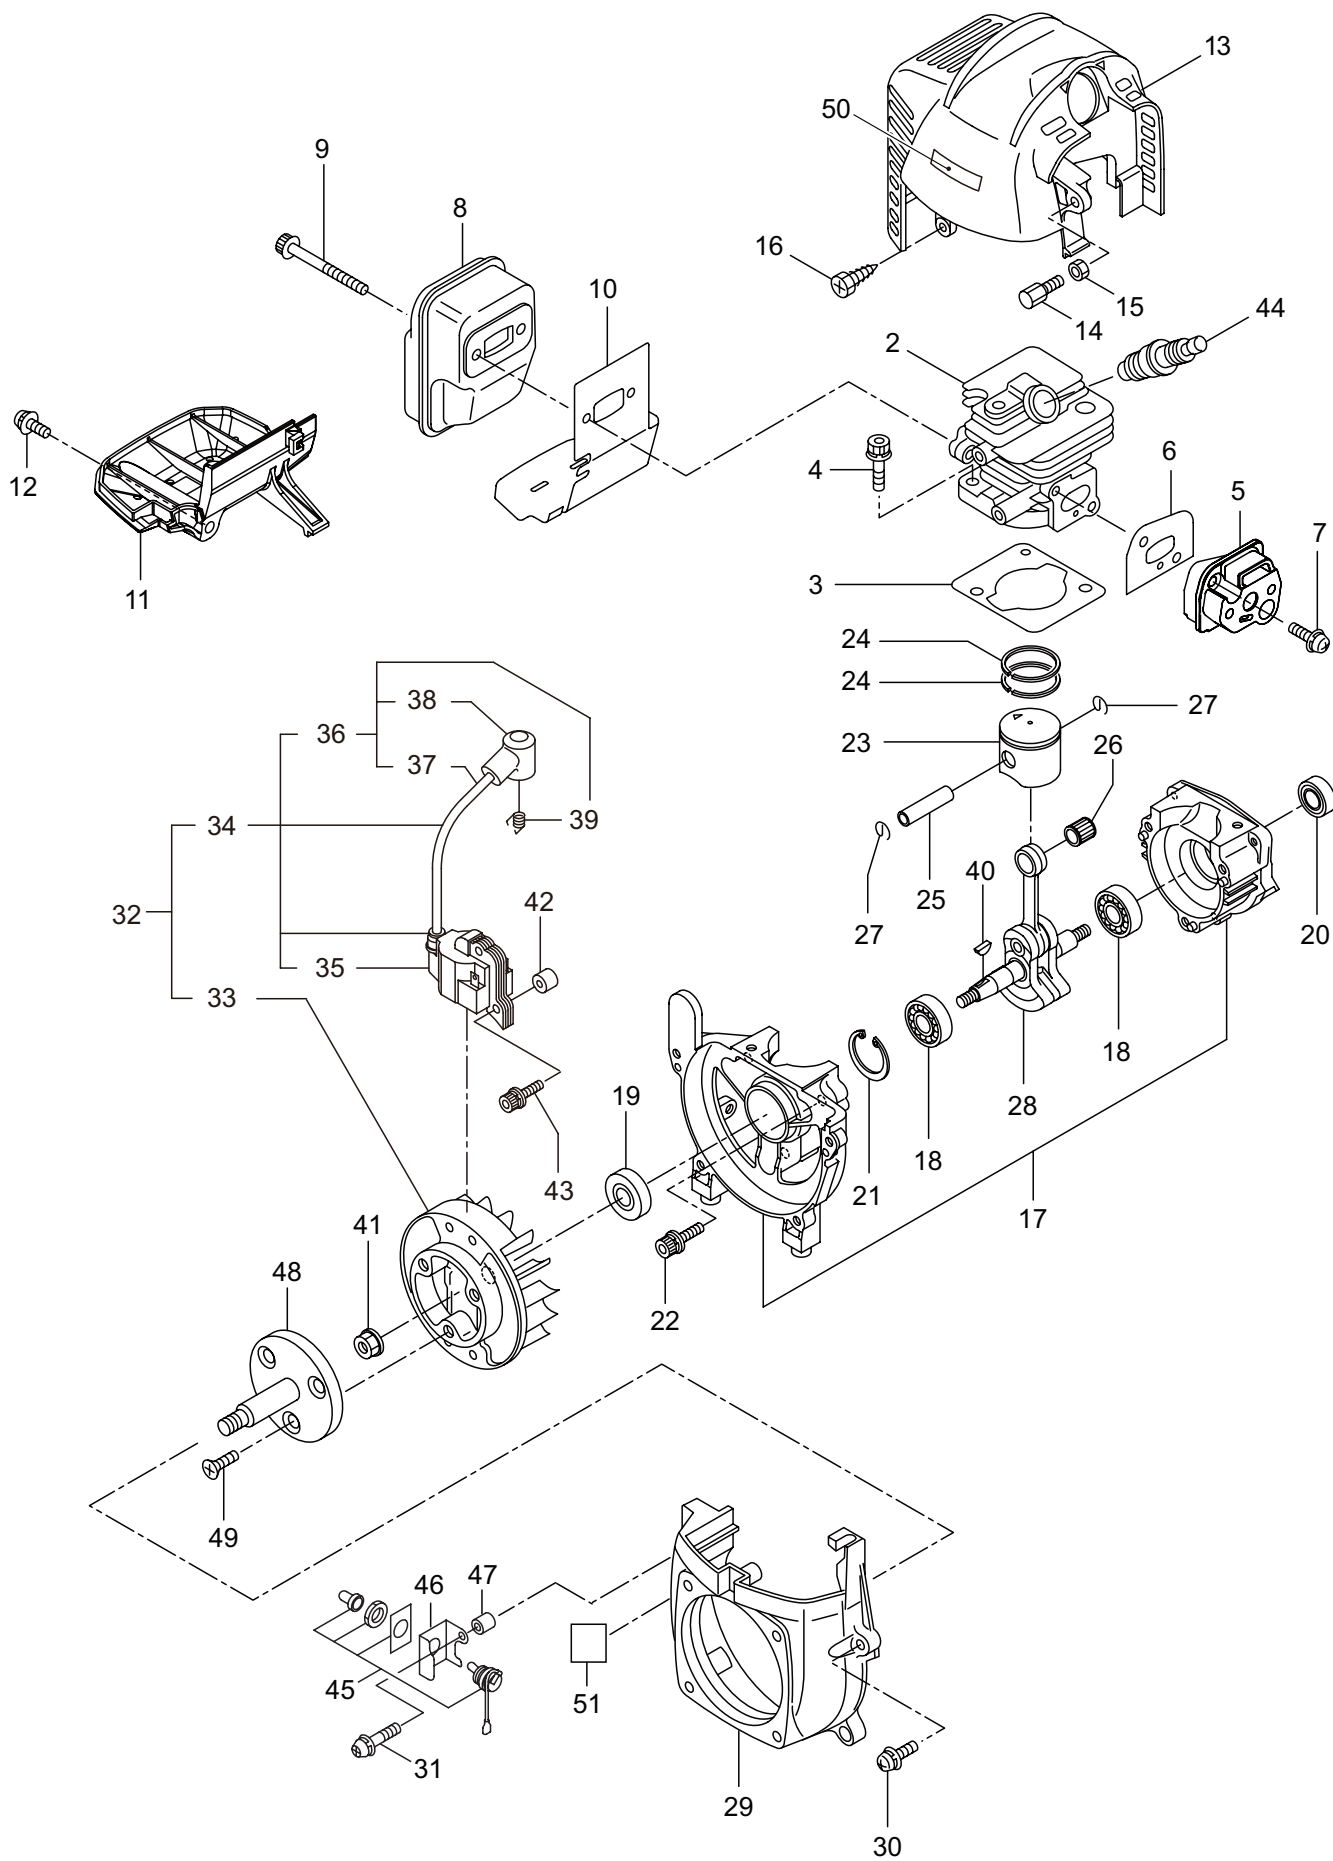

Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-46	269419	Stay	1	M6x15
2-47	284635	Coller	1	
2-48	269481	Shaft	1	
2-49	265312	Screw	3	
2-50	284587	Label	1	
2-51	269433	Label	1	107dB

MIP2524S  
3. RECOIL STARTER

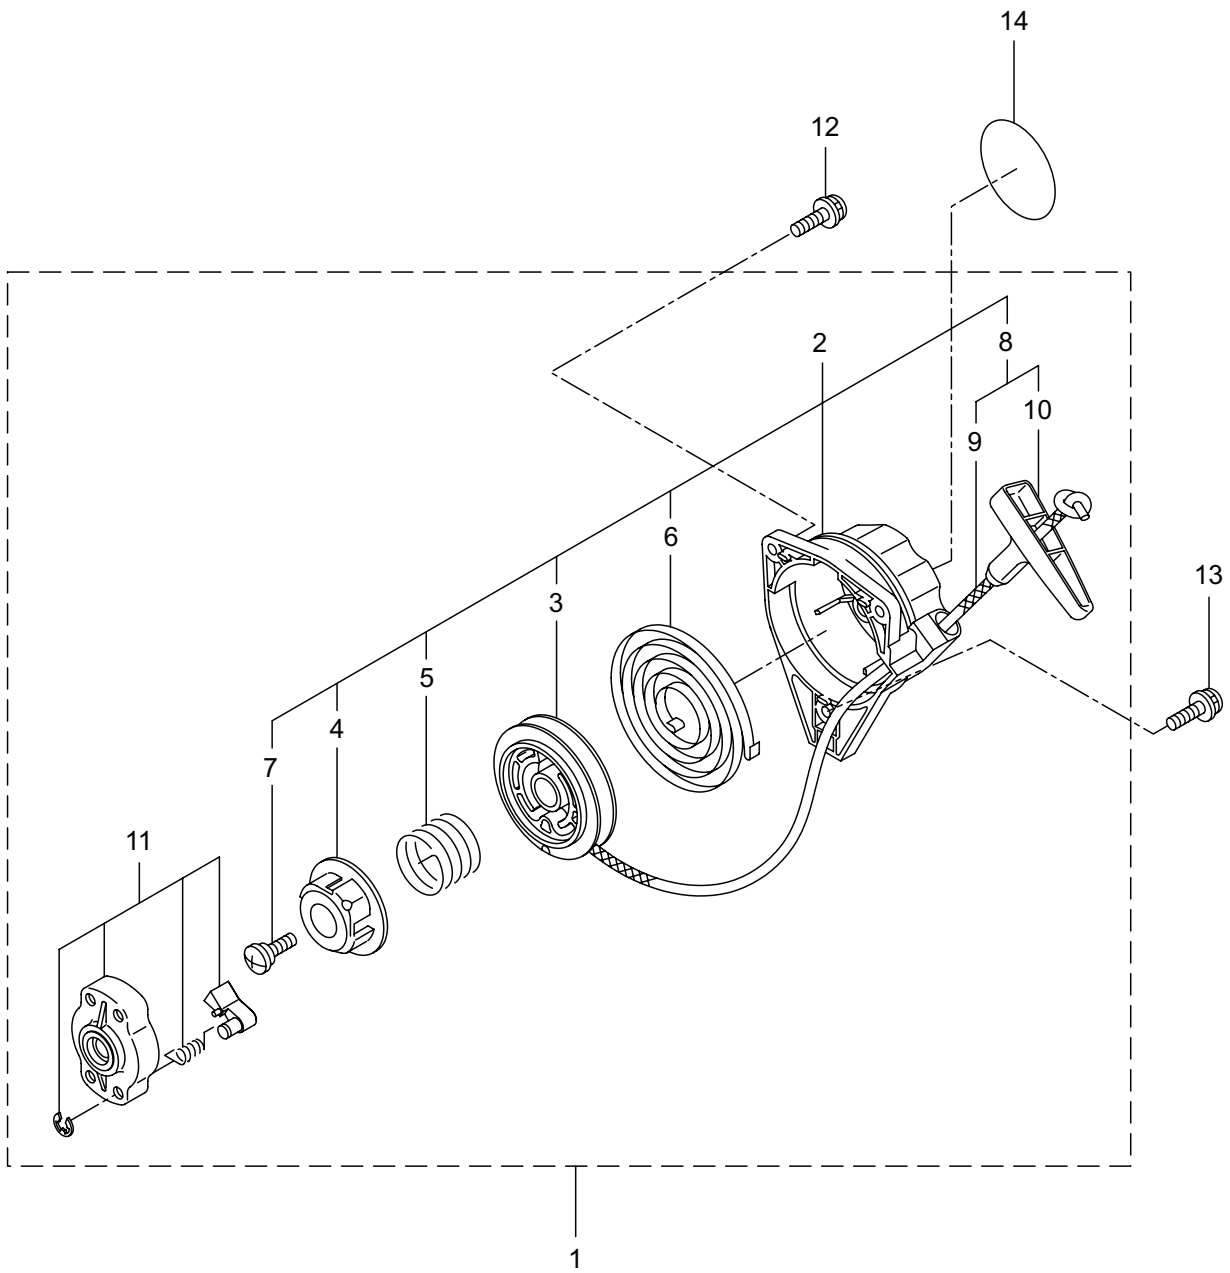




Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	282404	Recoil Starter Ass'y	1	Incl.2-11
3-2	282405	Recoil Ass'y	1	Incl.3-10
3-3	283411	Reel	1	
3-4	283412	Cam Plate	1	
3-5	280930	Spring	1	
3-6	280931	Spiral Spring	1	
3-7	267213	Screw	1	
3-8	280932	Starter Rope Ass'y	1	Incl.9,10
3-9	280933	Starter Rope	1	
3-10	267219	Starter Grip	1	
3-11	280934	Starter Pawl Ass'y	1	
3-12	280489	Screw	2	M4x20
3-13	269833	Screw	1	M4x16
3-14	247510	Label	1	EE232





MIP2524S

4. CARBURETOR, FUEL TANK

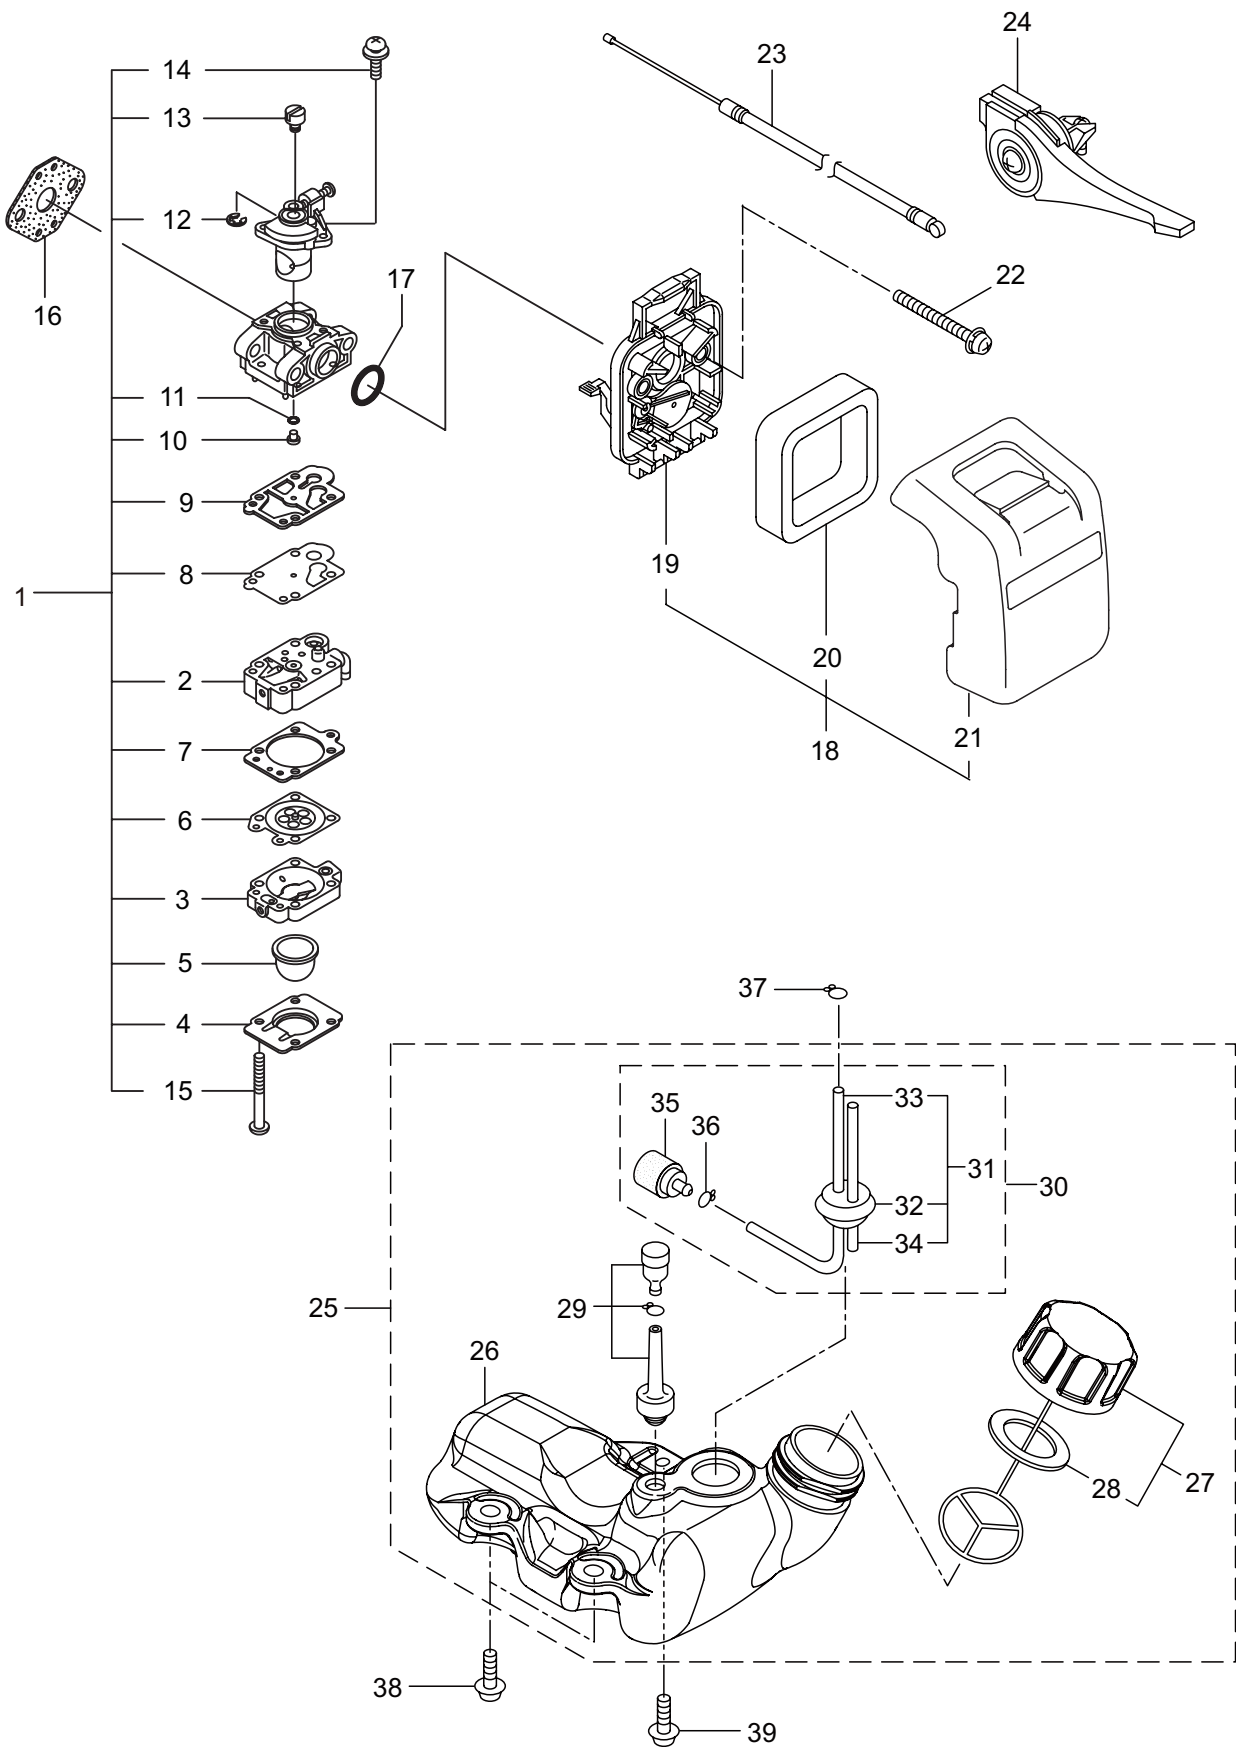

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	277881	Carburetor Ass'y	1	Incl.2-15 New gasket required
4-2	281597	Pump Body	1	
4-3	262991	Purge Body	1	
4-4	262992	Cover Plate	1	
4-5	261874	Primer Bulb	1	
4-6	283905	Diaphragm, Meterring	1	
4-7	262993	Gasket	1	
4-8	262994	Diaphragm,Fuel Pump	1	
4-9	282576	Gasket	1	
4-10	289396	Main Jet	1	
4-11	261871	O-Ring	1	
4-12	261876	E-Ring	1	
4-13	261658	Swivel	1	
4-14	264682	Screw	2	
4-15	262996	Screw	4	
4-16	261864	Gasket	1	Incl.19-21
4-17	264691	O-Ring	1	
4-18	278091	Cleaner Ass'y	1	
4-19	266433	Housing	1	
4-20	264695	Filter	1	
4-21	278760	Cleaner Cover	1	
4-22	269834	Screw	2	
4-23	272785	Throttle Cable	1	
4-24	287666	Throttle Lever	1	
4-25	247500	Fuel Tank Ass'y	1	
4-26	246757	Fuel Tank	1	Incl.28
4-27	275306	Fuel Tank Cap Ass'y	1	
4-28	274875	Gasket	1	
4-29	261696	Breather Ass'y	1	Incl.31-36
4-30	265752	Fuel Pipe Pick-up Ass'y	1	
4-31	264031	Fuel Pipe Ass'y	1	
4-32	261115	Grommet	1	160L 3x6x85L
4-33	261690	Fuel Pipe	1	
4-34	263038	Return Pipe	1	
4-35	277887	Filter Ass'y	1	
4-36	261117	Clip	1	
4-37	261117	Clip	1	
4-38	269828	Screw	2	
4-39	281208	Screw	1	

MIP2524S  
5. ACCESSORIES

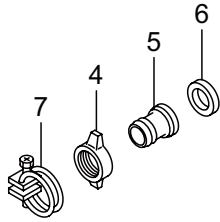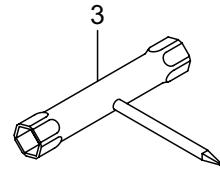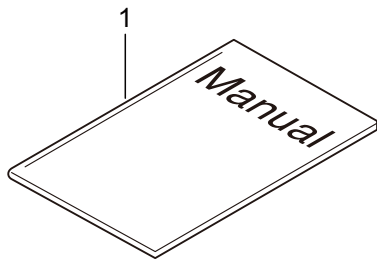

Ref. No.	Part No.	Part Name	Q'ty	Remarks
5-1	247509	Instruction Manual	1	13x19x(+)
5-2	284300	Strainer	1	
5-3	210418	Box Spanner	1	
5-4	272283	Hose Coupling	2	
5-5	240858	Hose Coupling	2	
5-6	240859	Packing	2	
5-7	284301	Hose Band	3	
5-8	240860	Hose Coupling	1	
5-9	240861	Hose Coupling	1	