

# PARTS LIST

## MP2532E2 EXPORT

### CONTENTS

1• MAIN BODY, ACCESSORIES .....	1~ 2
2• ENGINE .....	3~ 6
3• CARBURETOR, FUEL TANK .....	7~ 8


2001.10.



**MARUYAMA**


P/N.521435

1. MP2532E2  
 MAIN BODY, ACCESSORIES

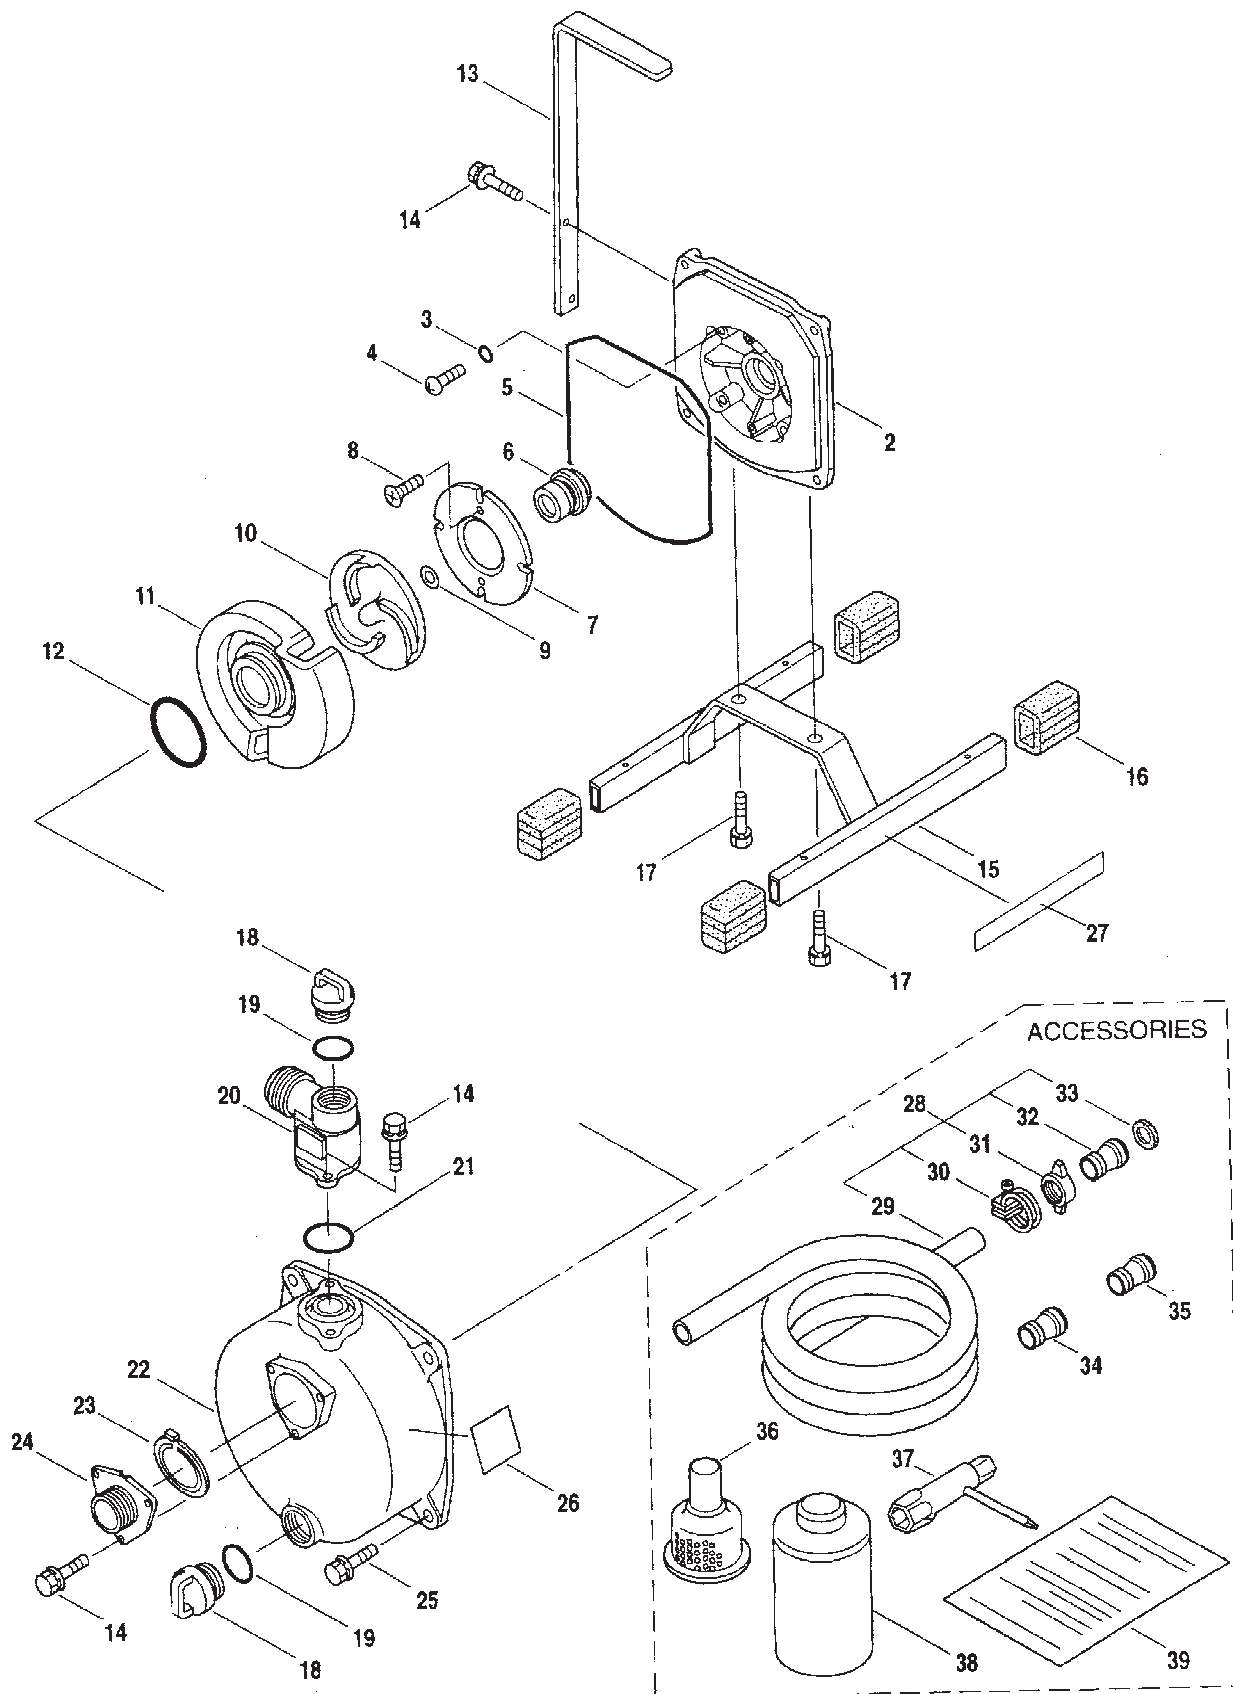


Ref.No.	Part No.	Part Name	Q'ty	Remarks
1-1	332200	MP2532E2	1	EXPORT
1-2	240750	Casing Cover	1	
1-3	013918	O-Ring	4	S5
1-4	550162	Screw	4	M5x0.8x40
1-5	014070	O-Ring	1	S150
1-6	240002	Mechanical Seal	1	
1-7	240654	Plate	1	
1-8	081709	Screw	2	M4x8
1-9	240760	Spacer	AR	8.5x12xt0.5
1-9	240761	Spacer	AR	8.5x12xt0.3
1-10	240772	Impeller	1	
1-11	240773	Scroll	1	
1-12	027533	O-Ring	1	P42
1-13	240779	Handle	1	
1-14	092519	Bolt	7	M6x16
1-15	240774	Base	1	
1-16	240017	Cushion Rubber	4	
1-17	092513	Bolt	2	M8x16
1-18	240012	Plug	2	M24
1-19	020285	O-Ring	2	P24
1-20	240556	Discharge Port	1	
1-21	014178	O-Ring	1	G35
1-22	240847	Casing	1	
1-23	240554	Check Valve	1	
1-24	240553	Suction Port	1	
1-25	092520	Bolt	4	M6x20
1-26	240776	Label	1	
1-27	120675	Label	1	Warning
1-28	240869	Suction Hose Ass'y	1	Incl.29-33
1-29	240027	Hose	1	25x3m
1-30	240030	Hose Band	3	
1-31	240028	Hose Coupling	2	PF1
1-32	240858	Hose Coupling	2	
1-33	240859	Packing	2	
1-34	240860	Hose Coupling	1	
1-35	240861	Hose Coupling	1	
1-36	240564	Strainer	1	
1-37	210418	Box Spanner	1	13x19x(+)
1-38	022540	Fuel Blending Bottle	1	
1-39	240850	Instruction Manual	1	

**2.MP2532E2  
ENGINE**

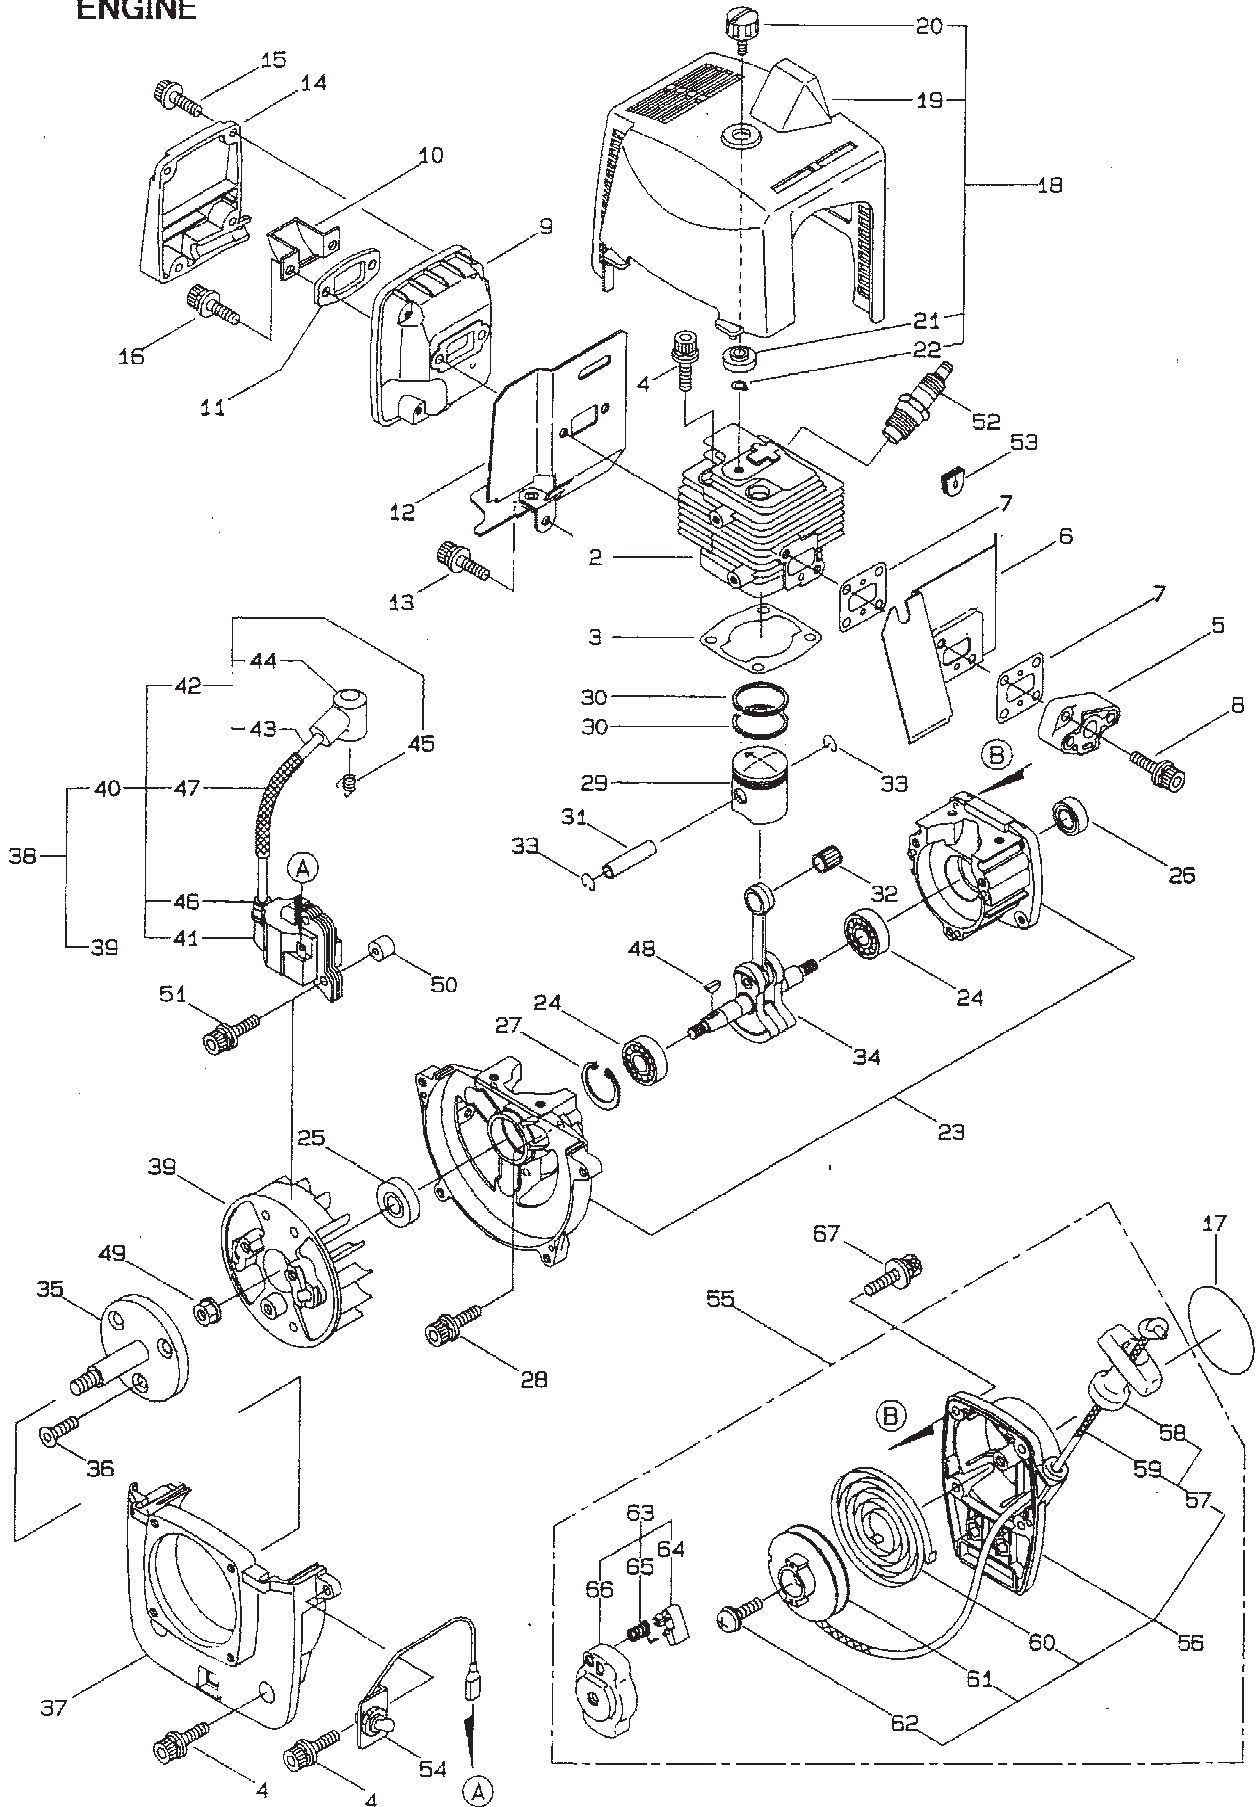


Ref.No.	Part No.	Part Name	Q'ty	Remarks
2-1	850003	Engine	1	AE320/74
2-2	261360	Cylinder	1	New gasket required
2-3	262201	Gasket	1	
2-4	261250	Cap Screw	8	M5x20
2-5	261938	Insulator	1	New gasket required
2-6	261364	Air Duct	1	
2-7	261171	Gasket	2	
2-8	265924	Cap Screw	2	M5x25
2-9	261825	Muffler Body	1	New muffler cover required
2-10	261368	Deflector	1	
2-11	261986	Deflector Plate	1	
2-12	261833	Gasket	1	
2-13	261607	Cap Screw	1	M5x16
2-14	261372	Muffler Cover	1	New muffler body required
2-15	261250	Cap Screw	4	M5x20
2-16	261246	Cap Screw	2	M5x25
2-17	264525	Label	1	MARUYAMA
2-18	265304	Top Cover Ass'y	1	Incl.19-22
2-19	265305	Top Cover	1	
2-20	261018	Knob	1	
2-21	261020	Spacer	1	
2-22	261734	Snap Ring	1	#5
2-23	261379	Crankcase	1	
2-24	261384	Bearing	2	#6201C3
2-25	261385	Oil Seal	1	ISCD12327
2-26	261386	Oil Seal	1	ISCD12227
2-27	016732	Snap Ring	1	#32
2-28	261612	Cap Screw	3	M5x30
2-29	266980	Piston	1	
2-30	261390	Piston Ring	2	(2)Required
2-31	261555	Piston Pin	1	7x10x31.5L
2-32	261392	Bearing,Needle	1	KBK10x14x12.5x1
2-33	261393	Clip,Piston Pin	2	
2-34	261395	Crankshaft/Conn.Rod Ass'y	1	
2-35	265311	Shaft	1	
2-36	265312	Screw	3	M6x15
2-37	264104	Fan Cover	1	
2-38	267399	Magneto Ass'y	1	Incl.39-47
2-39	265307	Rotor/Fan	1	
2-40	267173	Ignition Coil Ass'y	1	Incl.41-47
2-41	267174	Coil	1	
2-42	267403	Spark Plug Wire Ass'y	1	Incl.43-45
2-43	267404	Spark Plug Wire	1	
2-44	261074	Plug Boot	1	
2-45	261075	Connector	1	

2.MP2532E2  
ENGINE

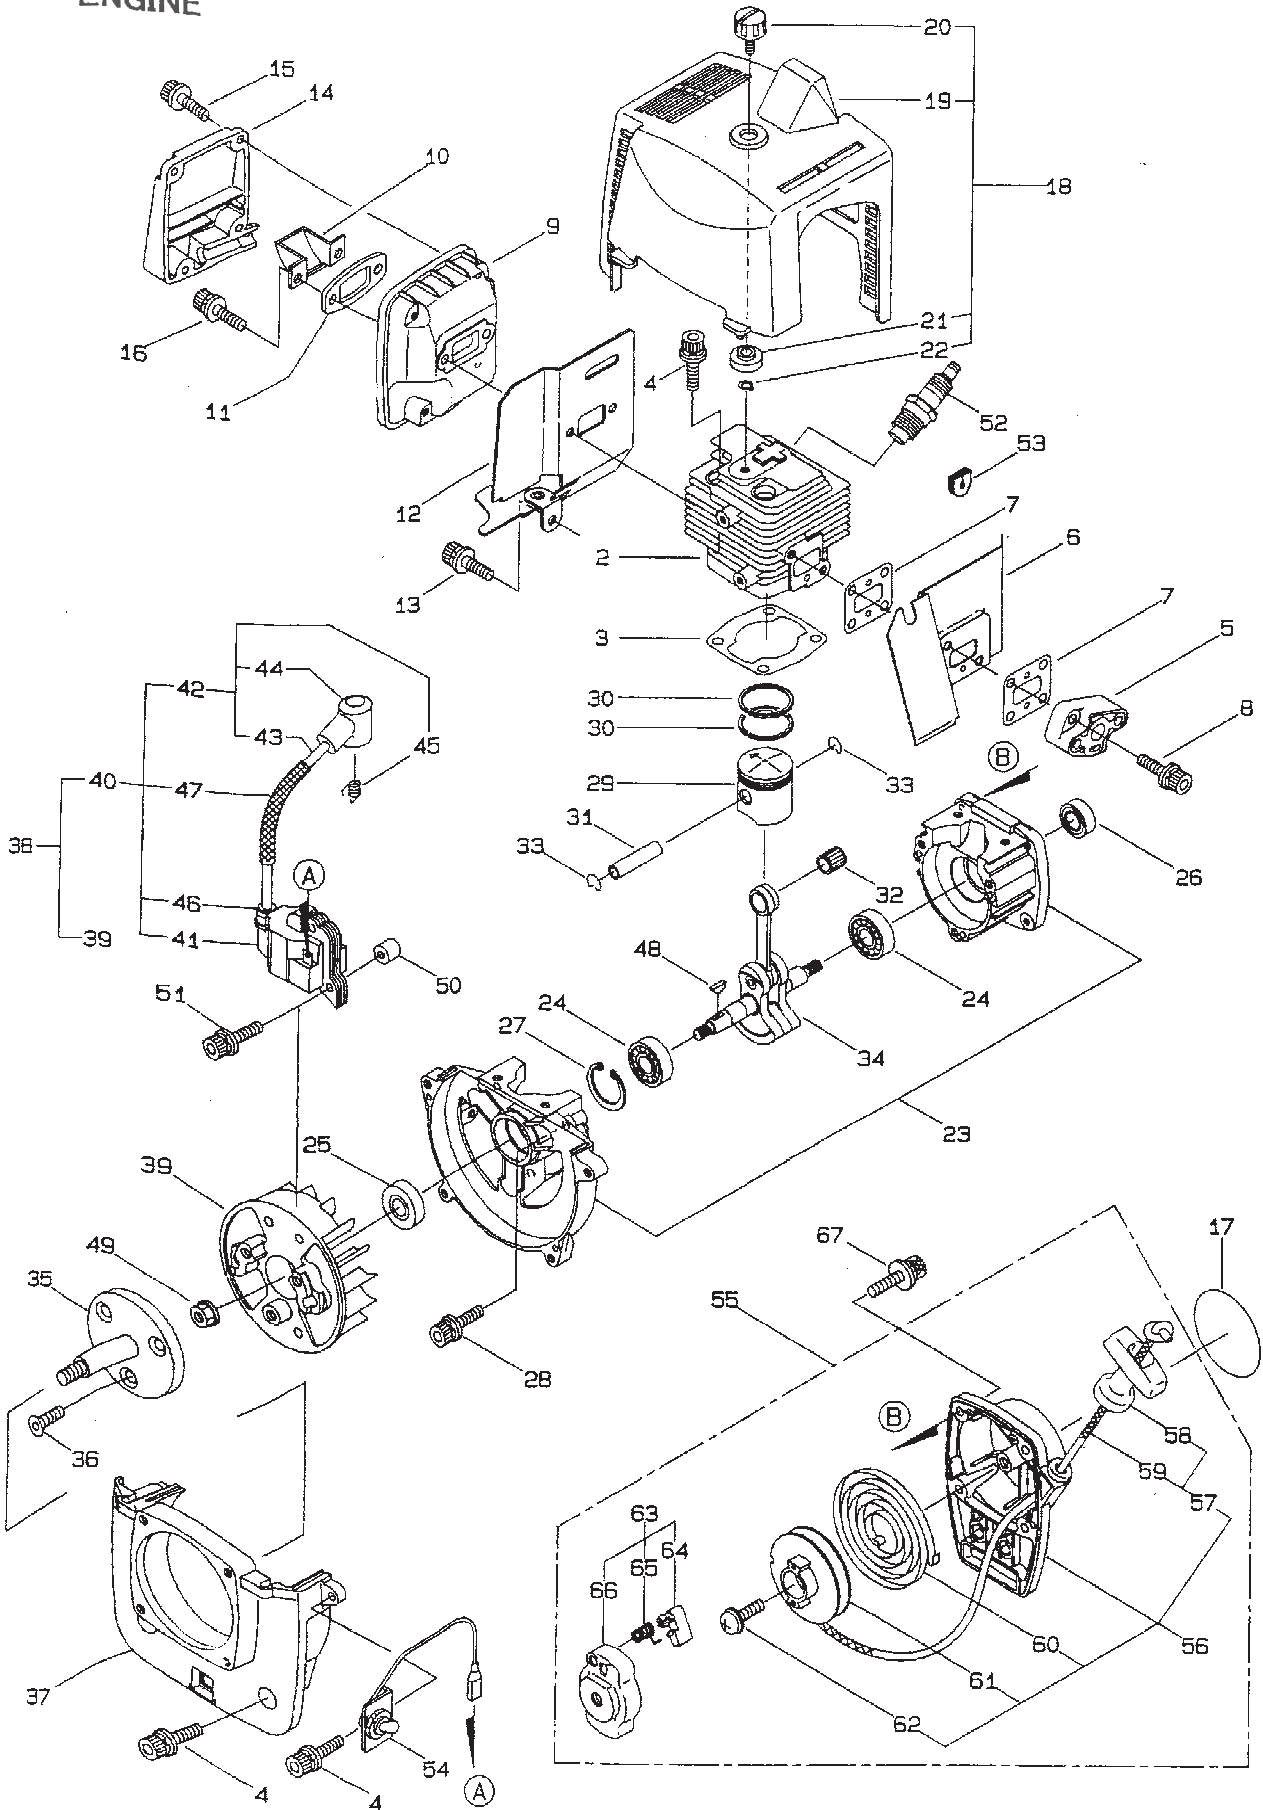

Ref.No.	Part No.	Part Name	Q'ty	Remarks
2-46	261072	Cap	1	
2-47	267402	Insulator	1	
2-48	261076	Woodruff Key	1	3x10
2-49	261417	Nut,Rotor	1	M8
2-50	261078	Spacer	2	
2-51	261256	Cap Screw	2	M4x25
2-52	261200	Spark Plug	1	NGK BPM6Y
2-53	261202	Grommet	1	
2-54	264846	Switch Ass'y	1	
2-55	261419	Recoil Starter Ass'y	1	Incl.56-66
2-56	261420	Recoil Ass'y	1	Incl.57-62
2-57	261723	Rope Ass'y	1	Incl.58,59
2-58	261725	Starter Grip	1	
2-59	261724	Starter Rope	1	3x890L
2-60	261721	Spiral Spring	1	
2-61	261720	Pulley	1	
2-62	262922	Screw	1	
2-63	263475	Starter Pawl Ass'y	1	Incl.64-66
2-64	263477	Pawl	1	
2-65	261728	Return Spring	1	
2-66	263476	Pawl Case	1	
2-67	261257	Cap Screw	4	M4x16

**3.MP2532E2**  
**CARBURETOR, FUEL TANK**

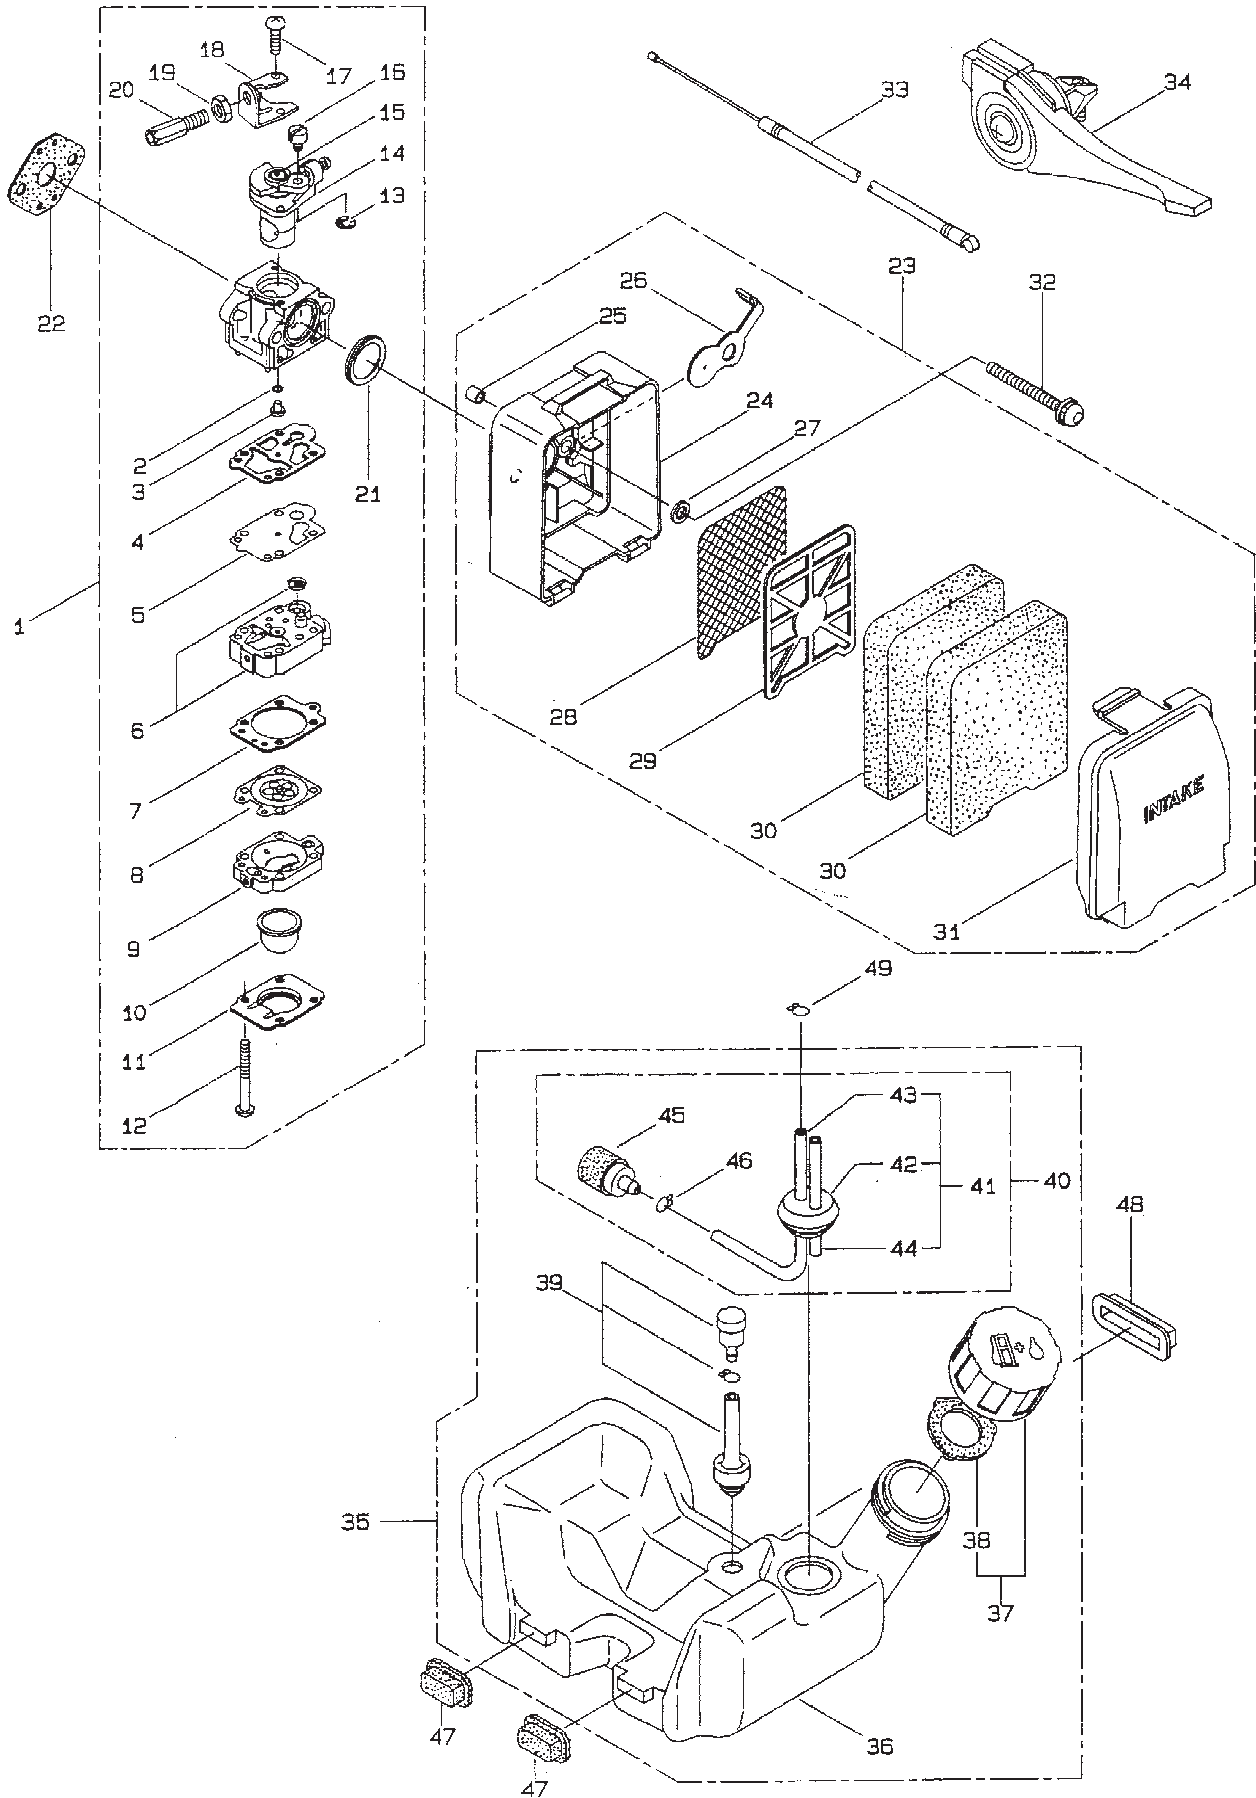

Ref.No.	Part No.	Part Name	Q'ty	Remarks
3-1	265313	Carburetor Ass'y	1	Incl.2-21 New gasket required
3-2	261871	O-Ring	1	
3-3	262123	Main Jet	1	#44
3-4	262995	Gasket	1	
3-5	262994	Diaphragm,Fuel Pump	1	
3-6	263739	Pump Body	1	
3-7	262993	Gasket	1	
3-8	261873	Diaphragm,Metering	1	
3-9	262991	Purge Body	1	
3-10	261874	Primer Bulb	1	
3-11	262992	Cover Plate	1	
3-12	262996	Screw	4	
3-13	261876	E-Ring	1	
3-14	265448	Throttle Valve Ass'y	1	
3-15	261652	Plug	1	
3-16	261658	Swivel	1	
3-17	261875	Screw	2	
3-18	263250	Bracket	1	
3-19	261878	Nut	1	
3-20	261877	Adapter	1	
3-21	261657	Packing	1	
3-22	261864	Gasket	1	
3-23	265315	Air Filter Ass'y	1	Incl.24-30
3-24	263723	Housing	1	
3-25	263715	Sleeve	2	
3-26	263007	Choke Valve	1	
3-27	263000	Washer	1	
3-28	265314	Screen	1	
3-29	263717	Screen	1	
3-30	263714	Foam Element	2	
3-31	263713	Air Filter Cover	1	
3-32	262720	Cap Screw	2	M5x55
3-33	265316	Cable Comp	1	
3-34	264876	Throttle Trigger	1	
3-35	264749	Fuel Tank Ass'y	1	Incl.36-46
3-36	264752	Fuel Tank	1	
3-37	261584	Fuel Tank Cap Ass'y	1	Incl.38
3-38	261105	Gasket	1	
3-39	261696	Breather Ass'y	1	
3-40	265752	Fuel Pipe Pick-up Ass'y	1	Incl.41-46
3-41	264031	Fuel Pipe Ass'y	1	Incl.42-44
3-42	261115	Grommet	1	
3-43	261690	Fuel Pipe	1	140L
3-44	263038	Return Pipe	1	3x6x85L
3-45	264653	Filter Ass'y	1	
3-46	261117	Clip	1	
3-47	261118	Pad	2	
3-48	261119	Pad	1	
3-49	261117	Clip	1	